HONDA
POWER PRODUCTS

GENERAL PURPOSE ENGINE

GX390T1

PARTS CATALOGUE
2

13Z1C402





GX390T1

(PX TYPE)

(QBH TYPE)

Instruction for use of parts catalogue

- **This parts catalogue was prepared based on the latest information available as of November 20, 2008.**
  - See the parts catalogue news for any revision that is made after November 20, 2008.
- **Always specify the part number when ordering a part.**
  - Check the model, type, serial numbers, color, maker, and the size as needed before ordering a part.
  - Note that the illustrations (part drawings) can differ from the actual parts in shape.
    They are given just to help you to refer to the parts.
- **When modifications or additions to this parts catalogue are made, a revised edition will be issued at an appropriate time, with successively progressing revision numbers on the cover. We recommend obtaining such revisions in order to keep your parts catalogue up-to-date at all times. To check whether a parts catalogue revision has been issued, please contact your Honda distributor.**

Initial version issue date November 10, 2003
Honda Motor Co., Ltd.


CONTENTS

1

1

How to refer to the part information

Ⓐ Reference with “Illustrated index”

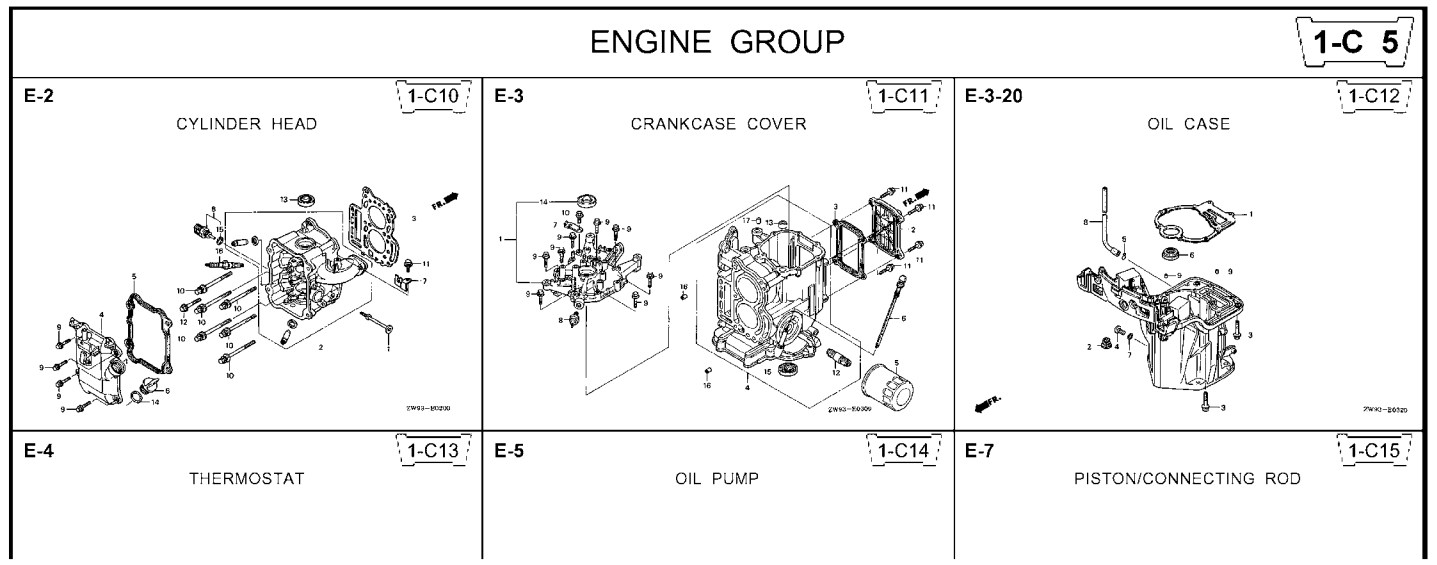

Ⓑ Reference with “Part number index”

PART NO. INDEX

Part Number	Address	Page	Ref.	Part Number	Address	Page
06000				15212-ZW9-000	1-C14	30
				15220-ZW9-003	1-C14	30
06316-ZW9-000	1-G9	88	1	15332-ZW9-000	1-E8	55
				15332-ZW9-A30	1-E11	58
11000				15400-PFB-004	1-C11	27
				15422-ZW9-000	1-C14	30
11300-ZW9-405	1-C11	27	1	15473-881-000	1-C14	30
11300-ZW9-406	1-C11	27	1	15474-ZW9-000	1-C14	30
11340-ZW9-000	1-C11	27	2	15611-921-000	1-C10	26
11342-ZW9-000	1-C11	27	3	15655-ZW9-000	1-C11	27
11381-ZW9-003	1-C12	28	1			
				16000		
12000						
				16010-ZV4-005	1-D4	36
12000-ZW9-405ZA	1-C11	27	4	16011-ZV4-005	1-D4	36
12155-ZV4-A00	1-C13	29	1	16013-ZW9-003	1-D4	36
12166-ZW9-000	1-C10	26	1	16016-ZW9-003	1-D4	36
12209-GB4-681	1-C16	32	1	16016-ZW9-721	1-D4	36
12210-ZW9-405ZA	1-C10	26	2	16023-ZW9-003	1-D4	36
12216-ZE2-300	1-E8	55	1	16024-ZV4-650	1-D4	36
	1-E11	58	1	16028-ZV4-650	1-D4	36

Ⓒ Reference with “Part name index”


PART NAME INDEX

Part name	Address	Page	Ref.	
[A]				BOLT ,
ABSORBER ,FUEL················	1-E15	62	5	
ARMATURE COMP.················	1-D11	43	7	BOLT ,
ARM COMP. ,LINK JOINT········	1-G6	85	18	BOLT ,
ARM COMP. ,SHIFT LINK········	1-G6	85	14	BOLT ,
ARM COMP. ,TILT··············	1-F15	79	20	
ARM ,FUEL PUMP ROCKER········	1-C16	32	4	
ARM ,REVERSE LOCK············	1-F15	79	18	
ARM ,SHIFT LINK··············	1-F11	74	7	
ARM ,STOPPER·················	1-D1	33	12	BOLT ,
ARM ,THROTTLE REMOTE·········	1-F11	74	6	
ARM ,VALVE ROCKER············	1-C16	32	3	
[B]				
BAG ,TOOL ,160MM·············	1-G5	84	10	
BAND·························	1-G6	86	37	
BAND B1,WIRE·················	1-F6	69	1	
BAND ,CORD···················	1-F3	67	18	BOLT ,
BAND ,TUBE CLIP ,11MM········	1-E15	63	20	
BAND ,TUBE CLIP ,12.5MM······	1-E15	63	19	BOLT ,

Address No.

E-2 CYLINDER HEAD 1-C10

Block No.

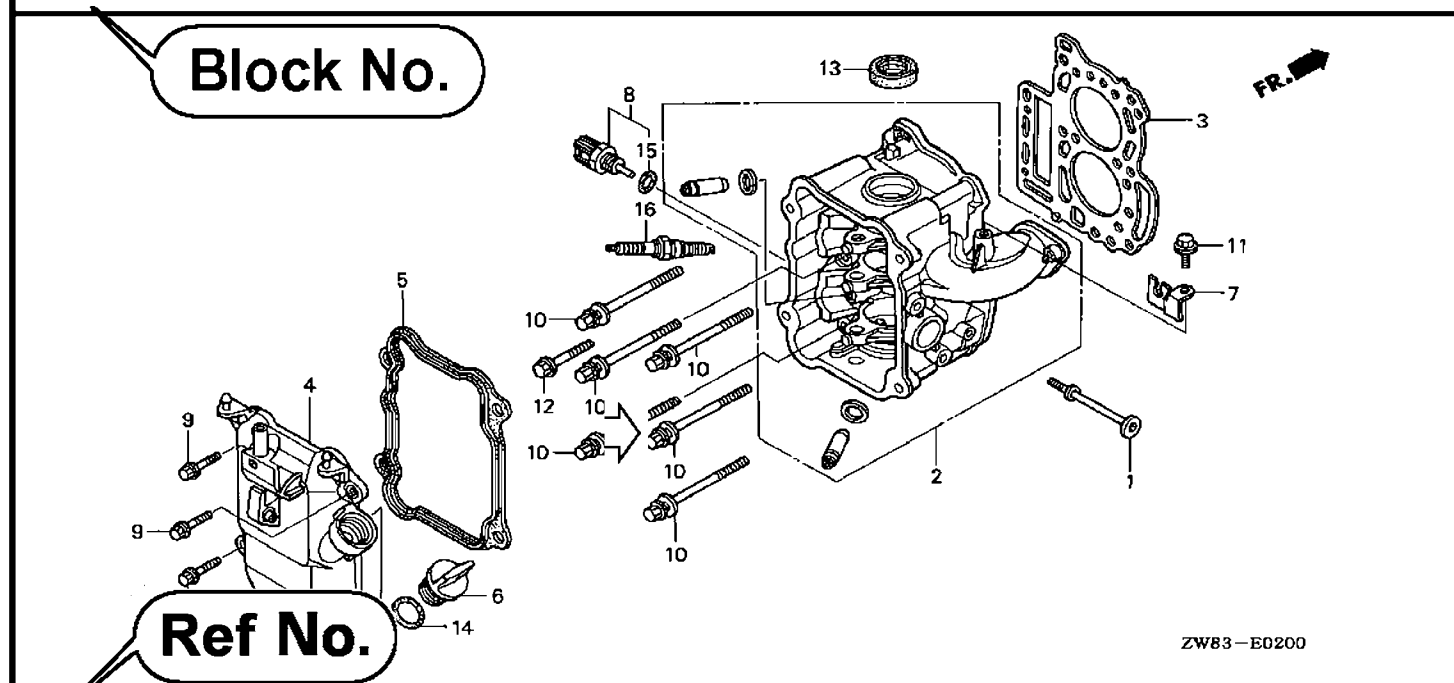

Ref No.

Service item	F.R.T.
O-RING, 26X2.7 ················	0.1
.PLUG, SPARK	
O-RING, 9.5X1.5 ···············	0.2
.SENSOR ASSY., WATER TEMPERATURE	
COVER COMP., HEAD ·············	0.3
.PACKING, HEAD COVER	
GASKET, CYLINDER HEAD ·········	1.8
OIL SEAL, 20X32X6 ·············	2.4
HEAD COMP., CYLINDER ··········	3.1


Ref. No.	Part No.	Description	Reqd. QTY BF 9.9D1	BFP 9.9D1	BF 10D1	BFP 10D1	BF 10B1	BFP 10B1	Serial No.	Parts catalogue code
1	12166-ZW9-000	STOPPER, ENGINE SIDE ········	2	2	2	2	2	2		
2	12210-ZW9-000ZA	HEAD COMP., CYLINDER *NH8*················DARK GRAY	1	1	1	1	1	1		
3	12251-ZW9-003	GASKET, CYLINDER HEAD ·······	1	1	1	1	1	1		
4	12310-ZW9-000	COVER COMP., HEAD ···········	1	1	1	1	1	1		
5	12312-ZW9-000	PACKING, HEAD COVER ·········	1	1	1	1	1	1		
6	15611-921-000	CAP, OIL ···················· (NO GAUGE)	1	1	1	1	1	1		
7	16617-ZW9-000	HOLDER, CABLE ···············	1	1	1	1	1	1	-------- -------- SC,SG	
	16617-ZW9-010	····························	1	1	1	1	1	1	-------- 1001800 LHC,LHD	
			1	1	1	1	1	1	1001801 -------- LHC,LHD	
8	35673-ZW5-003	SENSOR ASSY., WATER TEMPERATURE	1	1	1	1	1	1		
9	90003-ZW9-000	BOLT, FLANGE, 6X22 ··········	4	4	4	4	4	4		
10	90007-ZW9-003	BOLT, FLANGE, 8X83 ··········	6	6	6	6	6	6		
11	90011-ZW9-000	BOLT, FLANGE, 6X14(CT200) ···	1	1	1	1	1	1		
12	90020-ZW9-000	BOLT, FLANGE, 8X40 ··········	2	2	2	2	2	2		
13	91202-KJ9-003	OIL SEAL, 20X32X6 ···········	1	1	1	1	1	1		
14	91301-805-000	O-RING, 26X2.7 ··············	1	1	1	1	1	1		
15	91307-PK2-005	O-RING, 9.5X1.5(HONDA KIKAKI)	1	1	1	1	1	1		
16	98059-55916	PLUG, SPARK (CR5EH-9) ·······	2	2	2	2	2	2		
	98059-55926	PLUG, SPARK (U16FER9) ·······	2	2	2	2	2	2		

44

2000.09.20 E

Page No.

Part catalogue structure

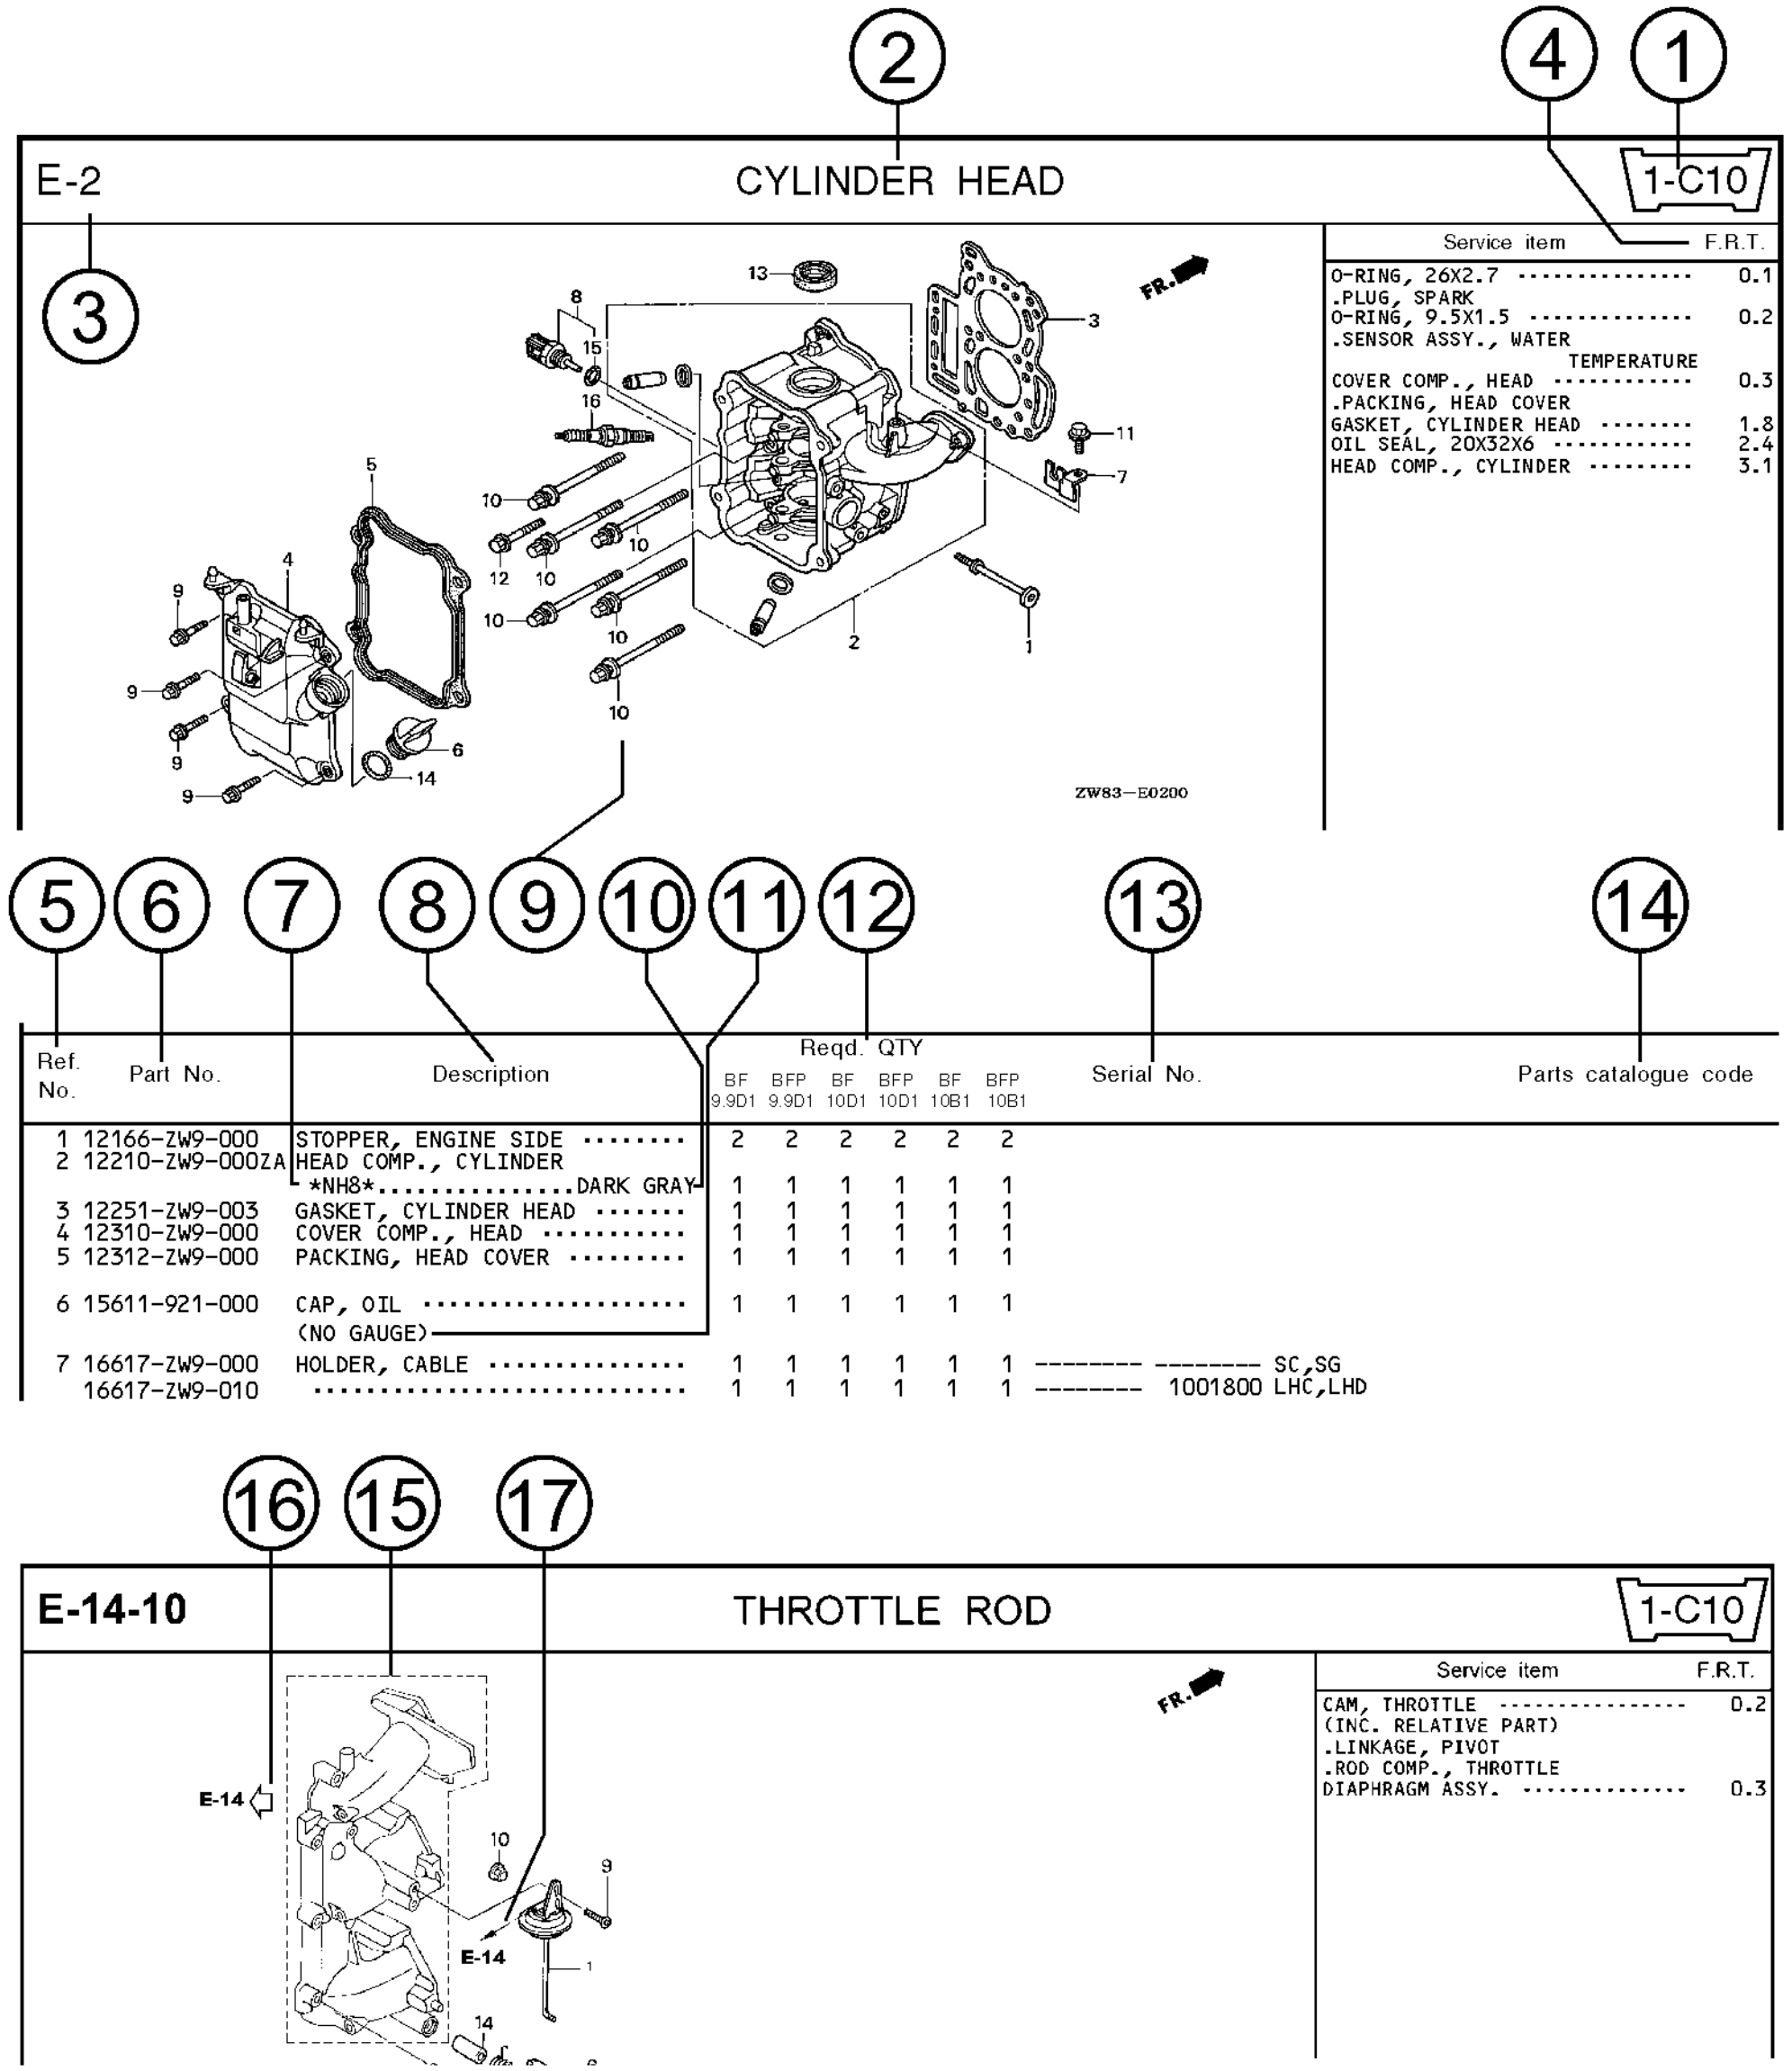

① Address number
- Address No. is provided (in place of the page No.) to help you refer to the part with the part No. or part name.

② Block title ③ Block number

④ Service item/Flat rate time

⑤ Reference number
- Title number marked with the parenthesis or parentheses indicates that it continues from the previous page.

⑥ Part number ⑦ Honda color code

⑧ Description

⑨ Assemblies
- Sections framed with broken lines in the exploded view drawings are available as complete assemblies. (Their individual parts can also be obtained.)

⑩ Color description

⑪ Note
- Notes are shown with the parentheses in the part name column.

⑫ Required quantity
- Required QTY shown in the parenthesis or parentheses indicates the optional part.
- Required QTY marked with “N” Indicates the optional part that should be selected as needed.
- Required QTY indicates the number of the part used in the block.

⑬ Serial number

⑭ Type
- When the type column is blank, it indicates that the part is applicable to all types.
- As the type of the actual unit may differ from the “parts catalogue, type” please refer to “Models, types and applicable serial numbers” for confirmation.

⑮ [dotted box]
- Parts enclosed within a dotted line [dotted box] are covered in a different block.


⑯ ⇦
- A hollow arrow ⇦ indicates the block No. for the parts enclosed within a dotted line [dotted box] .

⑰ ◀━━
- A solid arrow ◀━━ indicates the block No. the part in question is connected to.

1

When the parts were revised



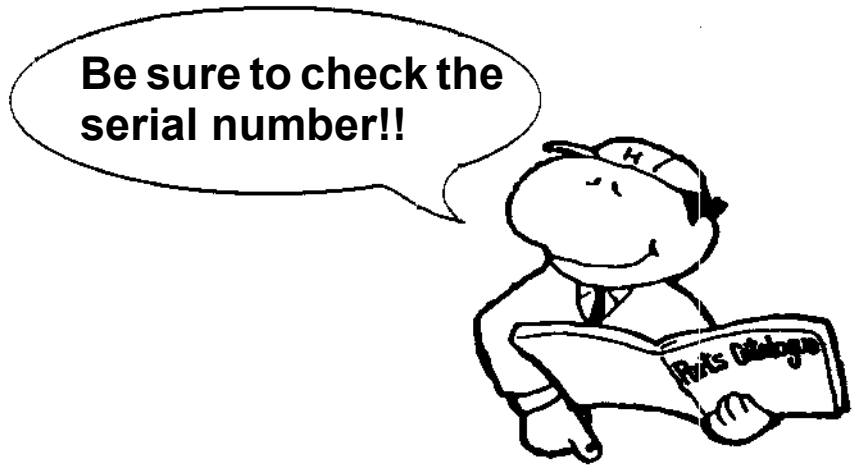

Ref. No.	Part No.	Description	Reqd. QTY BF 9.9D1	BFP 9.9D1	BF 10D1	BFP 10D1	BF 10B1	BFP 10B1	Serial No.
1	12166-ZW9-000	STOPPER, ENGINE SIDE ········	2	2	2	2	2	2	
2	12210-ZW9-000ZA	HEAD COMP., CYLINDER							
		NH8................DARK GRAY	1	1	1	1	1	1	
3	12251-ZW9-003	GASKET, CYLINDER HEAD ·······	1	1	1	1	1	1	
4	12310-ZW9-000	COVER COMP., HEAD ···········	1	1	1	1	1	1	
5	12312-ZW9-000	PACKING, HEAD COVER ·········	1	1	1	1	1	1	
6	15611-921-000	CAP, OIL ····················	1	1	1	1	1	1	
		(NO GAUGE)							
7	16617-ZW9-000	HOLDER, CABLE (###)·········	1	1	1	1	1	1	-------- -------- SC,SG
	16617-ZW9-010	····························	1	1	1	1	1	1	-------- 1001800 LHC,LHD
			1	1	1	1	1	1	1001801 -------- LHC,LHD

- The number has been used from the initial model without revision.
- When shown at the left side, it is applicable to the models of No.1001801 and the subsequent numbers.
- When shown at the right side, it is applicable to the models up to No.1001800.

• The parts listed with "###" at the end of the parts name have limited supply period (parts not for sale).


Abbreviations used in the parts catalogue

- **The following abbreviations are used in the parts name column.**


A .... Ampere
A.C. .... Alternating current
ASSY. .... Assembly
AT. .... Automatic transmission
C.D.I. ..... Capacitive discharge ignition
COMP. ... Complete
D.C. .... Direct current
EX. .... Exhaust
G.F.C.I ... Ground fault circuit interruptor
HEX. ..... Hexagonal
H.S.T. .... Hydrostatic transmission
FR. ....Front
IN. ....Inlet
L (100L) .Link (100 Links)
L. ....Left
MM ....Millimeter
MT. ....Manual Transmission
P.T.O. .....Power take off
R. ....Right
RR. ....Rear
STD. ....Standard
T (22T) ...Tooth (22 Teeth)
V ....Volt
W ....Watt

How to check the part block and serial numbers

Part block	Engine parts E-2~	Carburetor parts E-14~
Numbers needed	Stamped engine number	Stamped carburetor identification number
Check point	①	②

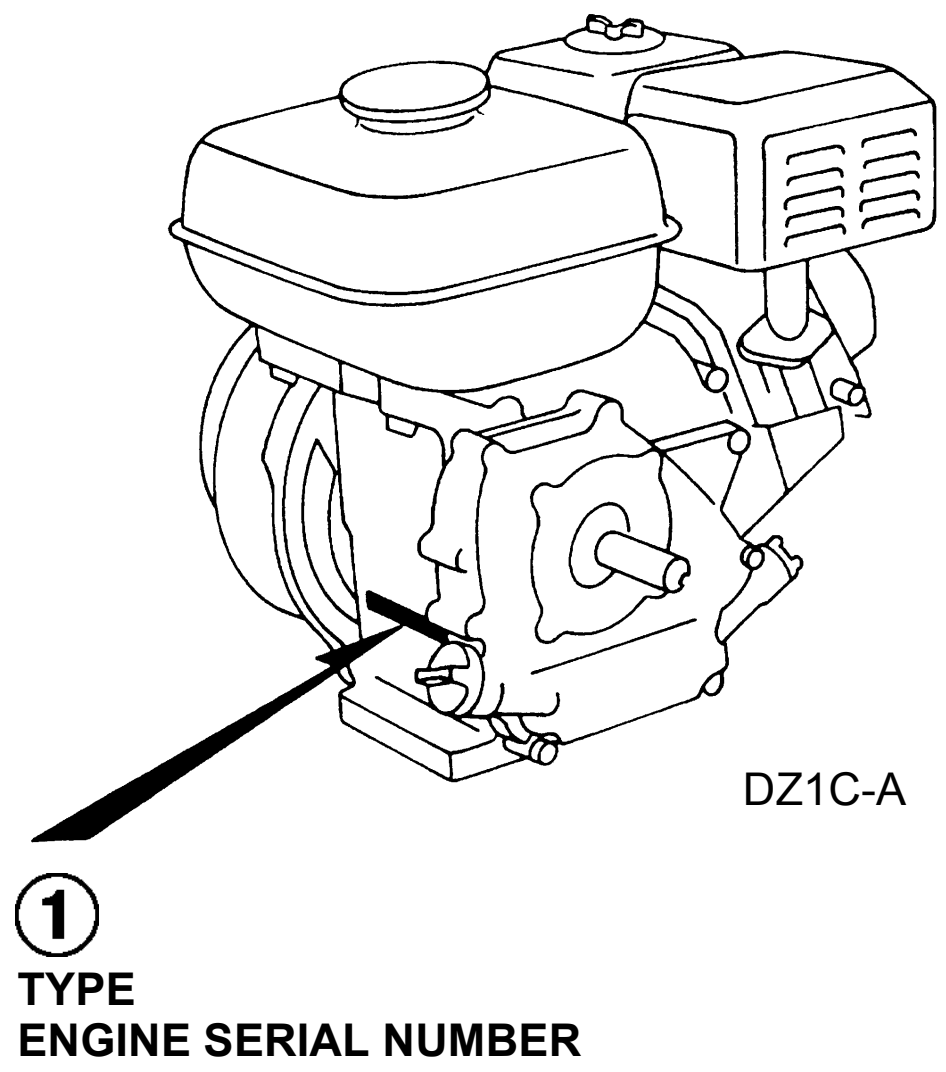

DZ1C-A

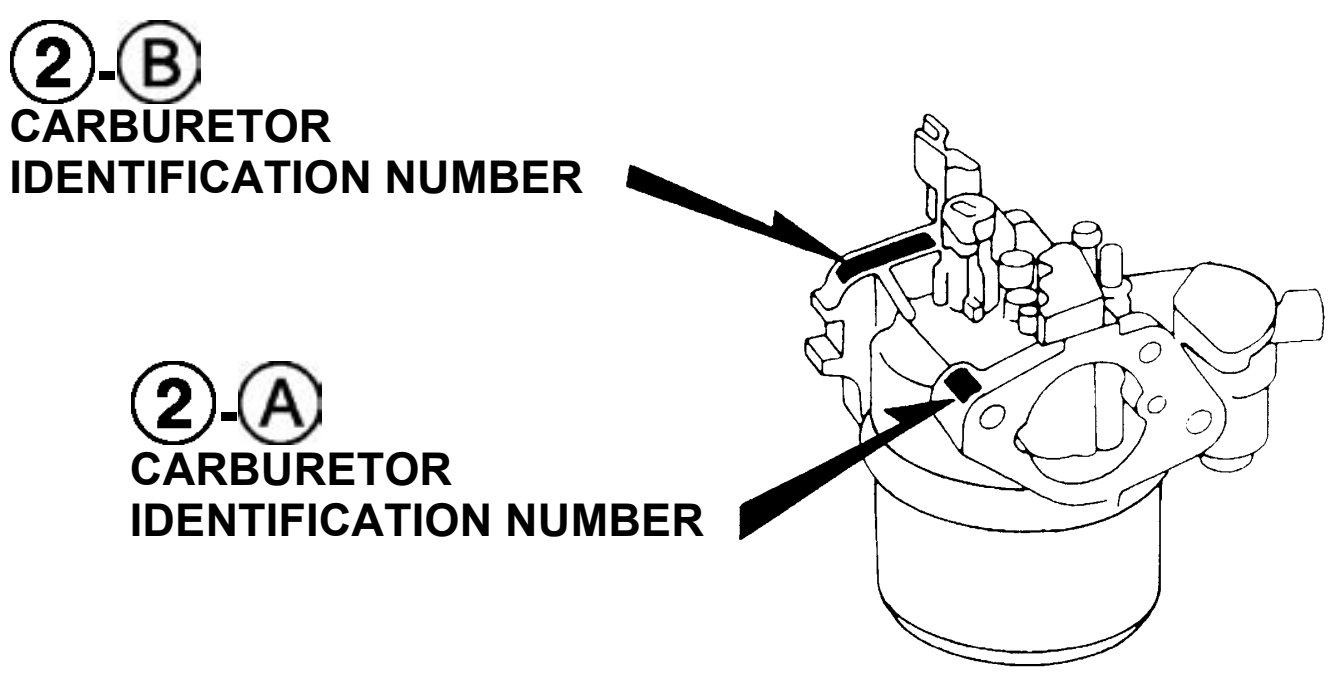

DZ1C-B

Models, parts catalogue codes and applicable serial numbers

- **Models, parts catalogue codes and applicable serial Nos. given in this parts catalogue can be identified as follows.**

Model	Type	Parts catalogue type	Applicable engine serialNo.	Applicable carburetor identification No.
GX390T1	LBHB	LBHB	GCBBT-1000001~	BE85W A
	LH	LH	GCAET-1000001~	BE85K A
	LHB5	LHB5		
	LHP1	LHP1		
	LH2	LH2		
	LP	LP		BE85P A
	LT	LT		BE85N A
	LXE8	LXE8	GCAET-1000001~ 9999999	BE85K A
	LXE9	LXE9	GCAET-1000001~	
	LXU	LXU	GCAET-1000001~ 9999999	
	PX	PX	GCAET-1000001~	
	PXE8	PXE8	GCAET-1000001~ 9999999	

Model	Type	Parts catalogue type	Applicable engine serialNo.	Applicable carburetor identification No.
GX390T1	PXU	PXU	GCAET-1000001~ 9999999	BE85K A
	QAA2	QAA2		BE85Q A
	QAA6	QAA6		
	QA2	QA2		
	QA26	QA26		
	QBH	QBH	GCBBT-1000001~	BE85W A
	QBHS	QBHS		
	QBLS	QBLS	GCAET-1000001~	BE85Y A
	QBS	QBS		
	QH	QH		BE85K A
	QHB3	QHB3		
	QHB5	QHB5		

Model	Type	Parts catalogue type	Applicable engine serialNo.	Applicable carburetor identification No.
GX390T1	QHP1	QHP1	GCAET-1000001~	BE85K A
	QMH	QMH		
	QN	QN		BE85N A
	QP	QP		
	QT	QT		
	QTD	QTD		
	QX	QX		BE85K A
	QXE	QXE		
	QXEK	QXEK		
	QXE8	QXE8	GCAET-1000001~ 9999999	
	QXK	QXK	GCAET-1000001~	
	QXQ4	QXQ4	GCAET-1000001~ 9999999	BE85Q A

Model	Type	Parts catalogue type	Applicable engine serialNo.	Applicable carburetor identification No.
GX390T1	QXU	QXU	GCAET-1000001~ 9999999	BE85K A
	SH	SH	GCAET-1000001~	
	SHE	SHE		
	SN	SN		BE86N A
	SWE	SWE		BE85N A
	SWE2	SWE2		
	SWX	SWX		
	SWX2	SWX2		
	SX	SX		BE85K A
	SXC	SXC		
	SXE	SXE		
	SXE8	SXE8	GCAET-1000001~ 9999999	

<table>
<tr><th>Model</th><th>Type</th><th>Parts catalogue type</th><th>Applicable engine serialNo.</th><th>Applicable carburetor identification No.</th></tr>
<tr><td rowspan="9">GX390T1</td><td>SXQ4</td><td>SXQ4</td><td>GCAET-1000001~9999999</td><td>BE85Q A</td></tr>
<tr><td>VSP</td><td>VSP</td><td rowspan="4">GCAET-1000001~</td><td>BE85L A</td></tr>
<tr><td>VTE5</td><td>VTE5</td><td>BE85N A</td></tr>
<tr><td>VX</td><td>VX</td><td rowspan="6">BE85M A</td></tr>
<tr><td>VXE</td><td>VXE</td></tr>
<tr><td>VXE8</td><td>VXE8</td><td>GCAET-1000001~9999999</td></tr>
<tr><td>VXK</td><td>VXK</td><td rowspan="2">GCAET-1000001~</td></tr>
<tr><td>VXU1</td><td>VXU1</td></tr>
<tr><td>VX8</td><td>VX8</td><td>GCAET-1000001~9999999</td></tr>
</table>

* Of carburetor identification numbers, only the portions underlined in the example below are used for registration.

BE 85W A KC ナ
Ⓐ Ⓑ

Features of each type

- **See the following table for the features of each type. (Items in brackets are optional)**

Specifications		Model: GX390T1 / Type: LBHB	LH	LHB5	LHP1	LH2	LP	LT	LXE8	LXE9	LXU
Crankshaft	30mmØ Spline	●	●	●	●	●	●	●	●	●	●
	25.4mmØ Spline										
	25.4mmØ Straight										
	25mmØ Straight										
	5/16" Tapered										
Air cleaner	Silent		●	●	●	●			●	●	●
	Oil bath							●			
	Boat	●									
Muffler		●	●	●	●	●		●	●	●	●
Muffler cover											
Spark arrester										(●)	(●)
Fuel tank		●	●	●	●	●	●	●	●	●	●
Oil alert									●	●	●
Starter motor									●	●	
Control box									●	●	
Reduction		●	●	●	●	●	●	●	●	●	●

Specifications	Model / Type	GX390T1									
		PX	PXE8	PXU	QAA2	QAA6	QA2	QA26	QBH	QBHS	QBLS
Crankshaft	30mmØ Spline										
	25.4mmØ Spline	●	●	●							
	25.4mmØ Straight				●	●	●	●	●	●	●
	25mmØ Straight										
	5/16" Tapered										
Air cleaner	Silent	●	●	●	●	●	●	●			
	Oil bath										
	Boat								●	●	●
Muffler		●	●	●	●	●	●	●	●	●	●
Muffler cover											
Spark arrester							●	●			
Fuel tank		●	●	●	●	●	●	●	●	●	●
Oil alert		●	●	●	●	●	●	●			●
Starter motor			●								
Control box			●								
Reduction											

Specifications		Model: GX390T1									
	Type	QBS	QH	QHB3	QHB5	QHP1	QMH	QN	QP	QT	QTD
Crankshaft	30mmØ Spline										
	25.4mmØ Spline										
	25.4mmØ Straight	●	●	●	●	●	●	●	●	●	●
	25mmØ Straight										
	5/16" Tapered										
Air cleaner	Silent		●	●	●	●	●	●			
	Oil bath								●	●	●
	Boat	●									
Muffler		●	●	●	●	●	●	●	●	●	
Muffler cover											
Spark arrester											
Fuel tank		●	●	●	●	●	●	●	●	●	●
Oil alert		●									
Starter motor											
Control box											
Reduction											

Specifications \ Model / Type		GX390T1									
		QX	QXE	QXEK	QXE8	QXK	QXQ4	QXU	SH	SHE	SN
Crankshaft	30mmØ Spline										
	25.4mmØ Spline										
	25.4mmØ Straight	●	●	●	●	●	●	●			
	25mmØ Straight								●	●	●
	5/16" Tapered										
Air cleaner	Silent	●	●	●	●	●	●	●	●	●	●
	Oil bath										
	Boat										
Muffler		●	●	●	●	●	●	●	●	●	●
Muffler cover							(●)				
Spark arrester											
Fuel tank		●	●	●	●	●	●	●	●	●	●
Oil alert		●	●	●	●	●	●	●			
Starter motor			●	●	●					●	
Control box			●	●	●					●	
Reduction											

Specifications \ Model / Type		GX390T1									
		SWE	SWE2	SWX	SWX2	SX	SXC	SXE	SXE8	SXQ4	VSP
Crankshaft	30mmØ Spline										
	25.4mmØ Spline										
	25.4mmØ Straight										
	25mmØ Straight	●	●	●	●	●	●	●	●	●	
	5/16" Tapered										●
Air cleaner	Silent					●	●	●	●	●	●
	Oil bath	●	●	●	●						
	Boat										
Muffler		●	●	●	●	●	●	●	●	●	●
Muffler cover										(●)	
Spark arrester											
Fuel tank		●	●	●	●	●	●	●	●	●	●
Oil alert				●	●	●	●	●	●	●	●
Starter motor		●	●					●	●		
Control box		●	●					●	●		
Reduction											

Specifications \ Model / Type		GX390T1						
		VTE5	VX	VXE	VXE8	VXK	VXU1	VX8
Crankshaft	30mmØ Spline							
	25.4mmØ Spline							
	25.4mmØ Straight							
	25mmØ Straight							
	5/16" Tapered	●	●	●	●	●	●	●
Air cleaner	Silent	●	●	●	●	●	●	●
	Oil bath							
	Boat							
Muffler		●	●	●	●	●	●	●
Muffler cover								
Spark arrester								
Fuel tank			●	●	●	●	●	●
Oil alert		●	●	●	●	●	●	●
Starter motor		●		●	●	●	●	
Control box		●		●	●	●	●	
Reduction								

Fuel hose, general purpose hoses and vinyl hose

- The standard part fuel hose, general purpose hose and vinyl hose may be substituted by the coiled bulk part.
- When ordering the standard part fuel hose, general purpose hose and vinyl hose use the bulk part number written in the parts catalog in brackets (   ) underneath the part name.
- When exchanging the hose, cut and use at the specified length as mentioned in the part name.
  (For the method of cutting the bulk part, and method of filling out orders etc., please refer to the instructions issued with the bulk part.)

Bulk part number of fuel hose, general purpose hose and vinyl hose.

Example: 9 5 0 0 1 - 7 5 0 0 1 - 5 0 M

Bulk part number: (M)
Refers to the bulk part.

Marking code (fuel hose and general purpose hose) / **Change code (Vinyl hose)** (0)
Indicates number mark or change sequence, however, the code for the bulk part must be strictly 0 (zero).

Types of code: (5)

- Fuel hose
  - 2: Red outside braid (3 mm inside dia. only)
  - 5: Black inside braid
  - 3: Red (3 mm inside dia. only)
  - 4: Ash gray with red stripe (3 mm inside dia. only)
  - 6: Black
- General hose
  - 1: Ash gray
  - 2: Ash gray
  - 3: Black
  - 5: Black
- Vinyl hose
  - 1: Clear
  - 2: Black
  - 3: Light red
  - 6: Light red
  - 7: Pale black

Lengths: (001)

001: 1 m (standard)
003: 3 m } Application or specification of some parts is not settled.
008: 8 m }

I.D code: (fuel hose and general purpose hose) (75)

30: 3.0 mm	50: 5.0 mm	70: 7.0 mm	11: 11 mm	12: 12 (outside dia. 17) mm
35: 3.5 mm	55: 5.3 mm, 5.5 mm	75: 7.3 mm, 7.5 mm	91: 12 (outside dia. 15) mm	14: 14 mm
45: 4.5 mm	65: 6.5 mm	80: 8.0 mm	92: 12 (outside dia. 16) mm	17: 17 mm

ID./OD. code: (vinyl hose)

01: ID. 2.9, OD. 6.8 mm	12: ID. 5.0, OD. 7.0 mm	21: ID. 8.0, OD. 9.0 mm	37: ID. 11.0, OD. 15.0 mm	50: ID. 16.0, OD. 19.0 mm
03: ID. 3.0, OD. 6.0 mm	10: ID. 5.0, OD. 8.0 mm	23: ID. 8.0, OD. 12.0 mm	38: ID. 12.0, OD. 13.0 mm	55: ID. 17.5, OD. 20.5 mm
05: ID. 3.5, OD. 6.5 mm	11: ID. 5.0, OD. 9.0 mm	25: ID. 9.0, OD. 11.0 mm	39: ID. 12.0, OD. 14.0 mm	60: ID. 22.0, OD. 27.0 mm
07: ID. 4.0, OD. 7.0 mm	14: ID. 6.0, OD. 9.0 mm	27: ID. 9.0, OD. 13.0 mm	40: ID. 12.0, OD. 16.0 mm	
08: ID. 4.5, OD. 6.5 mm	17: ID. 7.0, OD. 9.0 mm	33: ID. 10.0, OD. 14.0 mm	43: ID. 13.0, OD. 15.0 mm	
09: ID. 4.5, OD. 8.0 mm	19: ID. 7.0, OD. 11.0 mm	36: ID. 11.0, OD. 13.0 mm	45: ID. 14.0, OD. 18.0 mm	

Hose type: (1)

1: Fuel hose
3: Vinyl hose
5: General hose

◎ **CAUTION: It is DANGEROUS to confuse the fuel hose with the general purpose hose or vinyl hose.**
Never use a general purpose hose or vinyl hose in place of a fuel hose or vice versa. Always use the correct bulk part in the parts catalogue, according to the service manual or the instructions issued with the bulk part.

FLAT RATE SERVICE TIME

Flat rate service time (FRT) means the standard time required to service a product, which is listed in this manual to help the dealers control the actual working process and calculate the service charge by using it as a guide.

FRT setting system

- Net service time
  - Removal, Disassembly/reassembly, Installation
  - Inspection, Measurement, Adjustment, Confirmation
  - Diagnosis/troubleshooting (Electric system)
  - Completion inspection
- Float time
  - Preparation
    (Process check, Confirmation arrangement for necessary tools)
  - Related work (Transfer of products)

* Float time is set by multiplying the net service time by a given coefficient.

Editorial style

The service items shown in the text are listed with the exchange work time for the repair sales parts as the subject. Other representative service items not using repair parts (removal/installation, adjustment, inspection/measuring, and other work) are listed collectively in the list in the preface, classified according to the work.

FRT setting standard

- Decimal system (in unit of 0.1) is adopted to set FRT as it is convenient to calculate the wage.
  Example: (0.1)➔6 minutes, (0.2)➔12 minutes
  [Labor cost per hour] x [FRT] = [Wage]
- FRT is set with a hand tool.
- Service items and FRT can be subject to change depending on development of tools and service equipment and improvement in service procedure.

Work procedure

- As the work procedure is set with the work time according to the method in the separate Service Manual, refer to this Manual as required.
- Work methods permitting servicing in the shortest time still permitting assurance of safe work and product warranty are used for the setting of service items not listed in the Service Manual.
- Work basically is to be performed by one person, and when two or more people are required, setting is done as the total time for the number of people.
- The set value for the technological level of the workers uses a person with three years of experience in the repair of Honda products as the standard.
- Special tools and service equipment used to set FRT are those specified or recommended in Service Manual.

Service item whose FRT is not presented

- Accessories and service parts that are not listed to use in this manual.
- Locations with little aging deterioration or breakage during normal use.
- Service work that can be finished by one touch.
- Service work that is seldom done (i.e. extremely small causes of trouble and service frequency).
- Products and parts whose location for installation differs according to its status of use and application.


* When FRT is not presented, please calculate wages based on appropriate actual work time.

Operation not included of FRT

- Oil and coolant water drainig, Waiting time for warming up operation and etc..
- Additional operation that involves removal/installation of standard exterior equipment.
- Indirect time spent for service by visiting the customer, trade-in, and delivery.
- Indirect time required for ordering and delivery of parts.
- Cost for grease, adhesive agent, etc. used for service work.

1

Explanation of FRT by using an example
(The example may differ from the actual presented items)

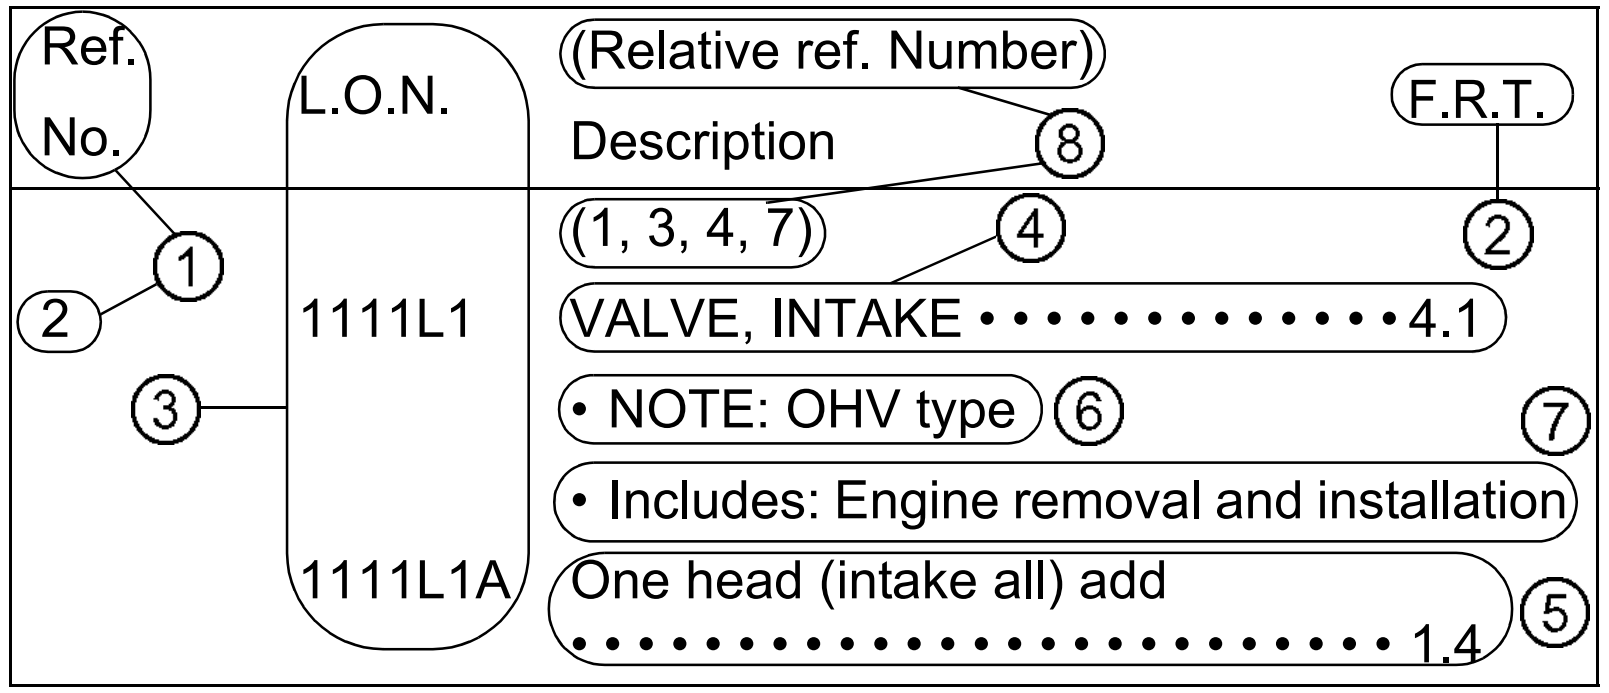

① Reference No. of the illustration of part that shows location of the replacement work.

② FRT is an abbreviation of Flat Rate Time indicating the standard service time required for the replacement.

③ LON is an abbreviation of Labor Operation Number, and it is a classification of the service items by the work unit code.

The same operation code is used regardless of the models.

Standard operation is indicated with 6 digits code, and additional operation is indicated with 7 digits code.

④ Indicating the intake valve replacement and FRT4.1.

⑤ Indicating FRT1.4 that will be added when additional operation (whole intake side of one cylinder head) is done in association with intake valve replacement.

⑥ Indicating work condition or application condition of the service item.

⑦ Indicating work contents that are included in the service item.

⑧ Indicating a reference No. whose operation and time are the same as FRT4.1 for the intake valve.

(The application range is limited to the service items without an LON setting within a same block.)

How to refer to the service item by using the sample
(intake valve replacement)

Open to the page of the block where the intake valve's spare part illustration is shown.

↓

Look for the intake valve illustration, and refer to the service item and FRT that agree with the reference No.

Indication mark for the listing of service items that continues to the following page

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	**1111L1**	**VALVE, INTAKE • • • • • • • • • • • • •**	**4.1**
	•	•	•
	•	•	•
+			

+ — Mark indicated at the last line.

Indication of the block with no setting of FRT

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
	NO INFORMATION •		

- **LON code system**

1 **11** **1** **L1** **A**
a b c d e

- a) Category code..................... Engine
- b) Location/function code........ Engine upper
- c) Operation code..................... Replace
- d) Operation sequence number (Unit code can be shown with alphabet) .... Intake valve (No regular rule of code)
- e) Additional code .... One head (intake all) (No regular rule of code)

1 **11** **1** **L1** **A**
a **c**

a) Category codes and classification

Code	Category
1	Engine
2	Power drive
3	Fuel & Exhaust
4	Frame & Body
5	Steering
6	Electrical
7	Axle & Brake
8	Control system
9	-
0	Attachments

c) Operation codes and classification

Code	Operation category
1	Replace, Removal/Installation, Change
2	Overhaul
3	Adjust, Rotation
4	(Paint-related work: Top-coat)
5	Test, Inspect/diagnose, Measurment
6	(Overhaul-related work: Rebore)
7	(Overhaul-related work: Reseal)
8	(Resurface)
9	(Paint-related work: Refinish)
0	Repair, Cleaning, Air bleeding

Major service items without using spare parts
(1) Removal/Installation, (2) Adjustment,
(3) Inspection/Measurement, (4) Overhaul, (5) Other work

E: Engine, T: Transmission, D: Drive system,
B: Body and related parts

(1) Removal/Installation

Set with the parts configuration in the status of being removed from the product.

	LON	DESCRIPTION	FRT
E	1111L3	**CYLINDER HEAD ASSEMBLY-REMOVAL/INSTALLATION**	0.5

(2) Adjustment

	LON	DESCRIPTION	FRT
E	1113A1	**VALVE CLEARANCE-ADJUSTMENT** NOTE: For 1 product	0.3
	1163A0	**CONTROL, THROTTLE/GOVERNOR-ADJUSTMENT**	0.2
	3113A2	**CARBURETOR IDLE-ADJUSTMENT**	0.2

(3) Inspection, Measurement, Cleaning

	LON	DESCRIPTION	FRT
E	1105A0	**ENGINE OIL-INSPECTION**	0.1
	3120A0	**AIR CLEANER-CLEANING** INCLUDES: Air cleaner-inspection	0.2
	3130A0	**SPARK ARRESTER-CLEANING** INCLUDES: Spark arrester-inspection	0.2
	6140A0	**SPARK PLUG-ADJUSTMENT/CLEANING** INCLUDES: Spark plug check NOTE: For 1 product	0.1

(4) Overhaul

Work condition: The required Measurements, inspections, adjustments, and cleaning/washing of each part are performed, including the main body removal/installation work and the replacement of defective parts.

	LON	DESCRIPTION	FRT
E	3112A0	**CARBURETOR-OVERHAUL** INCLUDES: All necessary adjustment	0.6


(5) Other work

	LON	DESCRIPTION	FRT
E	1101E1	**ENGINE OIL-CHANGE** INCLUDES: Engine oil-inspection	0.1

ENGINE GROUP


E-2 D 1

CYLINDER HEAD

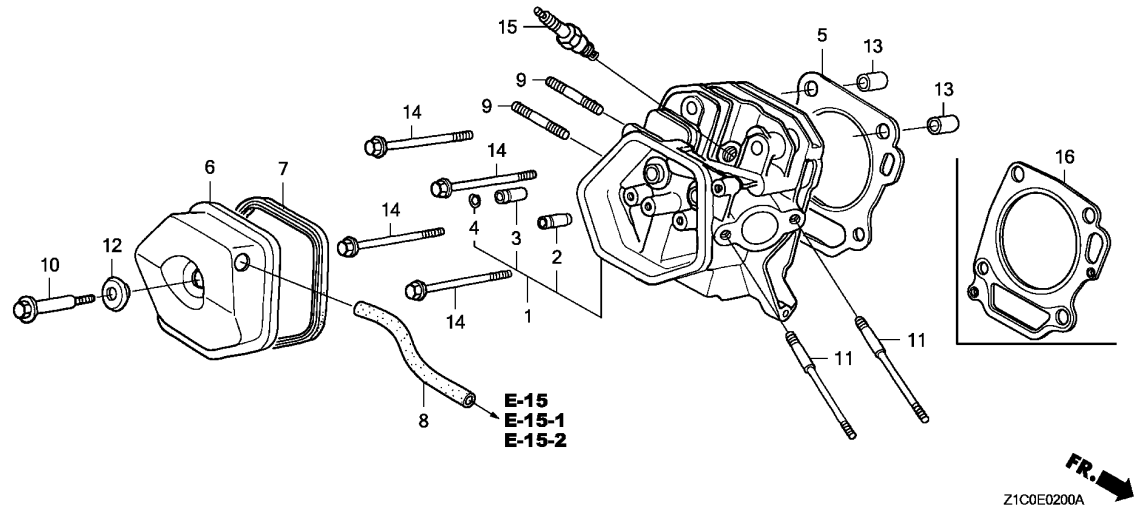


E-3 D 3

CYLINDER BARREL

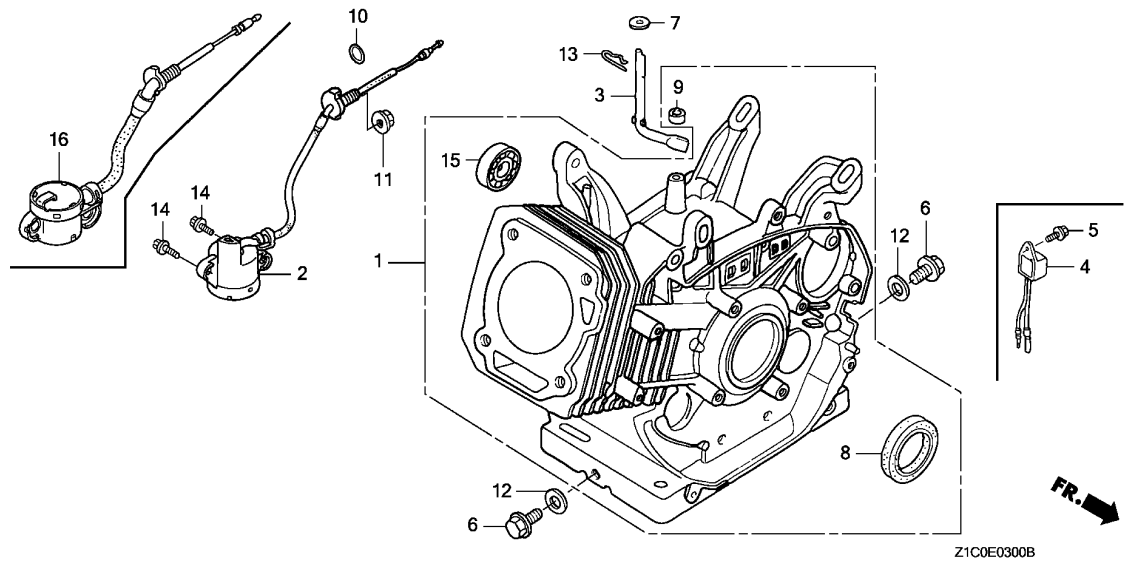


E-6 D 5

CRANKCASE COVER(1)

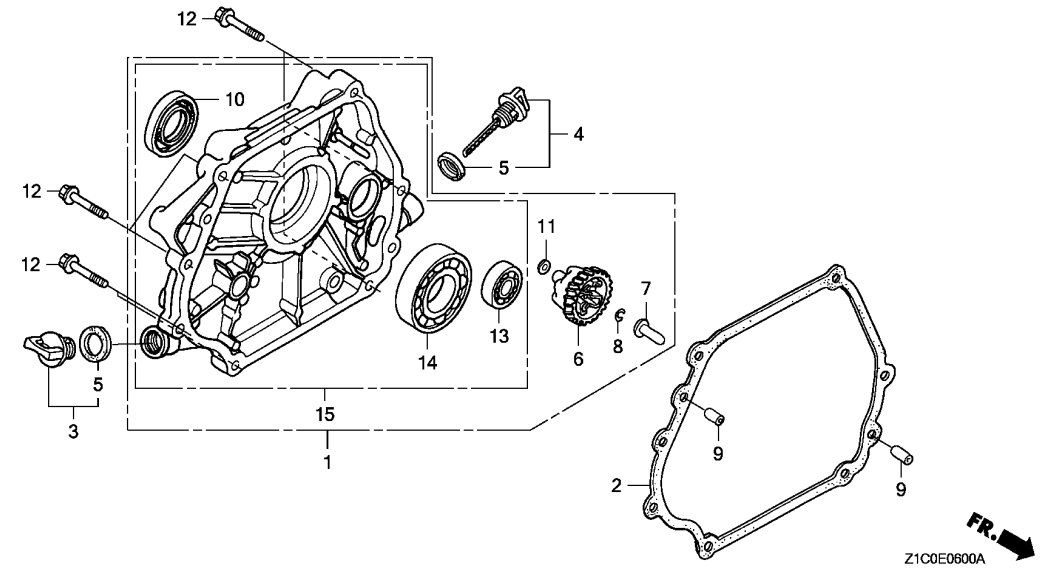


E-6-1 D 7

CRANKCASE COVER(2)

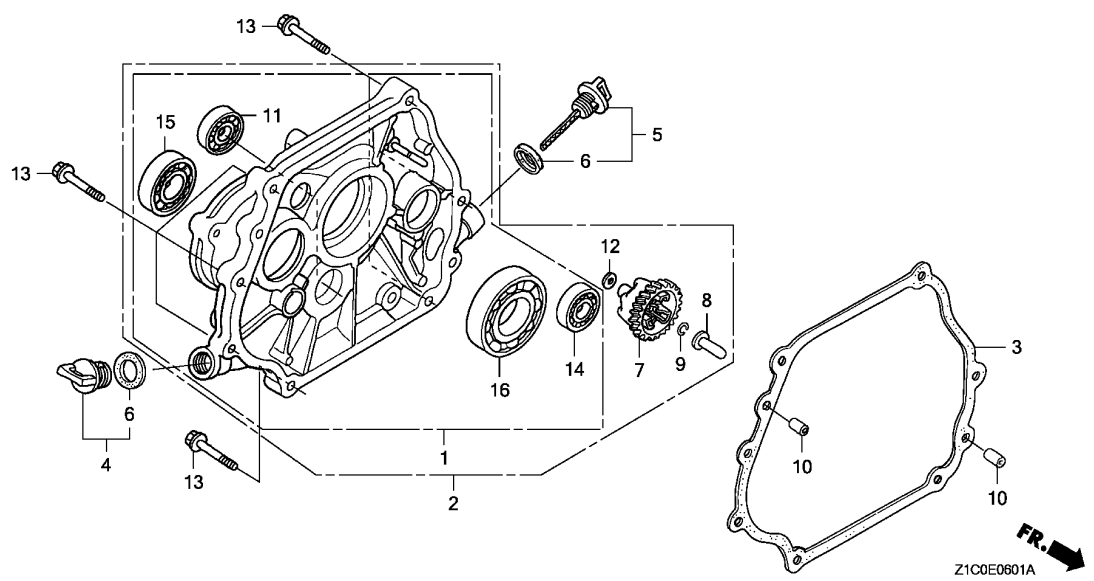


E-7 D 8

CRANKSHAFT

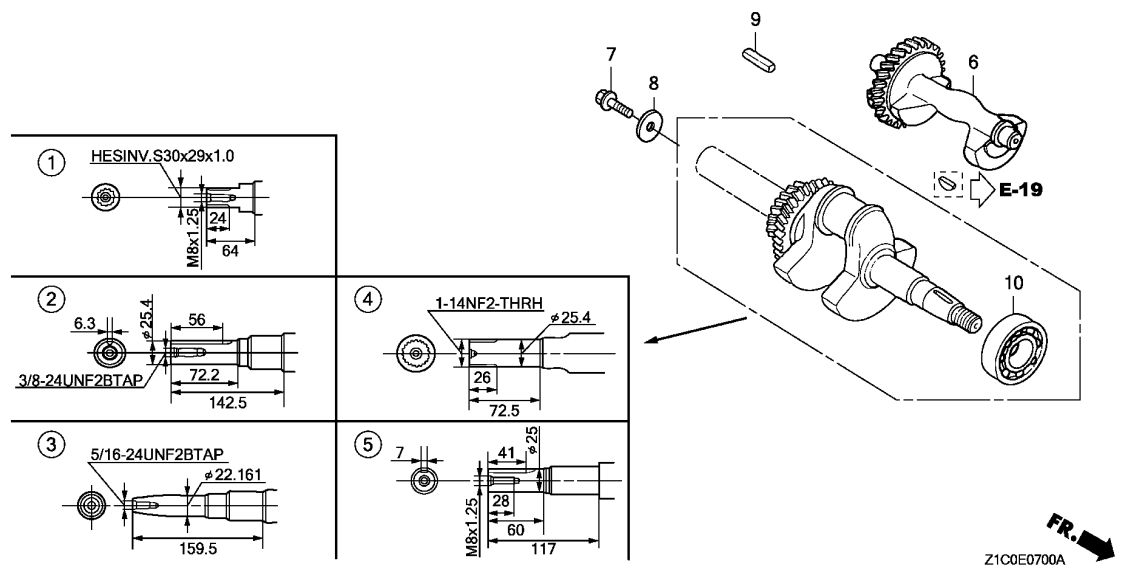


E-8 D10

PISTON

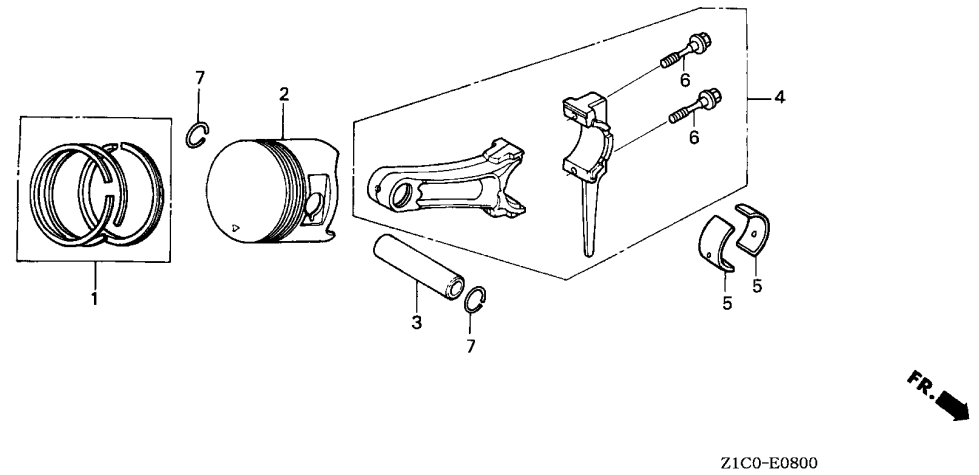


E-9 D14

CAMSHAFT

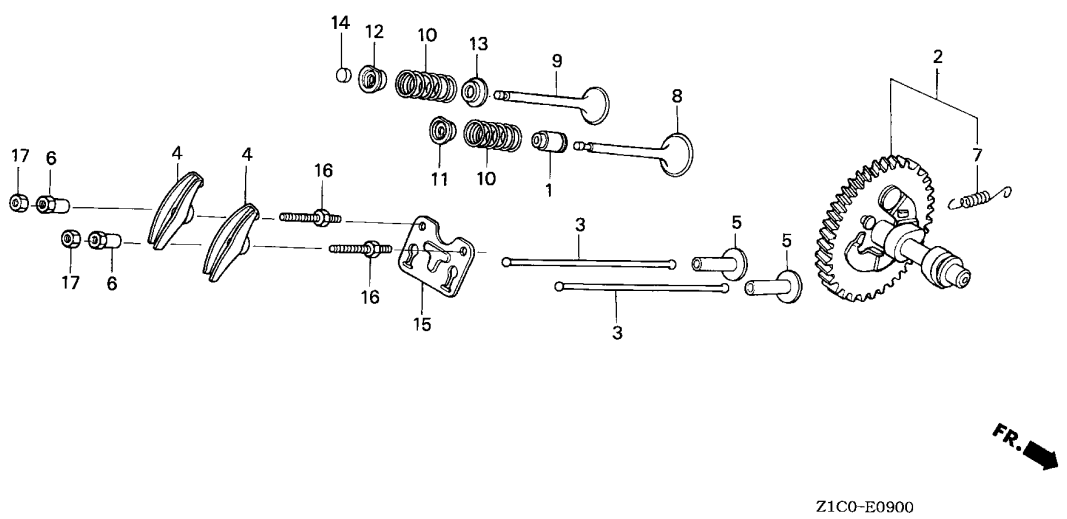


E-11 D16

RECOIL STARTER

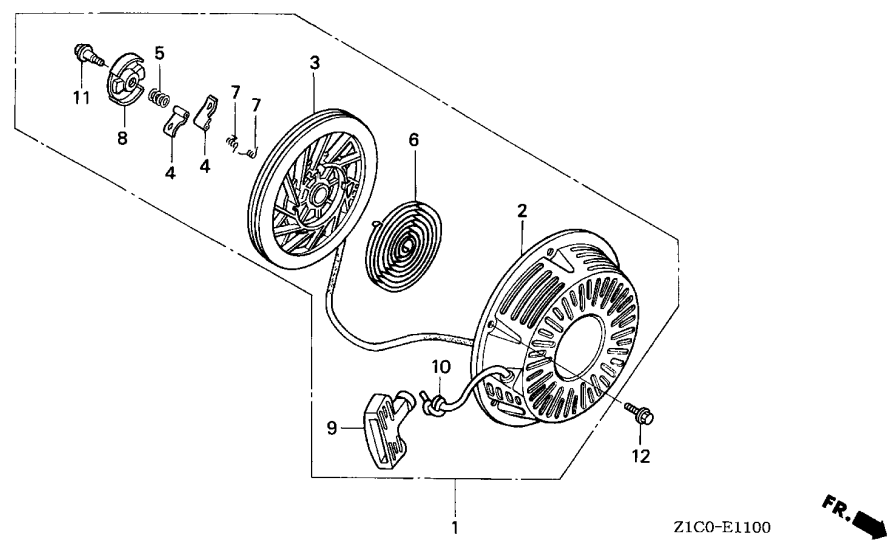

E-12 E 1

FAN COVER(1)

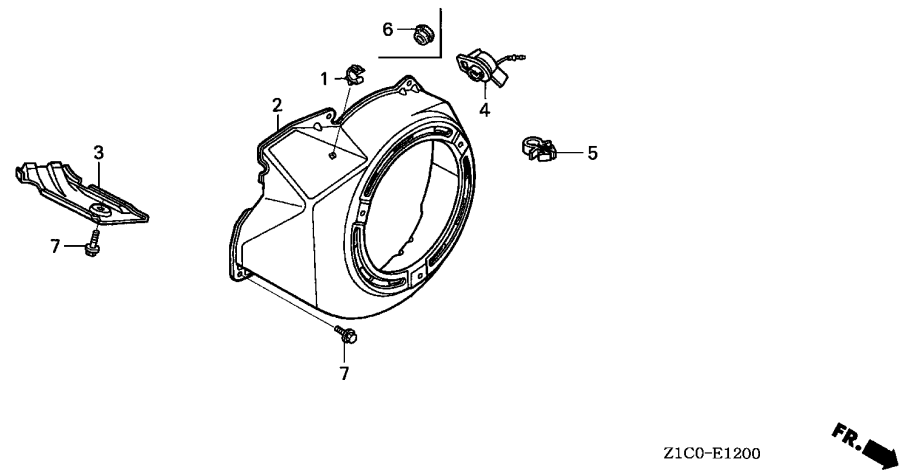


2

ENGINE GROUP


C 6

2


E-12-1 — E 2
FAN COVER(2)

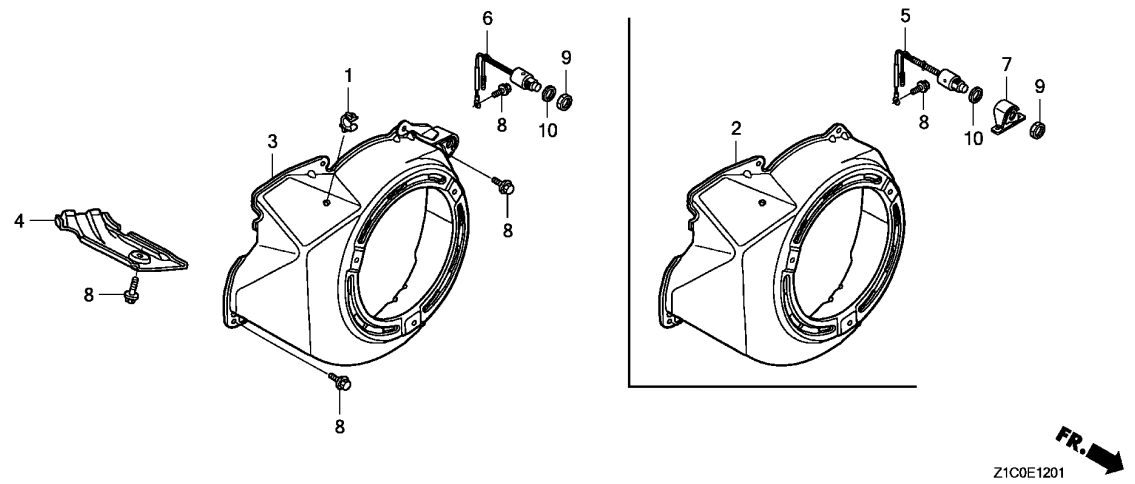


E-14 — E 3
CARBURETOR(1)

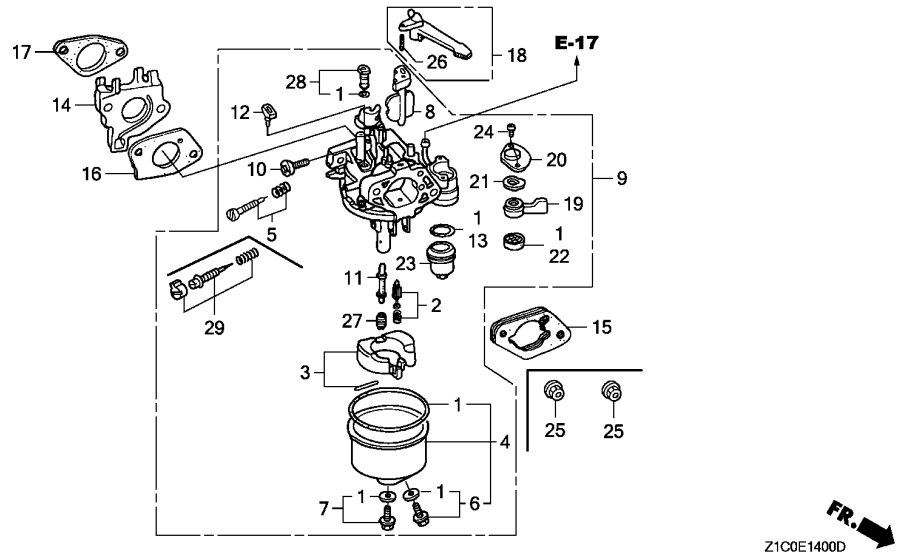


E-14-1 — E 7
CARBURETOR(2)

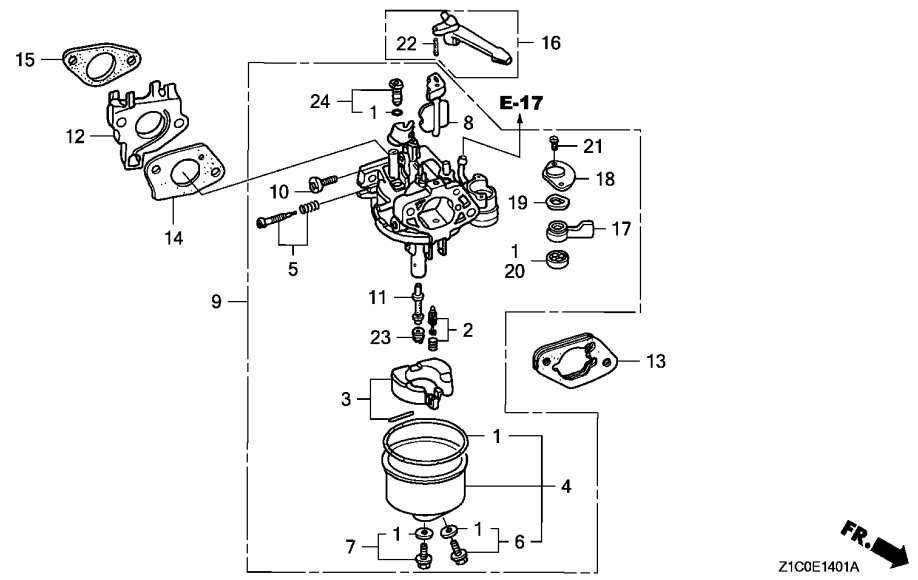


E-15 — E 9
AIR CLEANER(SILENT)

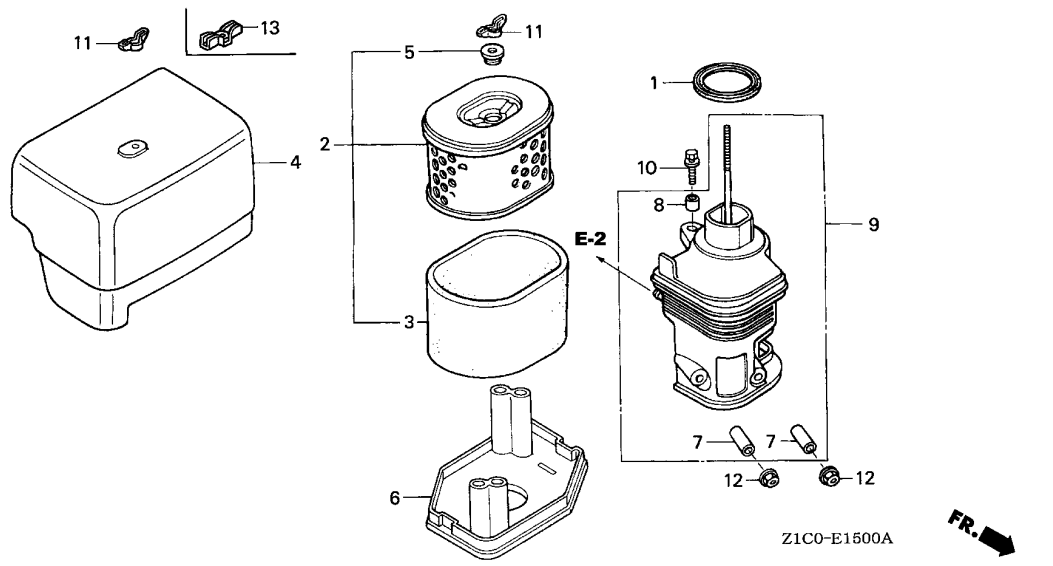


E-15-1 — E11
AIR CLEANER(OIL BATH)

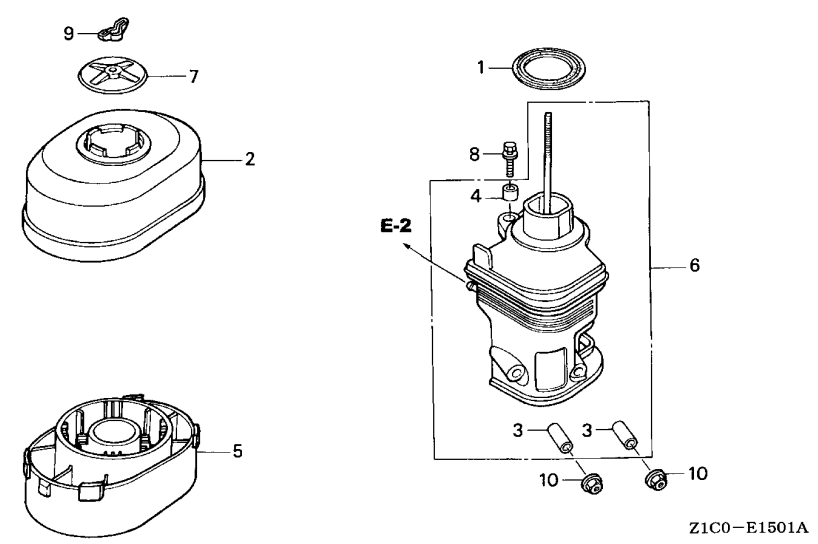


E-15-2 — E12
AIR CLEANER(BOAT)

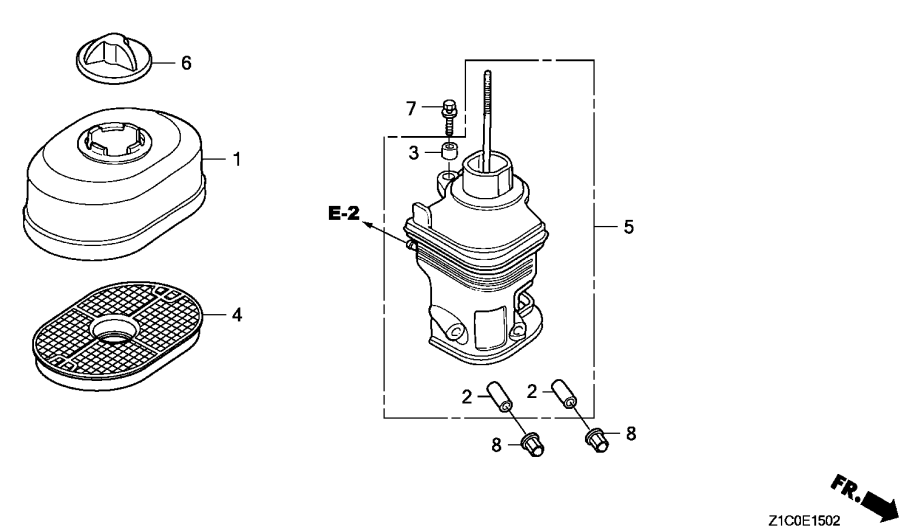


E-16 — E13
MUFFLER(1)

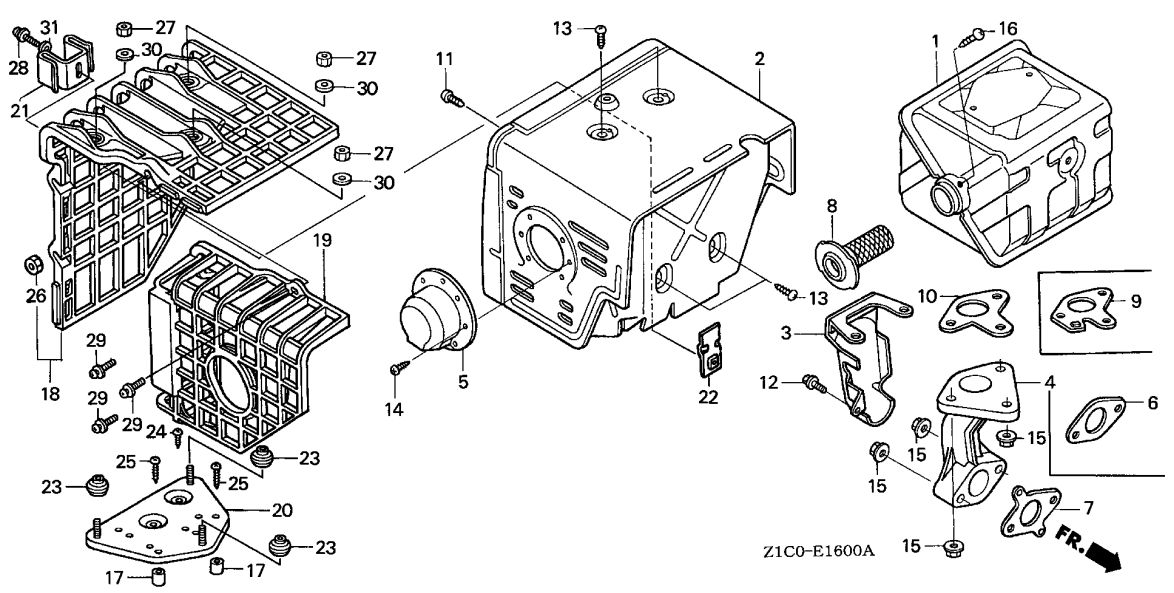

E-16-1 — E16
MUFFLER(2)

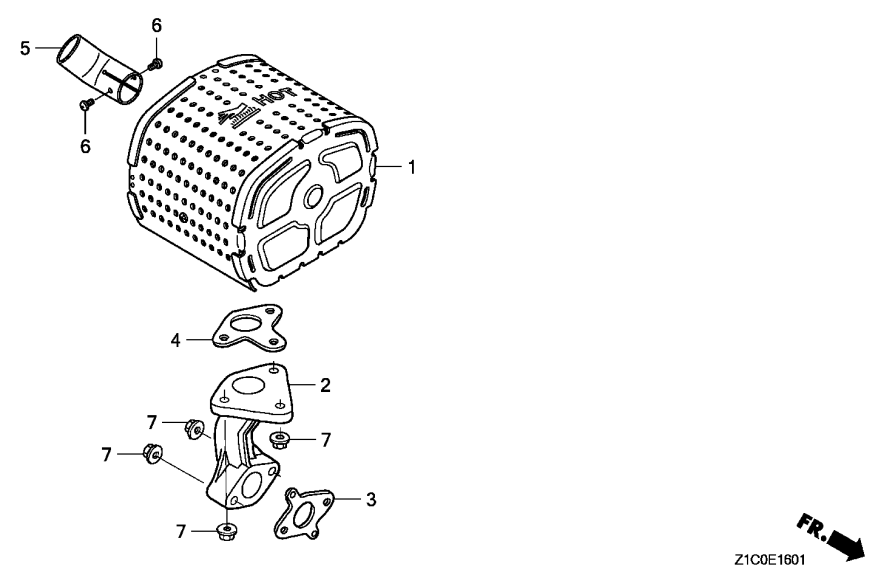

E-17 — F 1
FUEL TANK

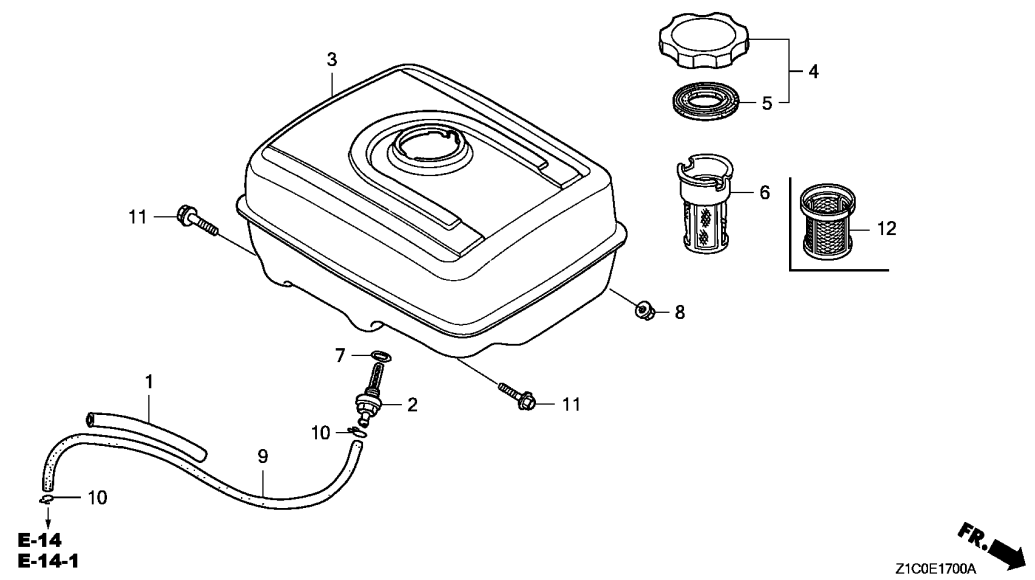


ENGINE GROUP

C 7


E-19 — F 3

FLYWHEEL

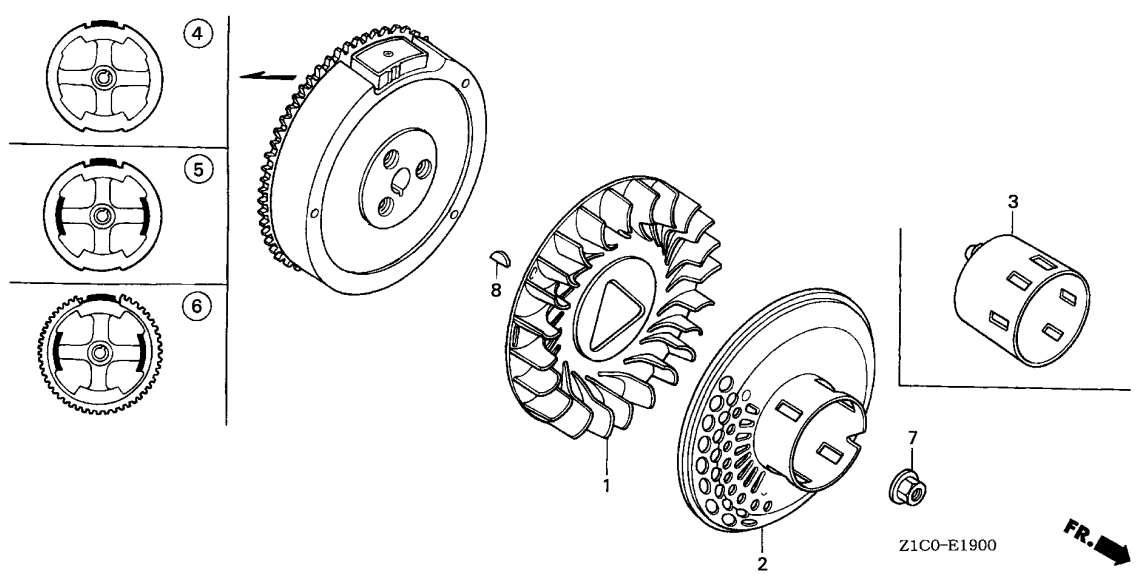


E-20 — F 4

IGNITION COIL

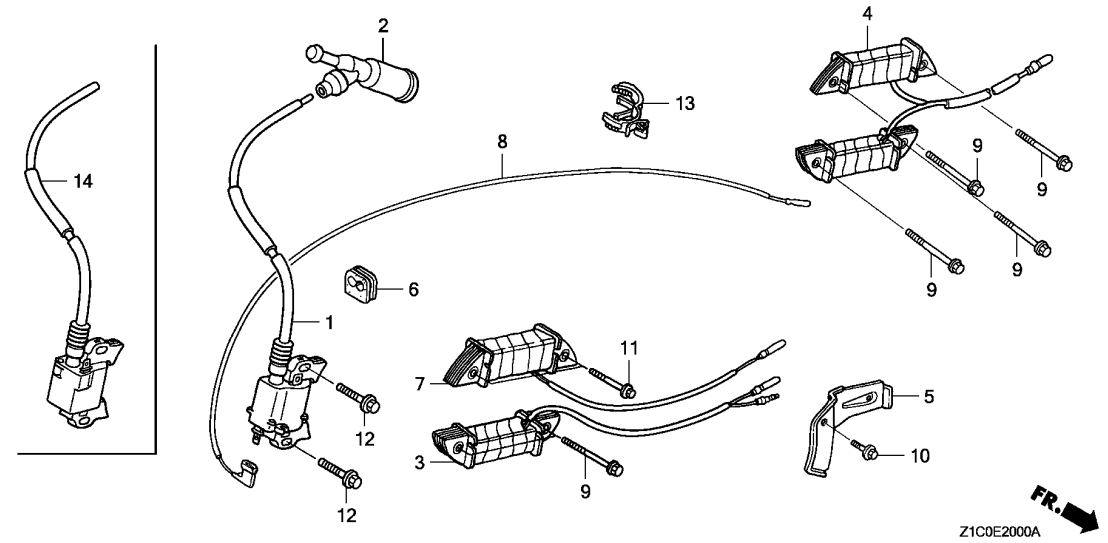


E-21 — F 6

STARTER MOTOR

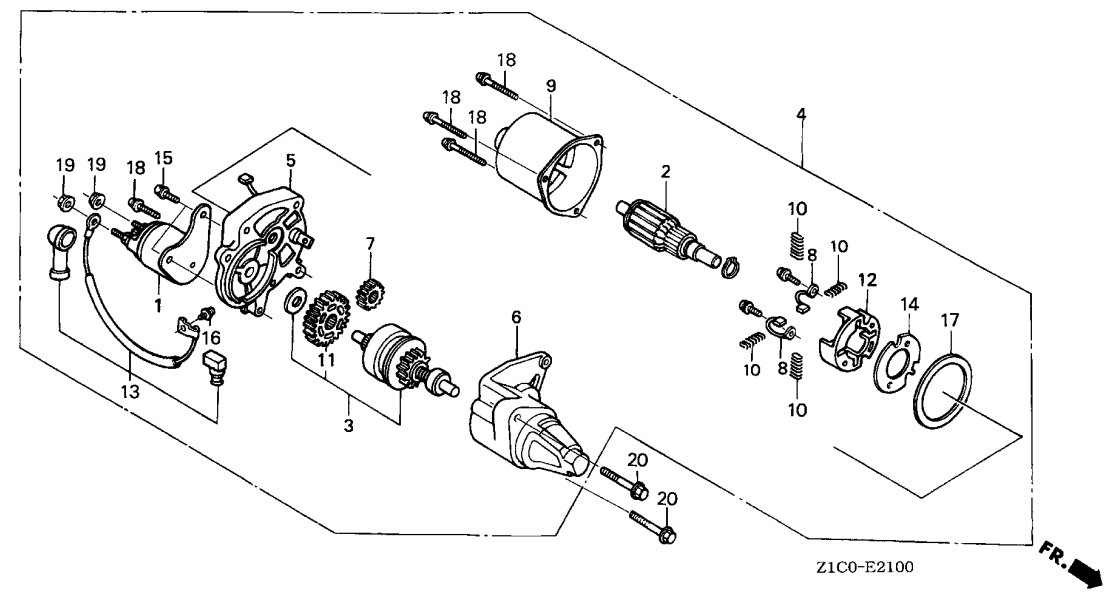


E-22 — F 7

CONTROL(1)

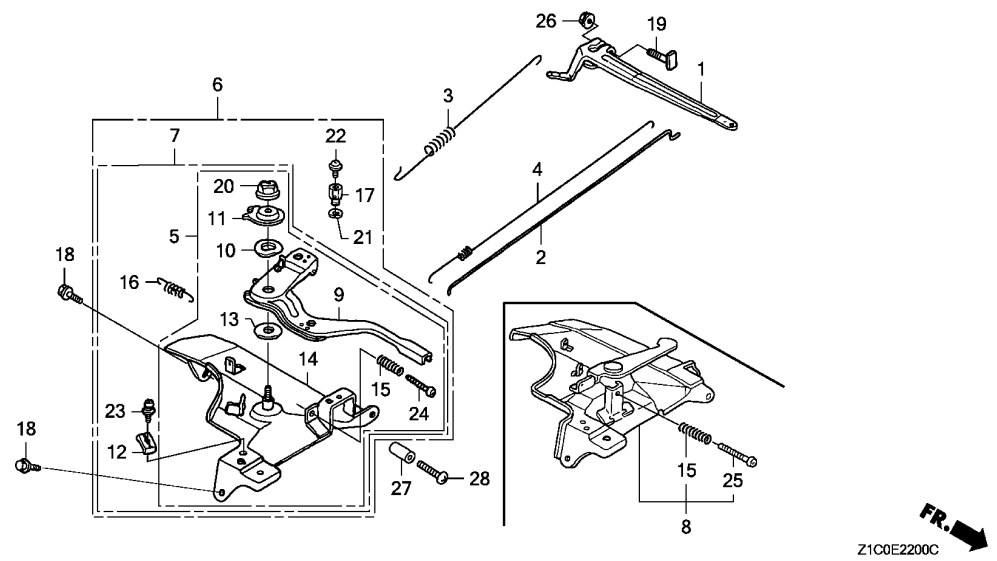


E-22-1 — F10

CONTROL(2)

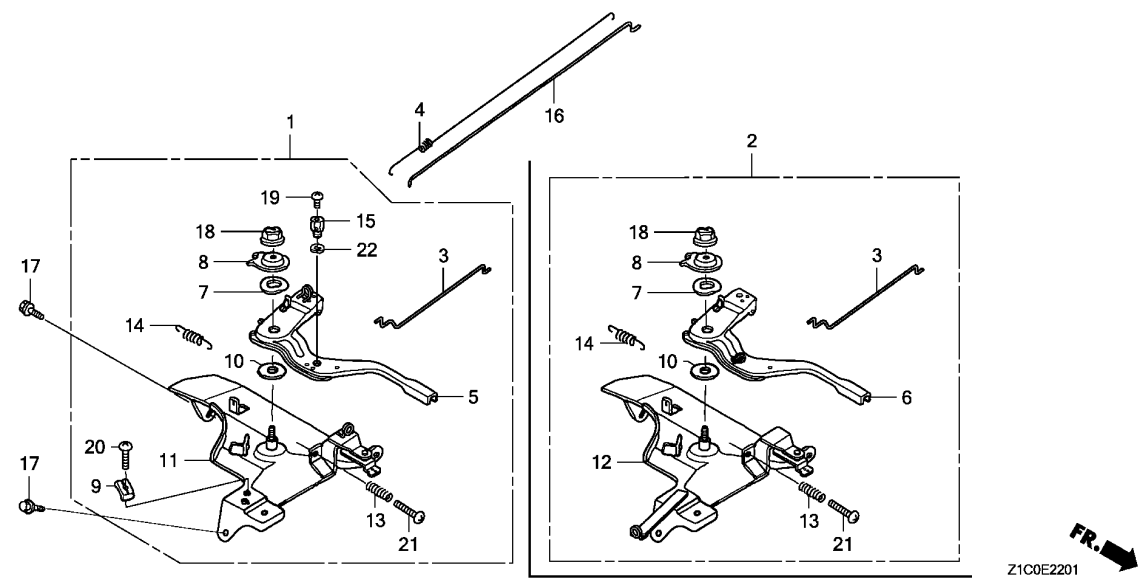


E-23 — F11

CONTROL BOX

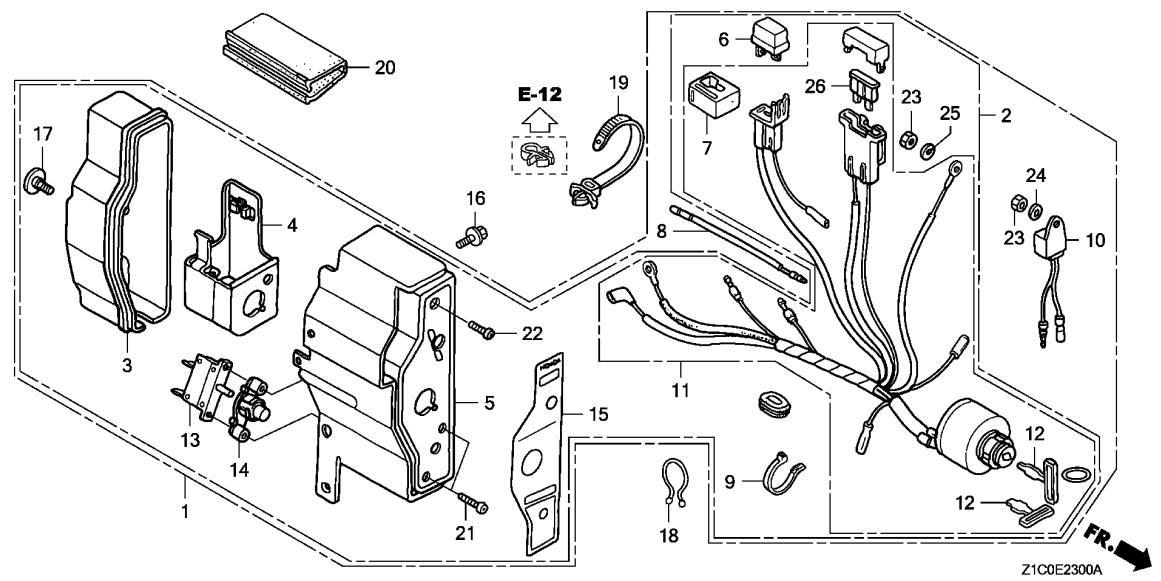


E-26 — F13

REDUCTION

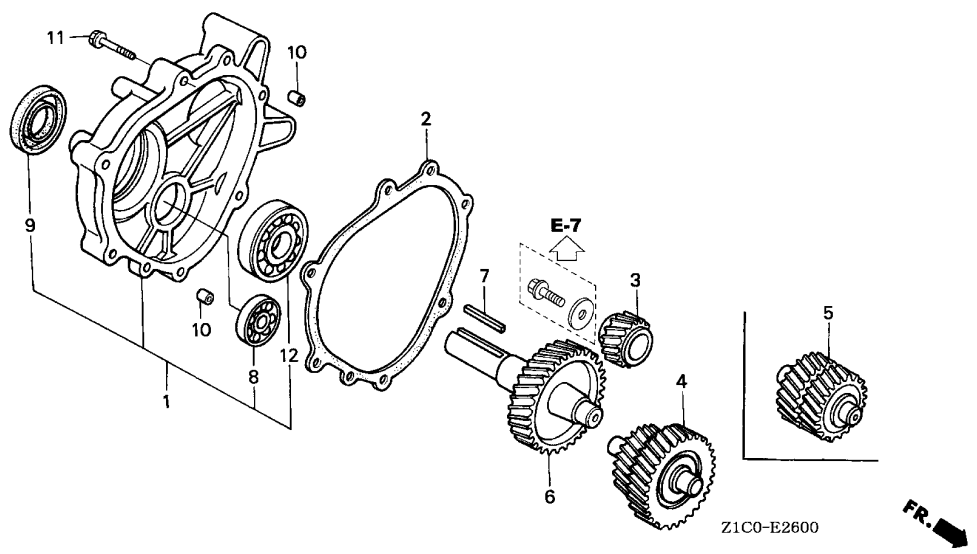


E-28 — F14

LABEL(1)

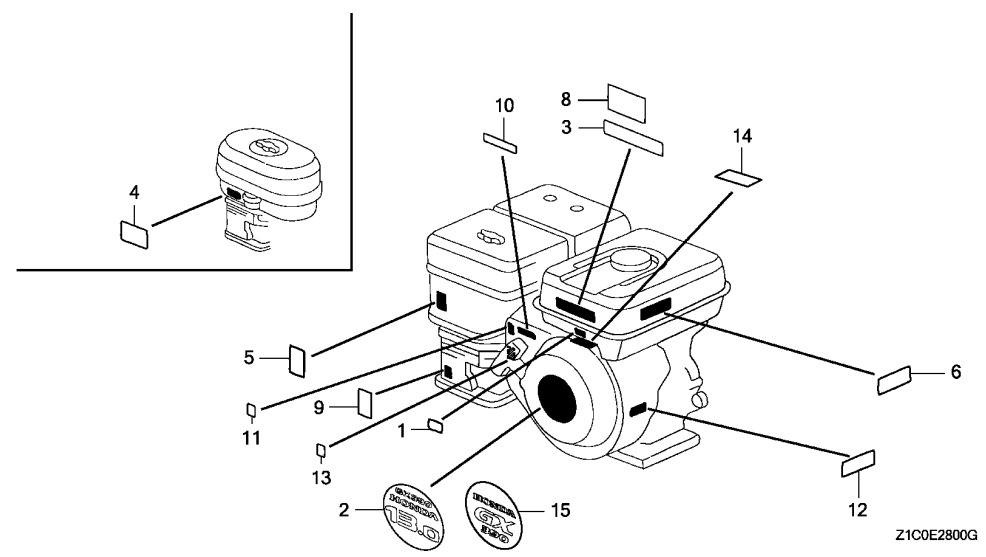

E-28-1 — F16

LABEL(2)

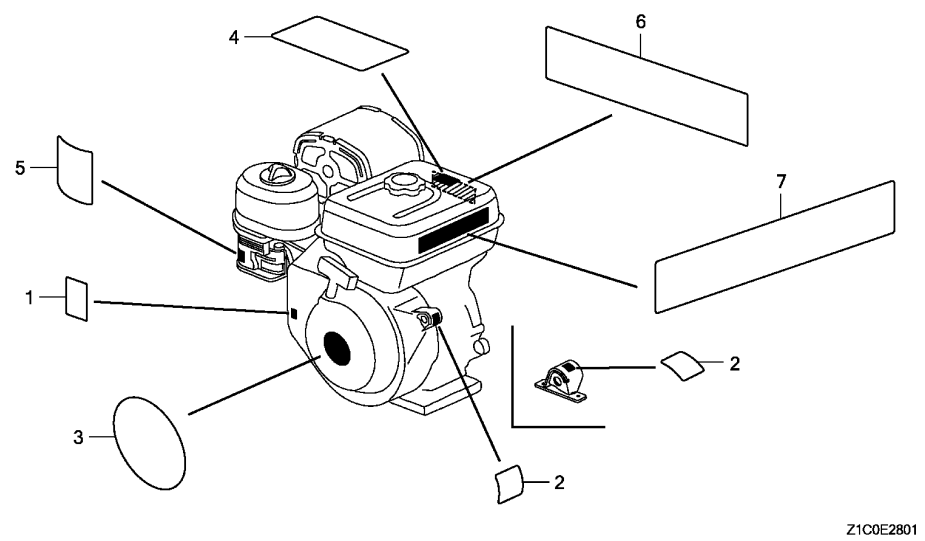


2

ENGINE GROUP

C 8


E-29 TOOL

G 1

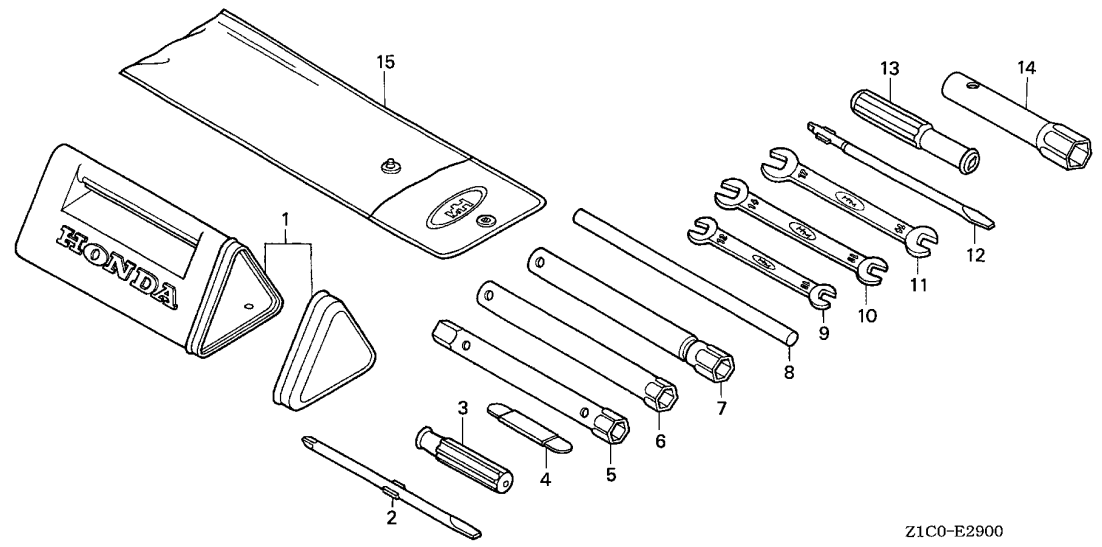

E-40 OTHER PARTS


G 2

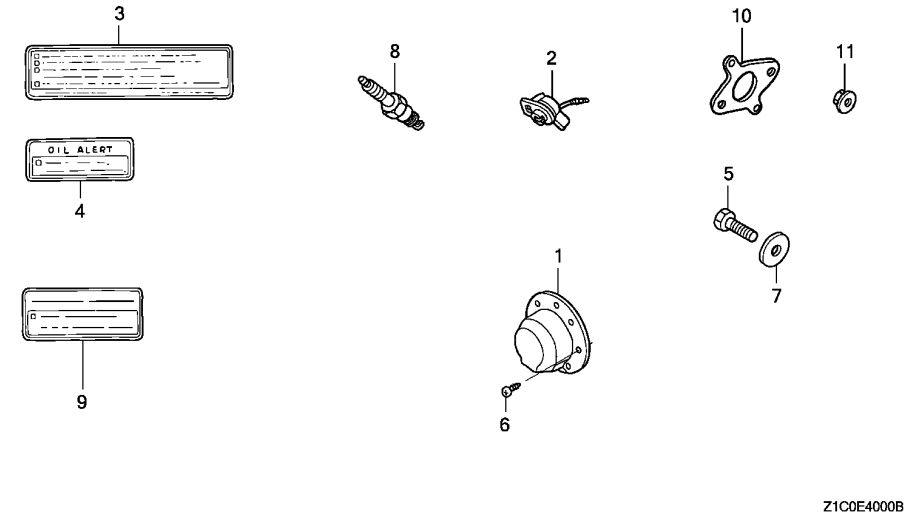

2

E-2 CYLINDER HEAD

D 1

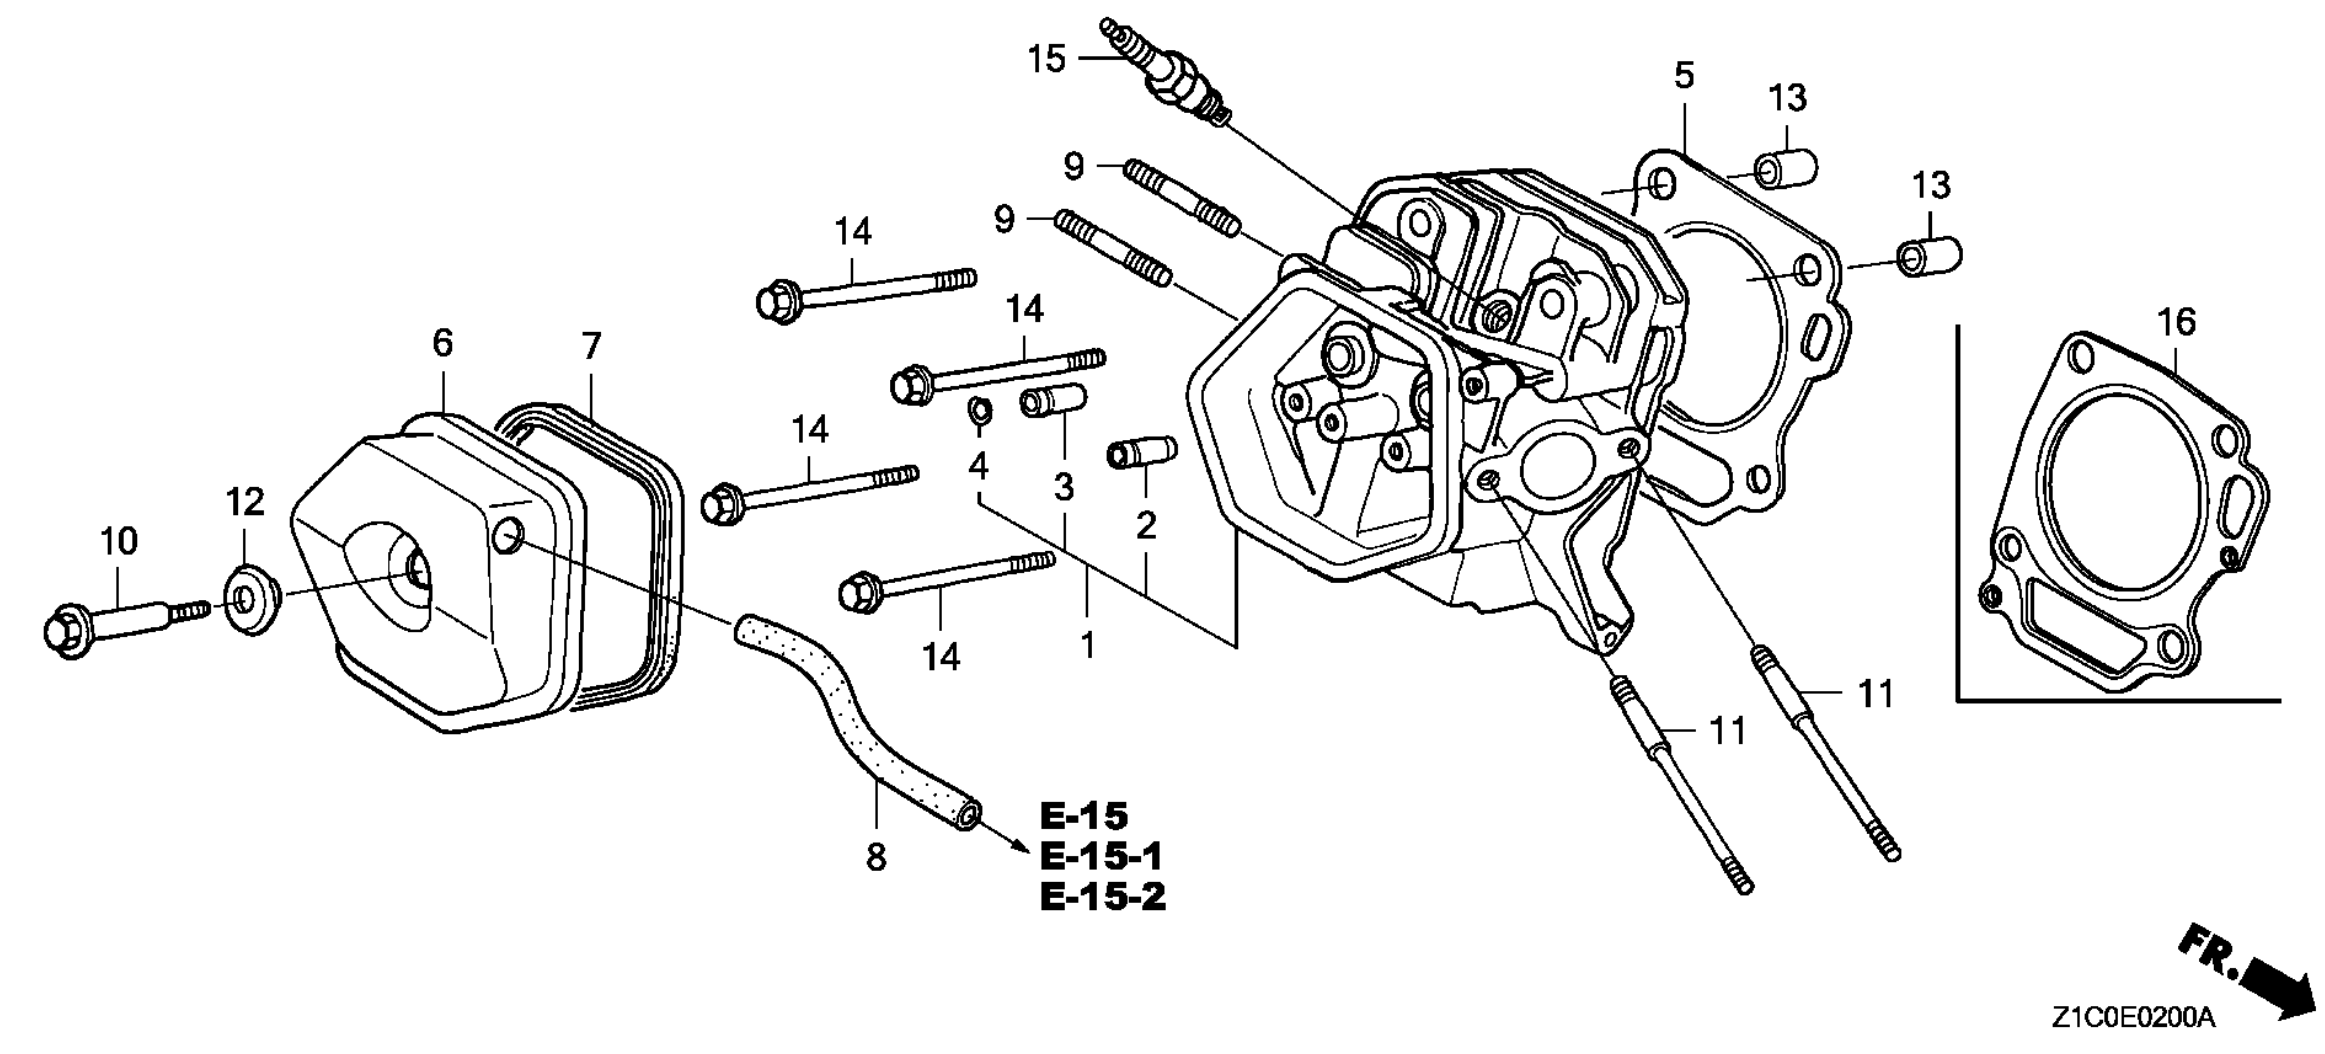


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1111N3	HEAD, CYLINDER ················	0.9
		.INCLUDES: Valve clearance adjustment and reface	
2	1111E9	GUIDE, INTAKE VALVE ··········	0.8
		.INCLUDES: Valve clearance adjustment	
	1111E9E	.Replace intake and exhaust all add ···················	0.2
3	1111E8	GUIDE, EXHAUST VALVE ·········	0.8
		.INCLUDES: Valve clearance adjustment	
	1111E8E	.Replace intake and exhaust all add ···················	0.2
5		(16)	
	1111N4	GASKET, CYLINDER HEAD ········	0.5
6		(7)	
	1111D5	COVER, CYLINDER HEAD AND/OR PACKING, HEAD COVER ·········	0.1
8	1111K5	TUBE, BREATHER ················	0.1
15	6141C1	PLUG, SPARK ···················	0.1

2


Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.		Parts catalogue code
1	12200-Z1C-406	HEAD COMP., CYLINDER ········	1			
2	12204-ZE2-306	GUIDE, IN. VALVE (O.S.) ·····	1			
3	12205-ZE2-305	GUIDE, EX. VALVE (O.S.) ·····	1			
4	12216-ZE2-300	CLIP, VALVE GUIDE ···········	1			
5	12251-ZF6-W00	GASKET, CYLINDER HEAD ·······	1	--------	--------	LXE8,LXE9,LXU,PXE8,PXU,QAA2,QAA6,QA2,QA26,QXEK,QXE8,QXK,QXQ4,QXU,SXE8 SXQ4,VXE8,VXK,VX8
			1	--------	1337116	LH,LHB5,LHP1,LP,LT,PX,QH,QHB3,QHB5,QHP1,QMH,QP,QT,QX,QXE,SH,SHE,SN,SWE SWX,SX,SXC,SXE,VTE5,VX,VXE,VXU1
	12251-Z1C-801	····························	1	--------	--------	LH2,QBLS,QBS,QN,QTD,SWE2,SWX2,VSP
			1	1337117	--------	LH,LHB5,LHP1,LP,LT,PX,QH,QHB3,QHB5,QHP1,QMH,QP,QT,QX,QXE,SH,SHE,SN,SWE SWX,SX,SXC,SXE,VTE5,VX,VXE,VXU1
6	12310-ZE2-020	COVER COMP., HEAD ···········	1	--------	--------	LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
	12310-Z1C-800	COVER, CYLINDER HEAD ········	1	--------	--------	LBHB,QBH,QBHS,QBLS,QBS
7	12391-ZE2-020	PACKING, HEAD COVER ·········	1			
8	15721-ZE3-H00	TUBE, BREATHER ··············	1	--------	--------	LP
	95005-11105-30	TUBE, 11X105(95005-11001-30M)	1	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBH QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK QXQ4,QXU,SH,SHE,SN,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE VXE8,VXK,VXU1,VX8
9	90012-KM9-000	BOLT, STUD, 8X34 ············	2	--------	--------	LP
	92900-08032-0E	BOLT, STUD, 8X32 ············	2	--------	--------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SWE SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
	92900-08050-0B	BOLT, STUD, 8X50 ············	2	--------	--------	LBHB,QBH,QBHS,QBLS,QBS

CYLINDER HEAD

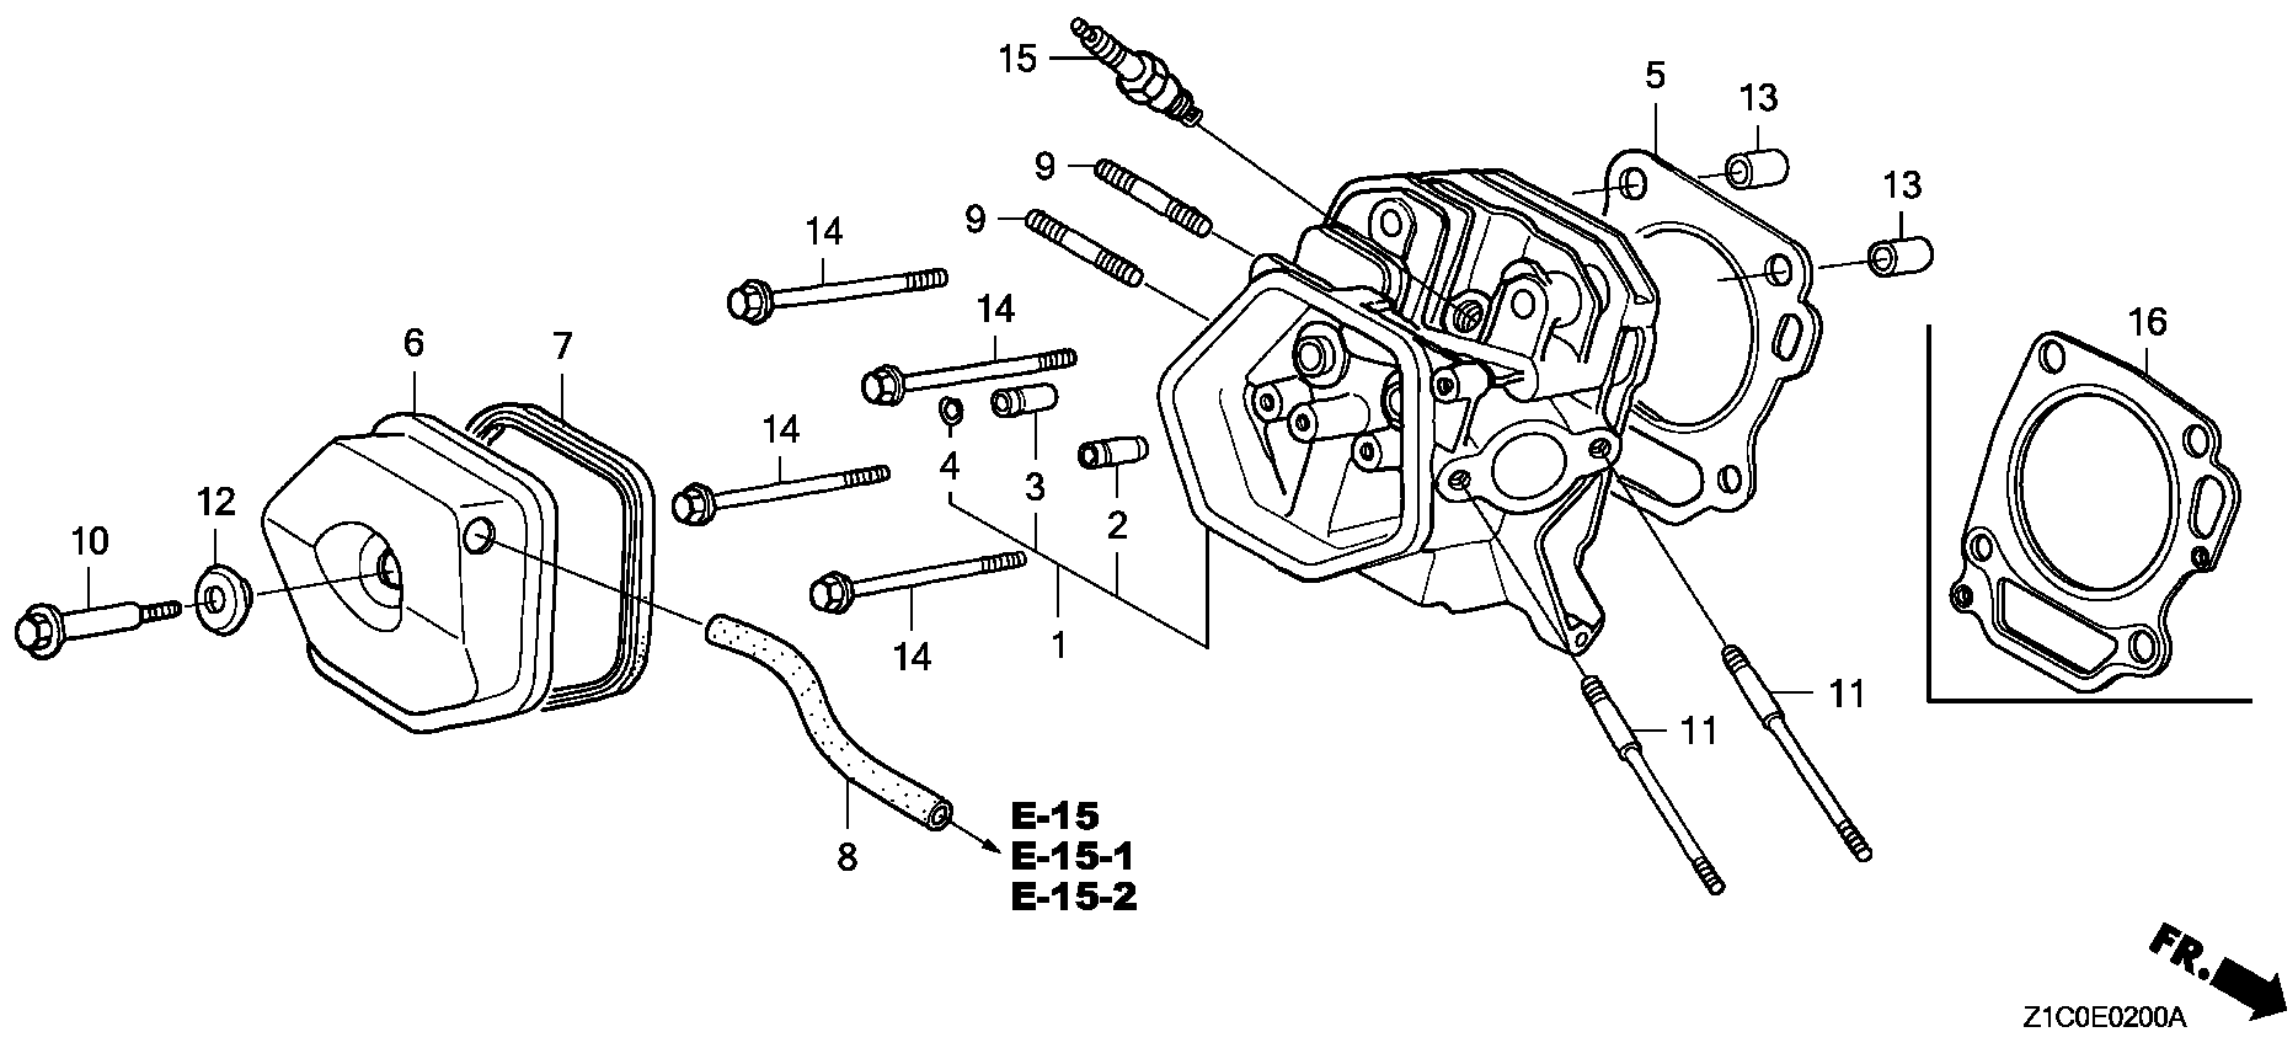

Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.	Parts catalogue code
10	90014-ZE2-000	BOLT, HEAD COVER ············	1	-------- --------	LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
	90014-Z1C-800	····························	1	-------- --------	LBHB,QBH,QBHS,QBLS,QBS
11	90042-ZE3-700	BOLT, STUD, 8X106 ···········	2	-------- --------	LP
	90042-ZE8-000	BOLT, STUD, 8X131.5 ·········	2	-------- --------	LBHB,LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBH QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK QXQ4,QXU,SH,SHE,SN,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE VXE8,VXK,VXU1,VX8
12	90441-ZE2-010	WASHER COMP., HEAD COVER ····	1	-------- --------	LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
	90441-Z1C-800	····························	1	-------- --------	LBHB,QBH,QBHS,QBLS,QBS
13	94301-12200	DOWEL PIN, 12X20 ············	2		
14	95701-10080-00	BOLT, FLANGE, 10X80 ·········	4	-------- --------	LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
	90102-Z1C-800	····························	4	-------- --------	LBHB,QBH,QBHS,QBLS,QBS
15	98079-55841	PLUG, SPARK (BP5ES)(NGK) ····	(1)	-------- --------	LBHB,LP,LT,QBH,QBHS,QBLS,QBS,QN,QT,QTD
	98079-55876	PLUG, SPARK (BPR5ES) ········	(1)	-------- --------	LH,LHB5,LHP1,LH2,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QP,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SWE,SWE2,SWX SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
	98079-56871	PLUG, SPARK (BP6ES) ·········	1	-------- --------	LBHB,LP,LT,QBH,QBHS,QBLS,QBS,QN,QT,QTD,SN
	98079-56876	PLUG, SPARK (BPR6ES) ········	1	-------- --------	LH,LHB5,LHP1,LH2,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QP,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SWE,SWE2,SWX,SWX2 SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
16	12251-Z1C-811	GASKET, CYLINDER HEAD ·······	1	-------- --------	LBHB,QBH,QBHS


CYLINDER BARREL

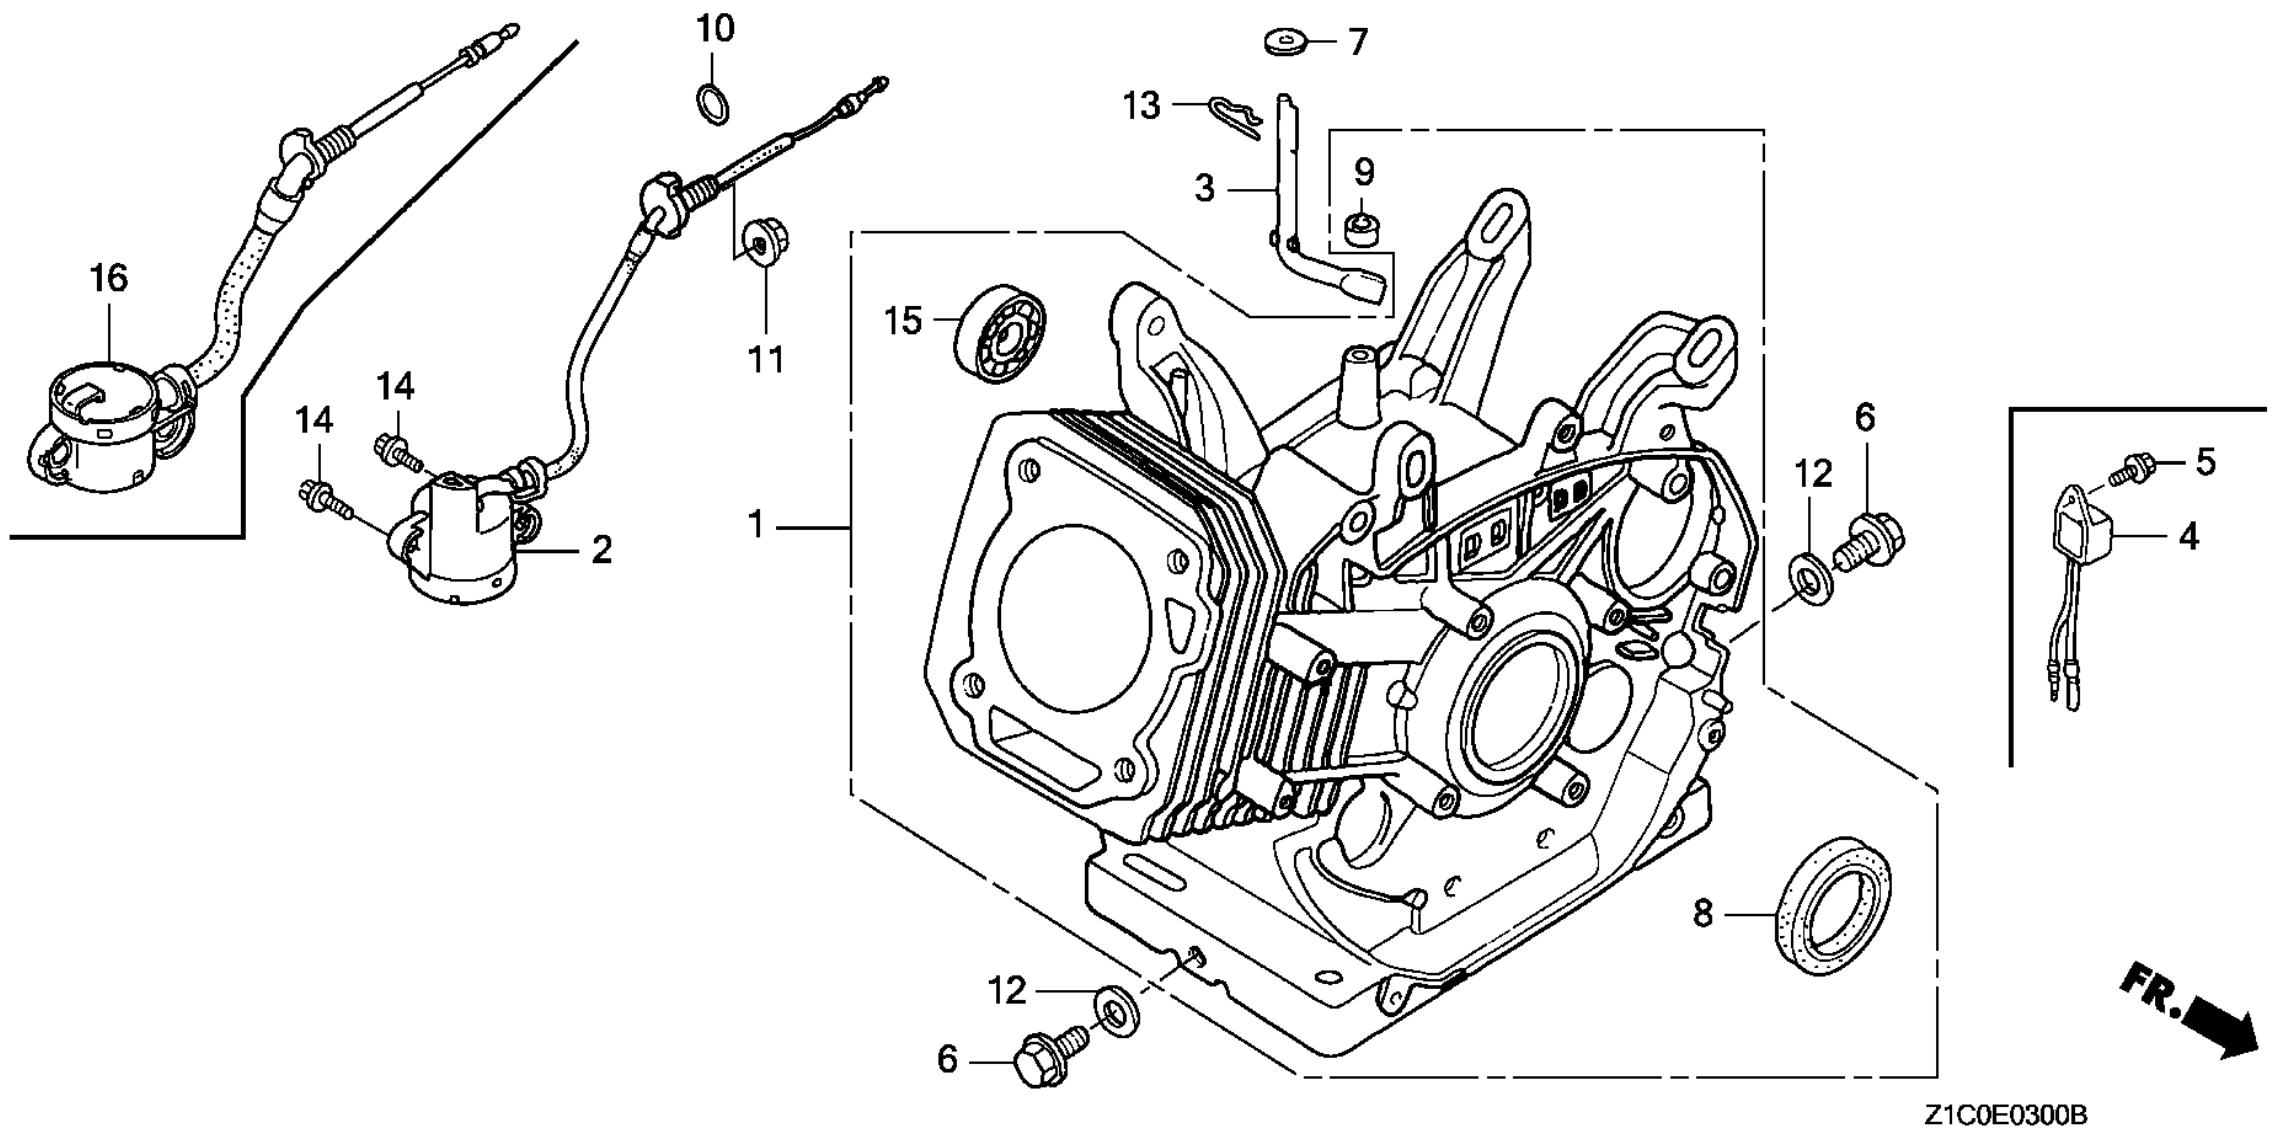

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1101A0	BARREL, CYLINDER -------------	1.8
2		(10,16)	
	6151E8	SWITCH, OIL LEVEL ------------	0.5
3	1161B4	SHAFT, GOVERNOR ARM ----------	0.9
4	6151A0	ALERT UNIT, ENGINE OIL -------	0.1
8	1101E4	OIL SEAL, CRANKSHAFT :FRONT --	1.2
9	1101C4	OIL SEAL, GOVERNOR ARM SHAFT -	0.9
12	1101D5	WASHER, DRAIN PLUG -----------	0.1
15	1101F4	BEARING, BALANCER WEIGHT :FRONT --------------------	0.5


Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.		Parts catalogue code
1	12000-Z1C-405	BARREL ASSY., CYLINDER ------	1	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
	12000-Z1C-406	---------------------------	1	--------	--------	LH,LHB5,LHP1,LH2,LT,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,SH,SN
	12000-Z1C-407	---------------------------	1	--------	--------	LXU,PX,PXU,QAA2,QAA6,QA2,QA26,QX,QXK,QXQ4,QXU,SWX,SWX2,SX,SXC,SXQ4,VSP,VX VX8
	12000-Z1C-408	---------------------------	1	--------	--------	SHE,SWE,SWE2
	12000-Z1C-409	---------------------------	1	--------	--------	LP
	12000-Z1C-305	---------------------------	1	--------	--------	LBHB,QBH,QBHS
2	15510-ZE2-043	SWITCH ASSY., OIL LEVEL -----	1	--------	--------	LXE8,LXU,PXE8,PXU,QAA2,QAA6,QA2,QA26,QXE8,QXQ4,QXU,SXE8,SXQ4,VXE8,VX8
			1	--------	1337116	PX,QX,QXE,SWX,SX,SXC,SXE,VTE5,VX,VXE,VXU1
			1	--------	1340607	LXE9,QXEK,QXK,VXK
3	16541-ZE3-010	SHAFT, GOVERNOR ARM ---------	1	--------	--------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBLS,QBS QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE SN,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1 VX8
4	34150-ZH7-003	ALERT UNIT, OIL -------------	1	--------	--------	LXU,PX,PXU,QAA2,QAA6,QA2,QA26,QX,QXK,QXQ4,QXU,SWX,SX,SXC,SXQ4,VSP,VX,VX8
	34150-ZH7-013	---------------------------	1	--------	--------	QBLS,QBS,SWX2
5	90013-883-000	BOLT, FLANGE, 6X12(CT200) ---	1	--------	--------	LXU,PX,PXU,QAA2,QAA6,QA2,QA26,QX,QXK,QXQ4,QXU,SWX,SWX2,SX,SXC,SXQ4,VSP,VX VX8
	90013-Z0T-810	---------------------------	1	--------	--------	QBLS,QBS
6	90131-883-000	BOLT, DRAIN PLUG, 12X15 -----	2			
7	90446-KE1-000	WASHER, 8.2X17X0.8 ----------	1	--------	--------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBLS,QBS QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE SN,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1 VX8
8	91201-Z1C-003	OIL SEAL, 35X52X8 -----------	1			

CYLINDER BARREL

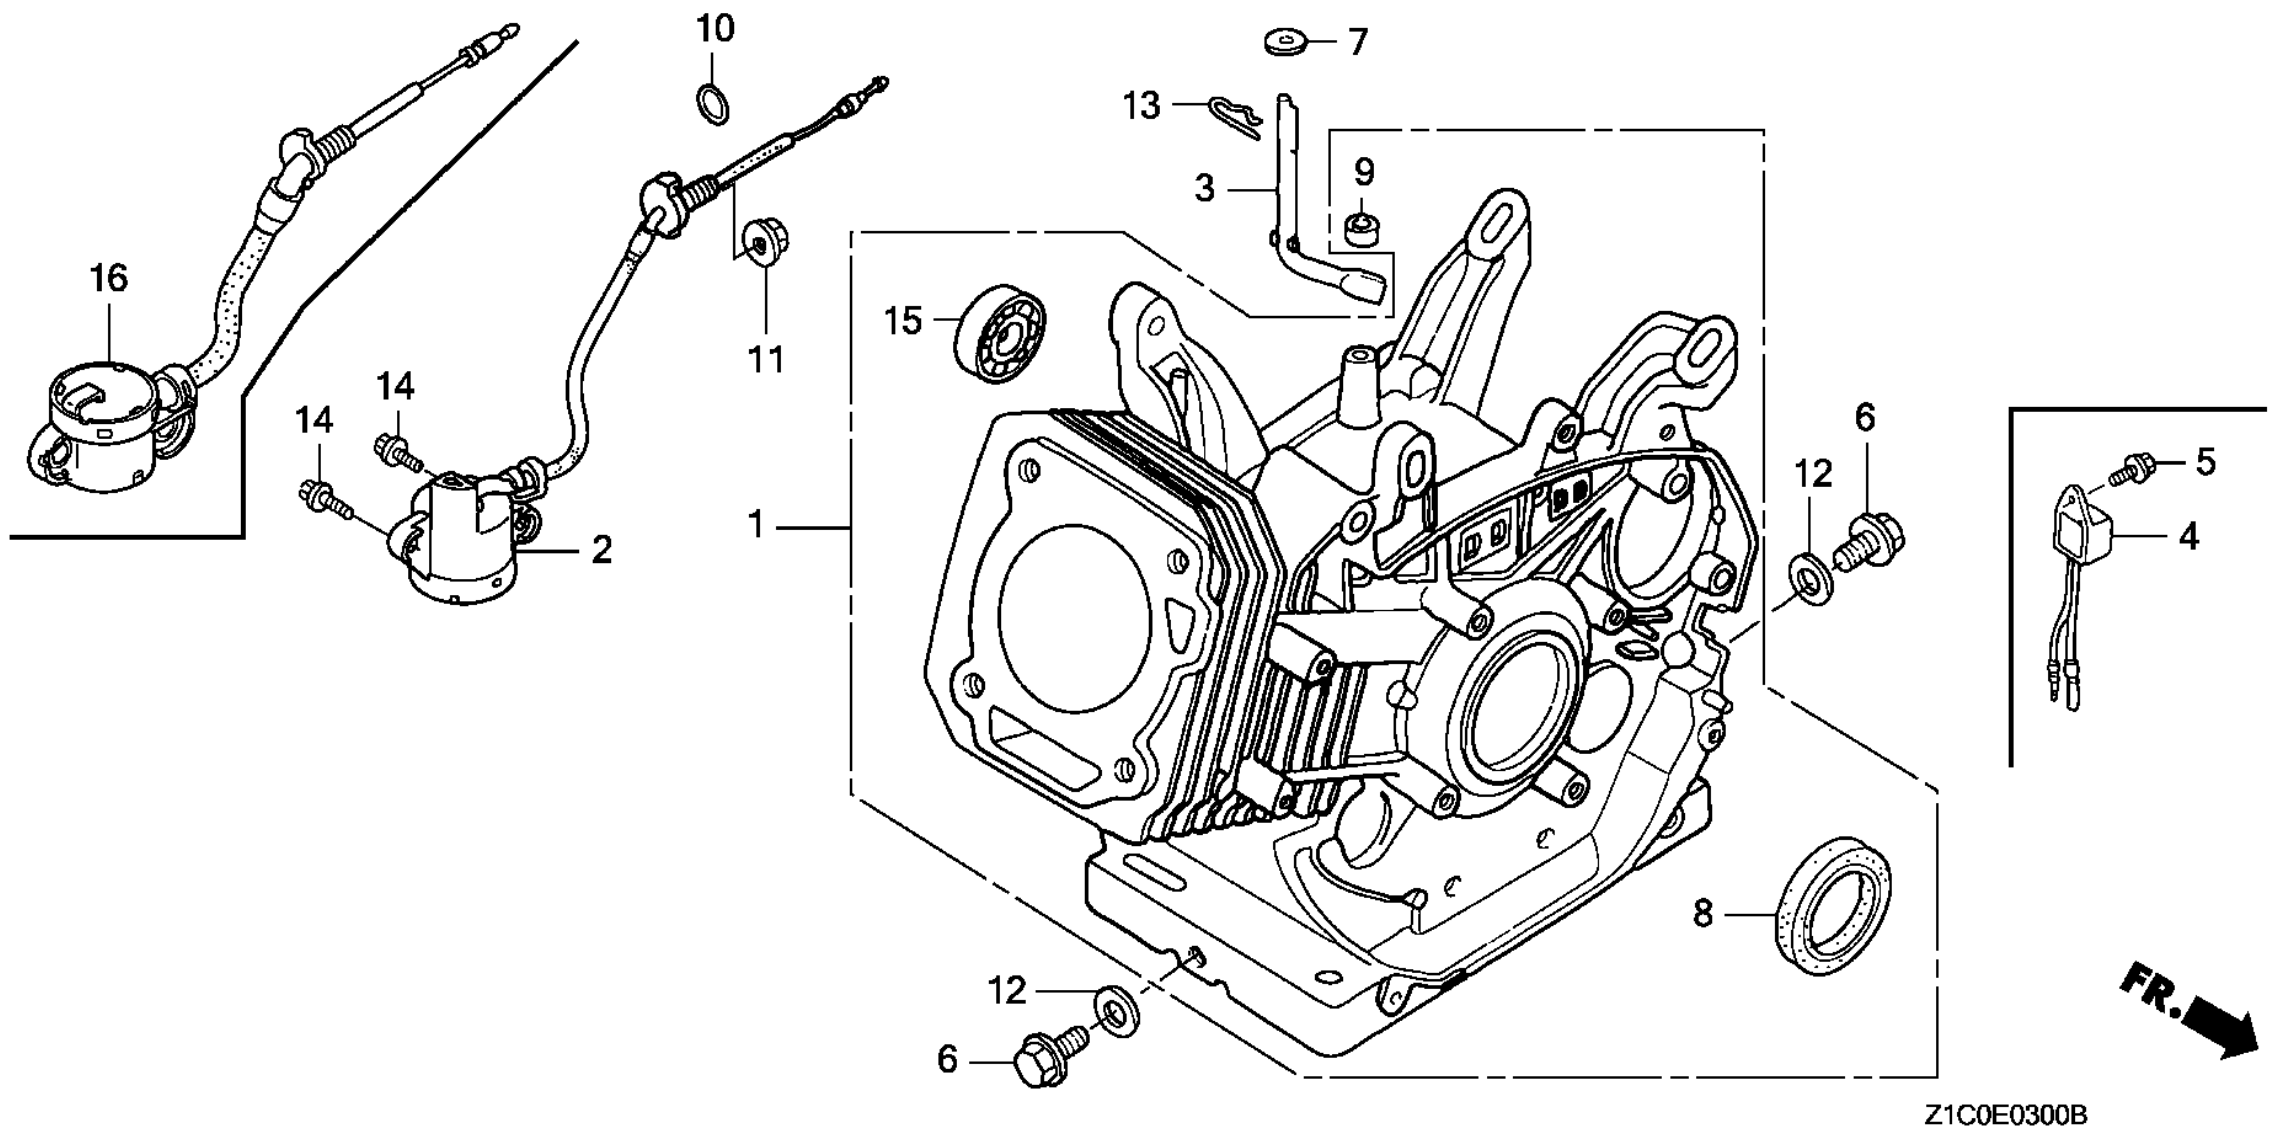

Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.		Parts catalogue code
9	91203-952-771	OIL SEAL, 8X14X5 ············	1	--------	--------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBLS,QBS QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE SN,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1 VX8
10	91353-671-004	O-RING, 14MM(NOK) ···········	1	--------	--------	LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QX,QXE,QXEK,QXE8,QXK,QXQ4 QXU,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
11	94050-10000	NUT, FLANGE, 10MM ···········	1	--------	--------	LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QX,QXE,QXEK,QXE8,QXK,QXQ4 QXU,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
12	94109-12000	WASHER, DRAIN PLUG, 12MM ····	2			
13	94251-10000	PIN, LOCK, 10MM ·············	1	--------	--------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBLS,QBS QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE SN,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1 VX8
14	95701-06012-00	BOLT, FLANGE, 6X12 ··········	2	--------	--------	LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QX,QXE,QXEK,QXE8,QXK,QXQ4 QXU,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
15	96100-62020-00	BEARING, RADIAL BALL, 6202 ··	1			
16	35480-ZF6-003	SWITCH ASSY., OIL LEVEL ·····	1	--------	--------	SWX2,VSP
			1	1337117	--------	PX,QX,QXE,SWX,SX,SXC,SXE,VTE5,VX,VXE,VXU1
			1	1340608	--------	LXE9,QXEK,QXK,VXK

CRANKCASE COVER(1)

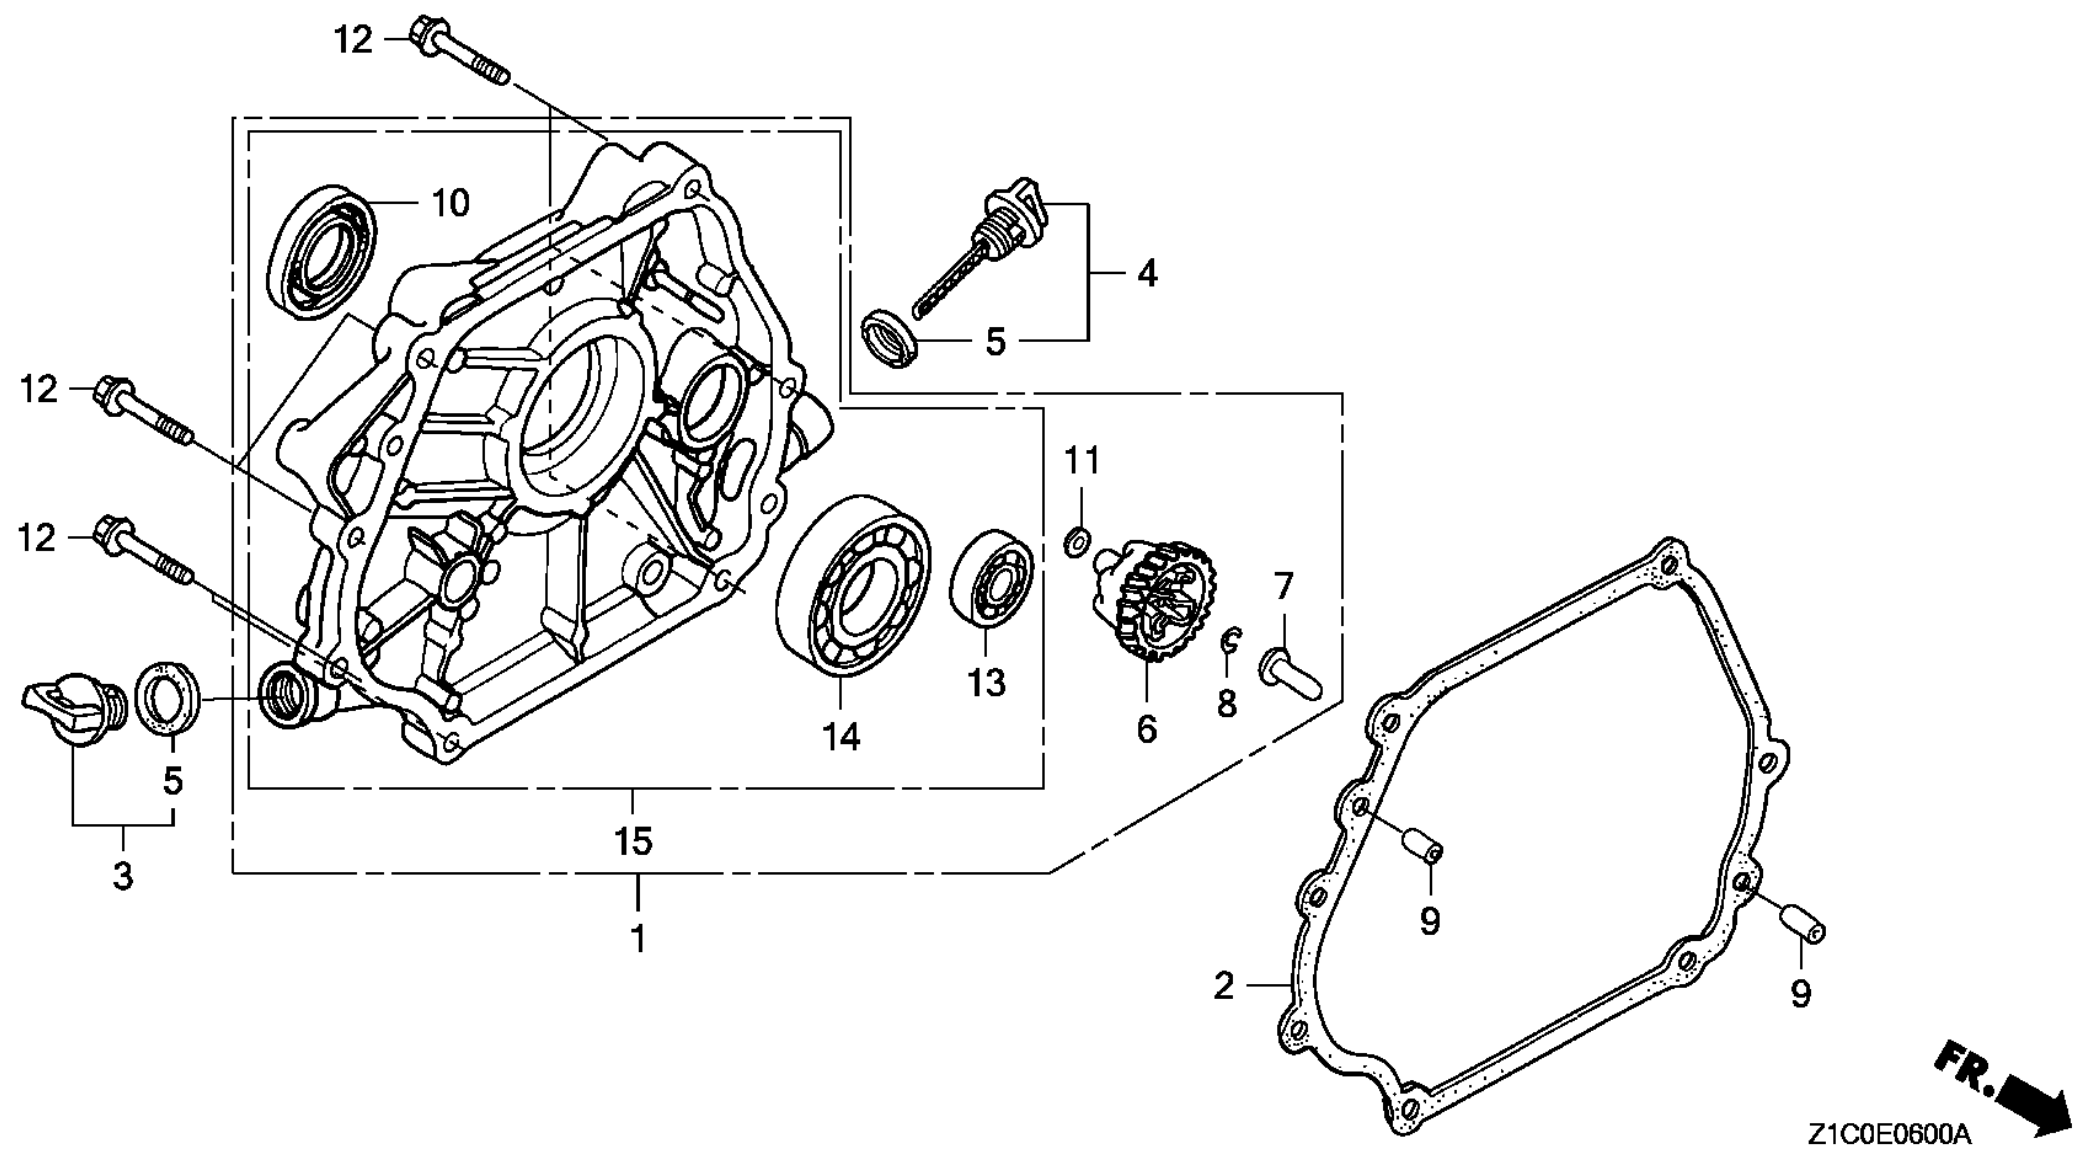


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1		(15)	
	1101F1	COVER, CRANKCASE -------------	0.2
2	1101E9	PACKING, CRANKCASE COVER -----	0.2
6	1161C4	GOVERNOR ASSEMBLY -----------	0.3
7	1161B6	SLIDER, GOVERNOR -------------	0.3
10	1101E5	OIL SEAL, CRANKSHAFT :REAR ---	0.3
13	1101F5	BEARING, BALANCER WEIGHT :REAR	0.4
14	1101A6	BEARING, CRANKSHAFT :REAR ----	0.4

2


Ref. No.	Part No.	Description	Reqd. QTY GX390 T1	Serial No.	Parts catalogue code
1	11300-Z1C-000	COVER ASSY., CRANKCASE ------	1	-------- --------	SH,SHE,SN,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4
	11300-Z1C-600	---------------------------	1	-------- --------	PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
2	11381-ZE3-801	PACKING, CASE COVER ---------	1	-------- --------	PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBH,QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SWE,SWE2,SWX,SWX2,SX SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
3	15600-Z0T-820	CAP ASSY., OIL FILLER -------	1	-------- --------	PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBH,QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SWE,SWE2,SWX,SWX2,SX SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
4	15600-Z1C-000	CAP ASSY., OIL FILLER -------	1	-------- --------	PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBH,QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SWE,SWE2,SWX,SWX2,SX SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
5	15625-Z0T-800	PACKING, OIL FILLER CAP -----	2	-------- --------	PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBH,QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SWE,SWE2,SWX,SWX2,SX SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
6	16510-ZE3-000	GOVERNOR ASSY. --------------	1	-------- --------	PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SWE,SWE2,SWX,SWX2,SX,SXC,SXE SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
7	16531-Z0A-000	SLIDER, GOVERNOR ------------	1	-------- --------	PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SWE,SWE2,SWX,SWX2,SX,SXC,SXE SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
8	90602-ZE1-000	CLIP, GOVERNOR HOLDER -------	1	-------- --------	PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SWE,SWE2,SWX,SWX2,SX,SXC,SXE SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
9	90701-HC4-000	DOWEL PIN, 8X12 ------------	2	-------- --------	PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBH,QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SWE,SWE2,SWX,SWX2,SX SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8

CRANKCASE COVER(1)

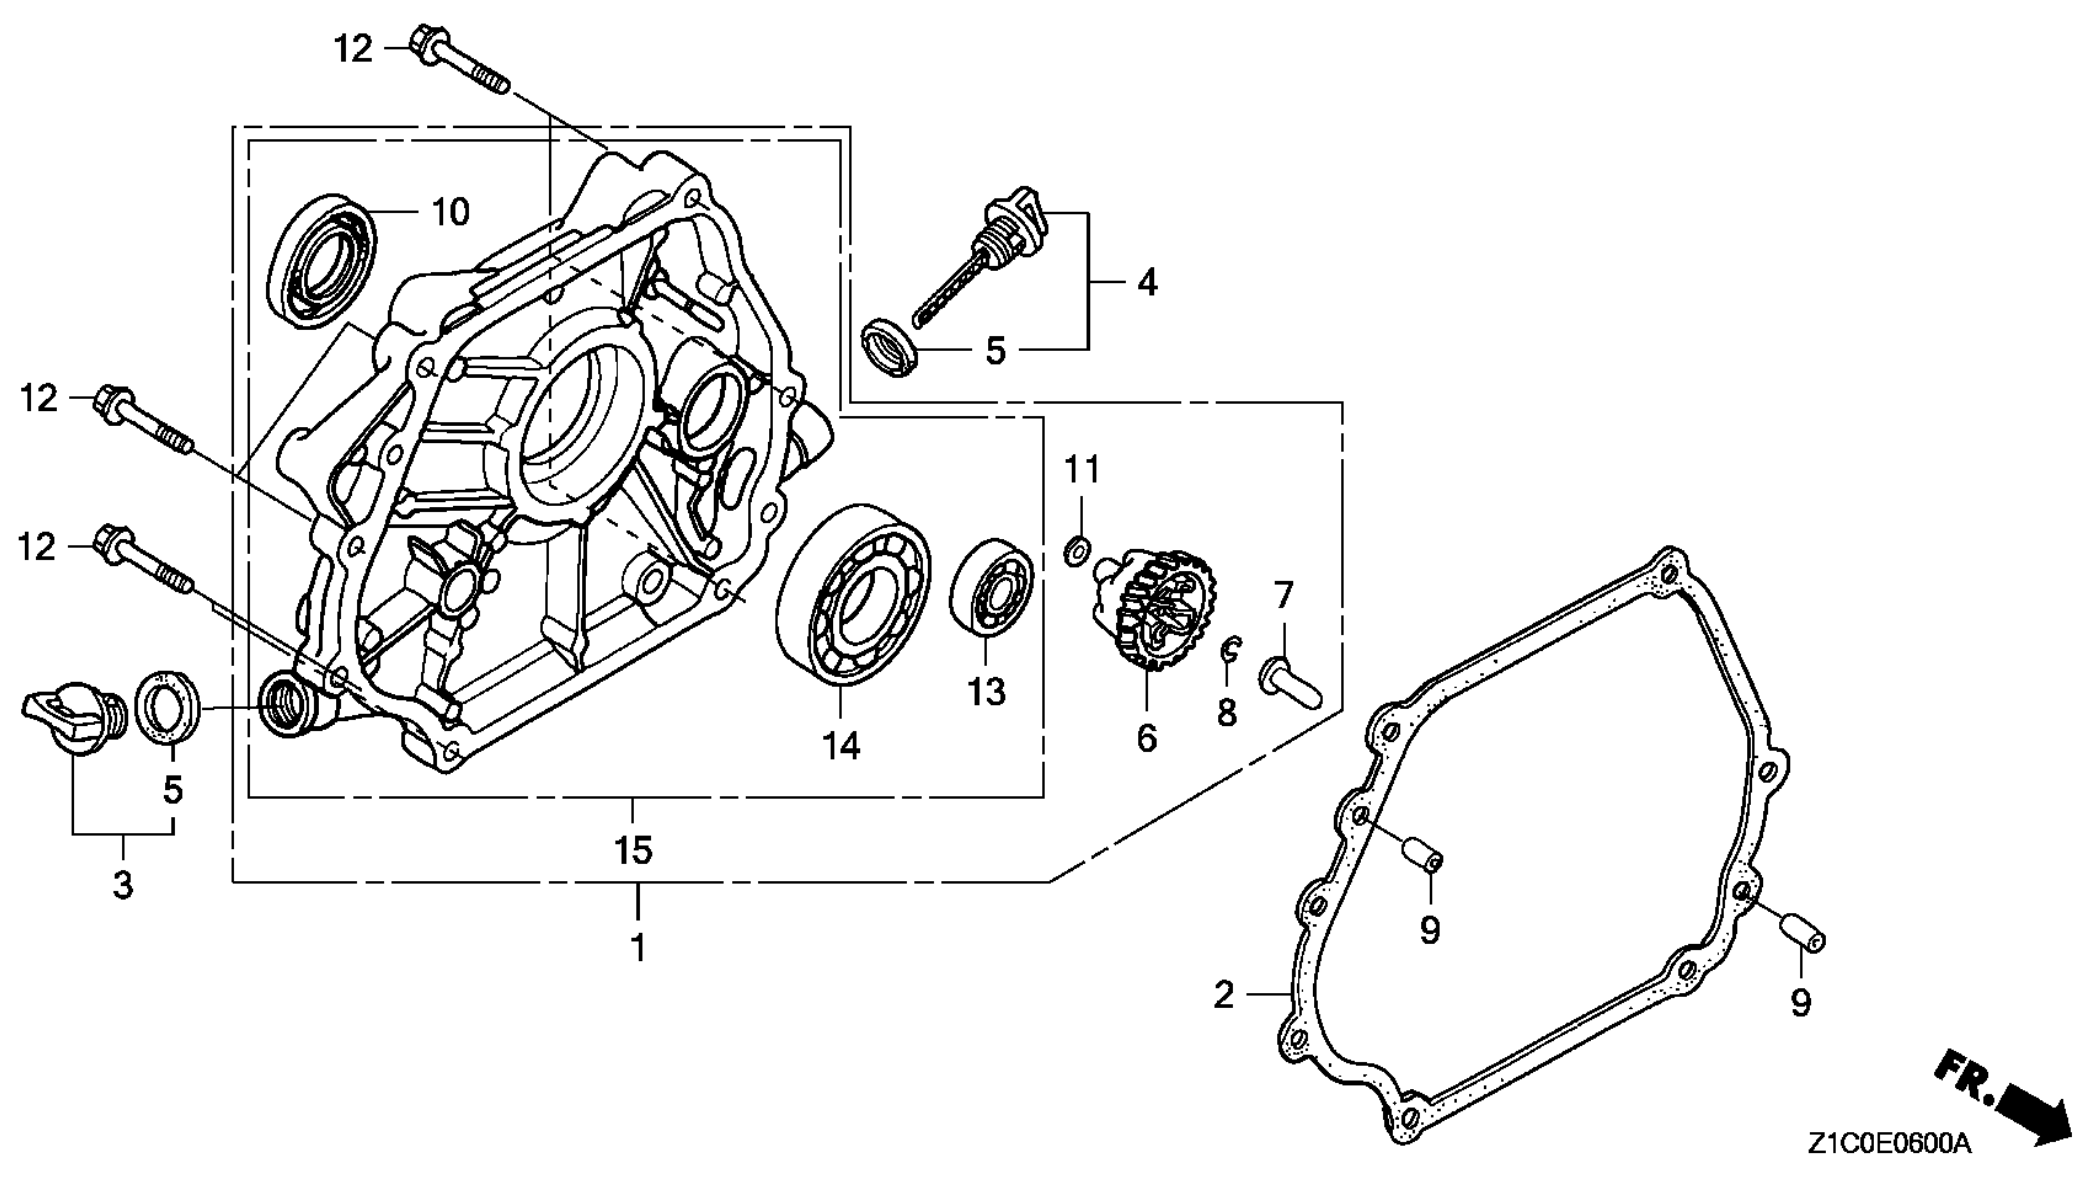

Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.	Parts catalogue code
10	91201-Z1C-003	OIL SEAL, 35X52X8 ···········	1	-------- --------	PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBH,QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SWE,SWE2,SWX,SWX2,SX SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
11	94101-06800	WASHER, PLAIN, 6MM ··········	1	-------- --------	PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SWE,SWE2,SWX,SWX2,SX,SXC,SXE SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
12	95701-08040-00	BOLT, FLANGE, 8X40 ··········	7	-------- --------	PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBH,QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SWE,SWE2,SWX,SWX2,SX SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
13	96100-62020-00	BEARING, RADIAL BALL, 6202 ··	1	-------- --------	PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBH,QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SWE,SWE2,SWX,SWX2,SX SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
14	96100-62070-00	BEARING, RADIAL BALL, 6207 ··	1	-------- --------	PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBH,QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SWE,SWE2,SWX,SWX2,SX SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
15	11300-Z1C-800	COVER ASSY., CRANKCASE ······	1	-------- --------	QBH,QBHS


CRANKCASE COVER(2)

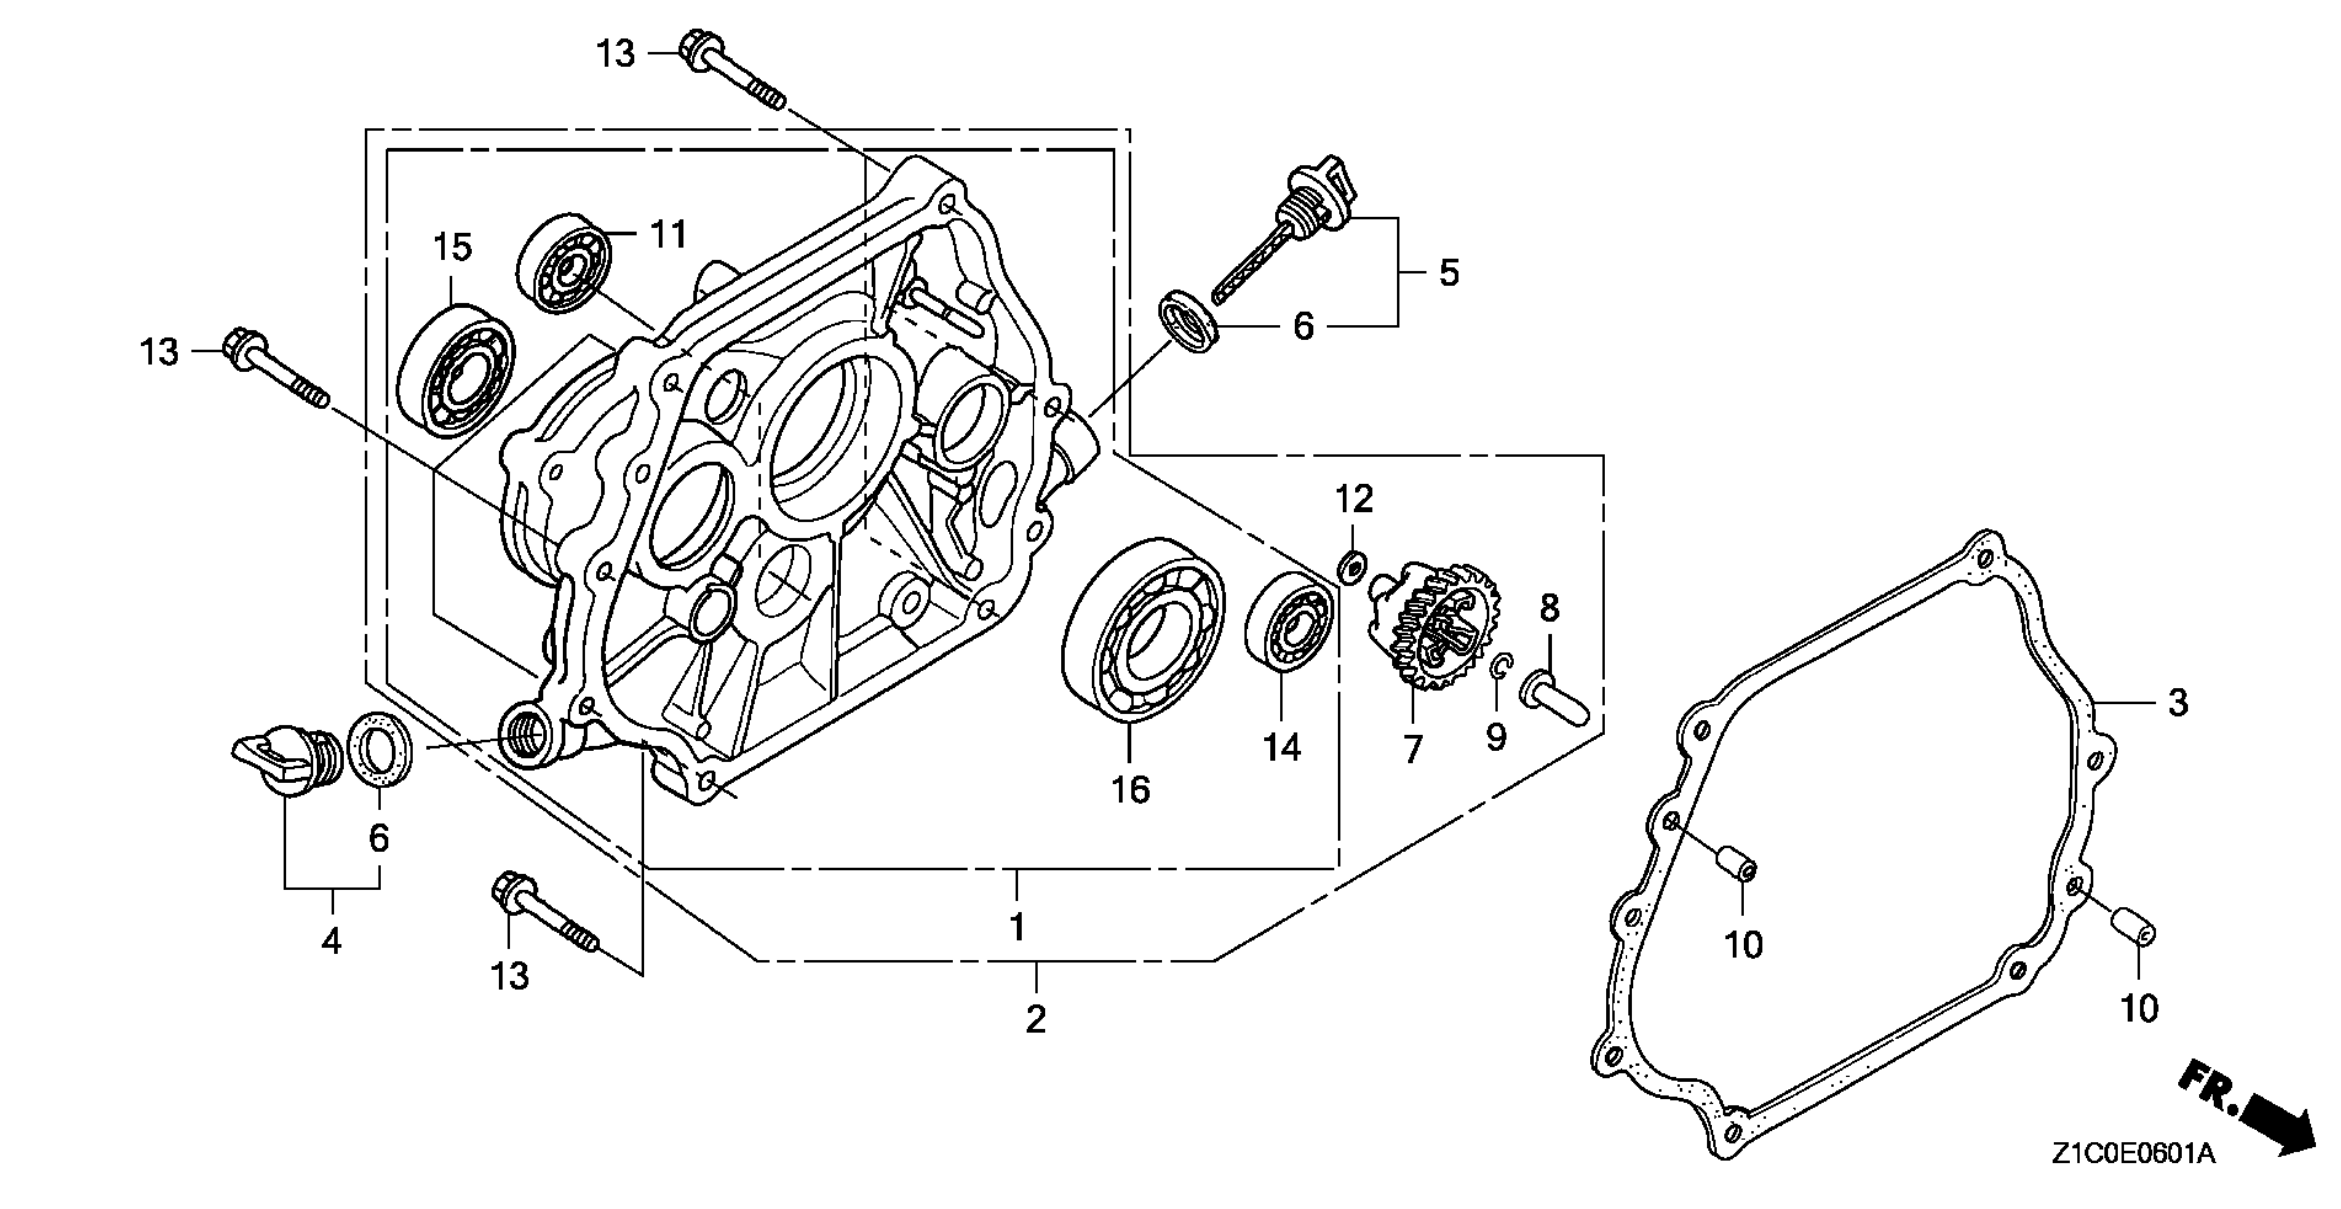

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2		(1)	
	1101G0	COVER, CRANKCASE(A) ----------	0.3
3	1101F9	PACKING, CRANKCASE COVER(A) --	0.3
7	1161C4	GOVERNOR ASSEMBLY -----------	0.3
8	1161B6	SLIDER, GOVERNOR ------------	0.3
11	2101U3	BEARING, COUNTERSHAFT :FRONT -	0.4
14	1101F5	BEARING, BALANCER WEIGHT :REAR	0.4
15	2141A7	BEARING, POWER TAKE OFF SHAFT :FRONT -------------------	0.4
16	1101A6	BEARING, CRANKSHAFT :REAR ----	0.4

Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.	Parts catalogue code
1	11300-ZE3-W00	COVER ASSY., CRANKCASE ------	1	-------- --------	LP
	11300-Z1C-810	----------------------------	1	-------- --------	LBHB
2	11300-ZE3-614	COVER ASSY., CRANKCASE ------	1	-------- --------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU
3	11381-ZE3-801	PACKING, CASE COVER ---------	1	-------- --------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU
4	15600-ZOT-820	CAP ASSY., OIL FILLER -------	1	-------- --------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU
5	15600-Z1C-000	CAP ASSY., OIL FILLER -------	1	-------- --------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU
6	15625-ZOT-800	PACKING, OIL FILLER CAP -----	2	-------- --------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU
7	16510-ZE3-000	GOVERNOR ASSY. --------------	1	-------- --------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU
8	16531-Z0A-000	SLIDER, GOVERNOR ------------	1	-------- --------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU
9	90602-ZE1-000	CLIP, GOVERNOR HOLDER -------	1	-------- --------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU
10	90701-HC4-000	DOWEL PIN, 8X12 -------------	2	-------- --------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU
11	91009-KJ1-003	BEARING, RADIAL BALL, 6202 (NTN)	1	-------- --------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU
12	94101-06800	WASHER, PLAIN, 6MM ----------	1	-------- --------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU
13	95701-08040-00	BOLT, FLANGE, 8X40 ----------	7	-------- --------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU
14	96100-62020-00	BEARING, RADIAL BALL, 6202 --	1	-------- --------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU
15	96100-62040-00	BEARING, RADIAL BALL, 6204 --	1	-------- --------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU
16	96100-62070-00	BEARING, RADIAL BALL, 6207 --	1	-------- --------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU


CRANKSHAFT

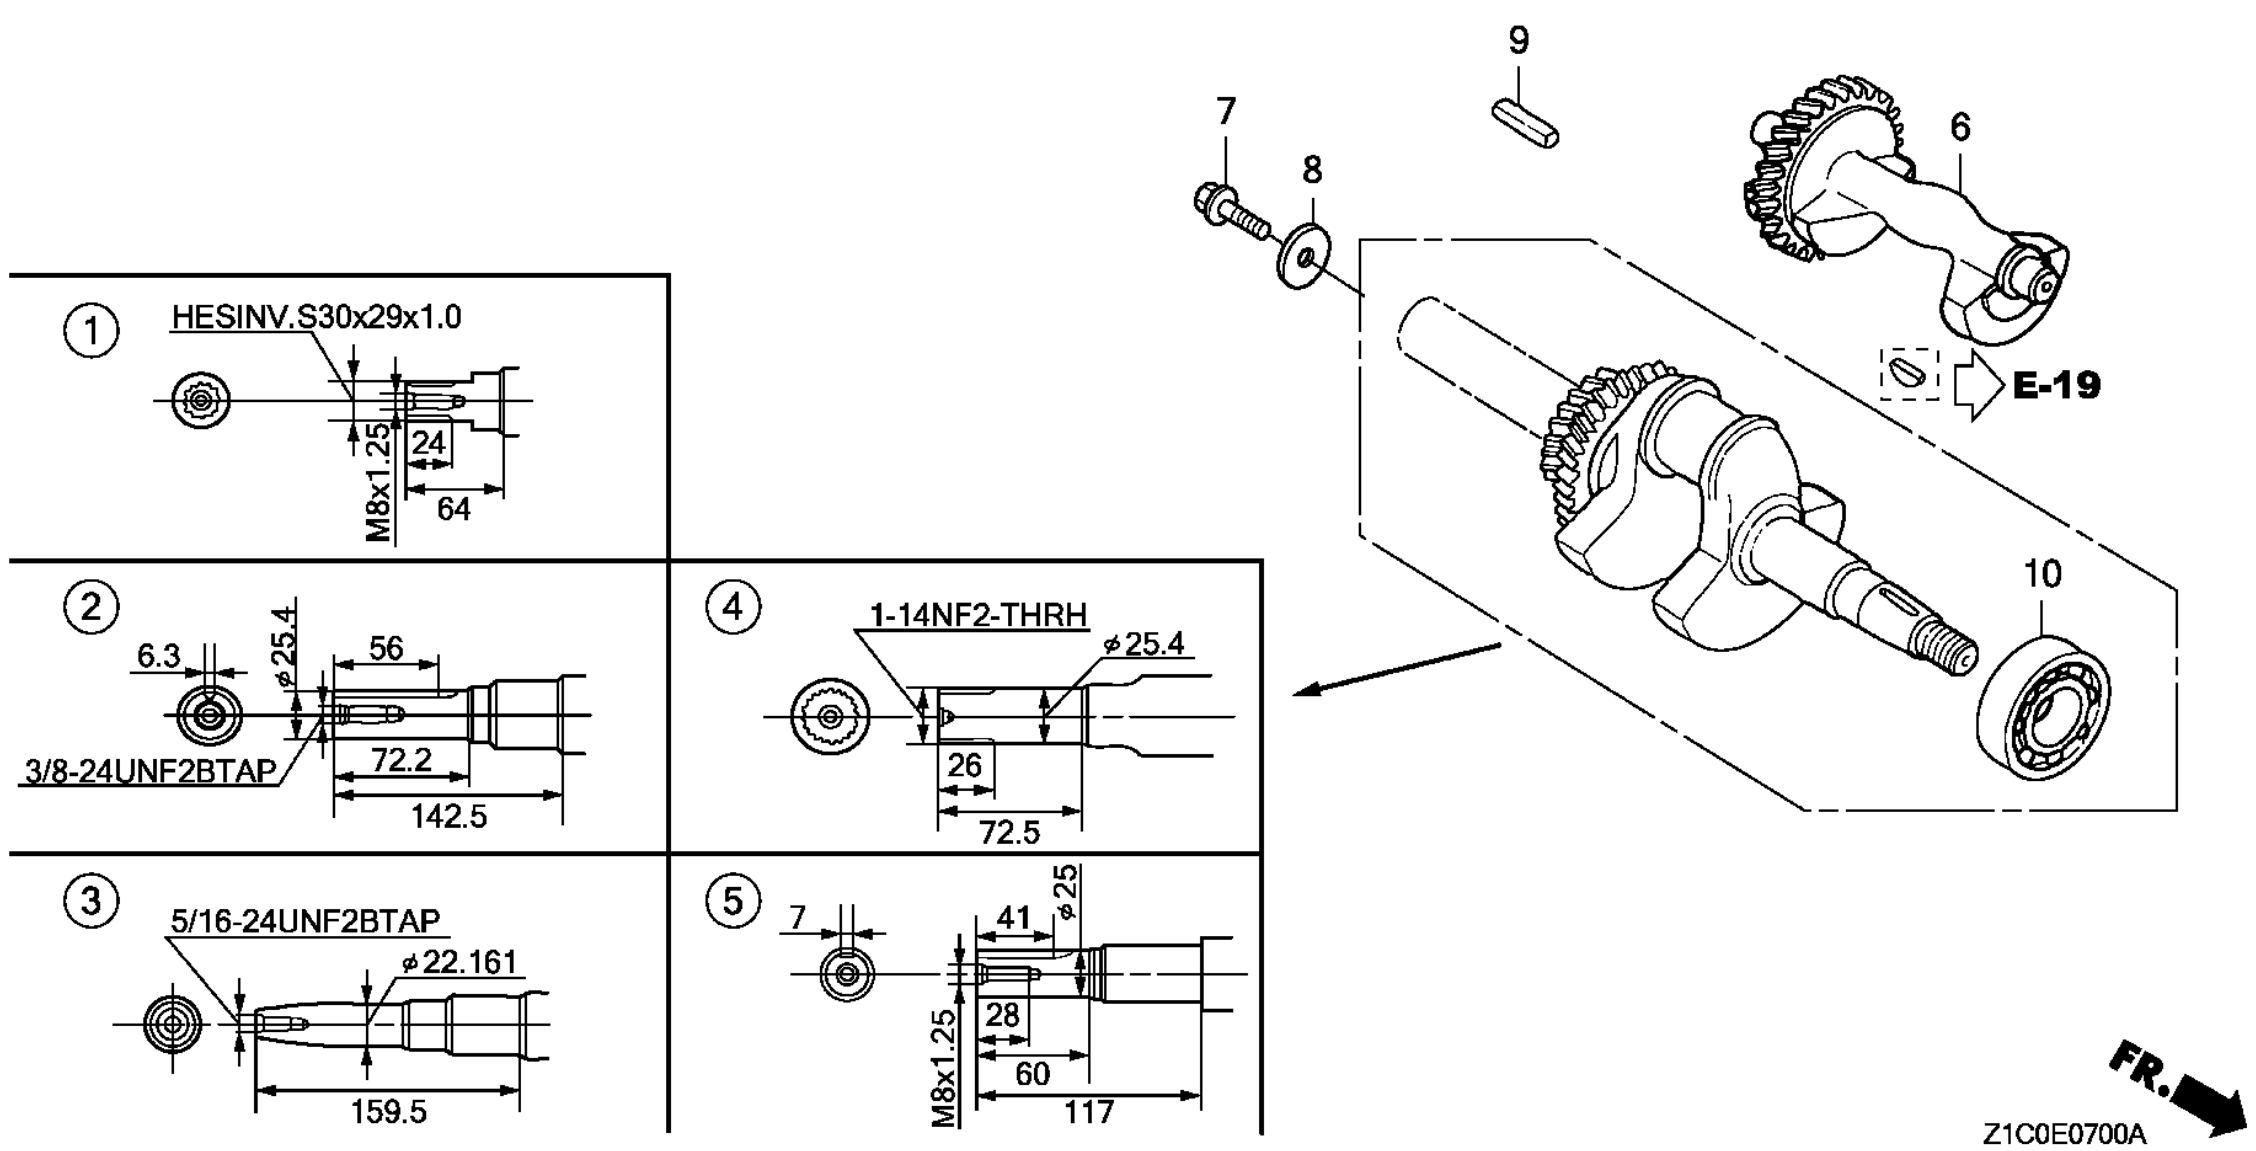

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1		(2,3,4,5)	
	1101F0	CRANKSHAFT -------------------	1.1
6	1101D8	WEIGHT, BALANCER ------------	0.4
10	1101A4	BEARING, CRANKSHAFT :FRONT ---	1.3

Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.		Parts catalogue code
1	13310-ZF6-W20	CRANKSHAFT COMP. ------------	1	--------	--------	LH,LHB5,LHP1,LT,LXE8,LXU
	13310-ZF6-Y30	---------------------------	1	--------	1234907	LP
	13310-ZF6-Y31	---------------------------	1	1234908	1284384	LP
	13310-ZF6-W22	---------------------------	1	--------	--------	LBHB,LH2,LXE9
	13310-ZF6-Y32	---------------------------	1	1284385	--------	LP
2	13310-Z1C-810	CRANKSHAFT COMP. ------------	1	--------	1183356	QAA2,QAA6,QA2,QA26,QH,QHB3,QHB5,QHP1,QMH,QP,QT,QX,QXE,QXE8,QXQ4,QXU
	13310-ZF6-W11	---------------------------	1	1183357	1331623	QAA2,QAA6,QA2,QA26,QH,QHB3,QHB5,QHP1,QMH,QP,QT,QX,QXE,QXE8,QXQ4,QXU
	13310-ZF6-W12	---------------------------	1	--------	--------	QBH,QBHS,QBLS,QBS,QN,QTD,QXEK,QXK
			1	1331624	--------	QAA2,QAA6,QA2,QA26,QH,QHB3,QHB5,QHP1,QMH,QP,QT,QX,QXE,QXE8,QXQ4,QXU
3	13310-Z1C-840	CRANKSHAFT COMP. ------------	1	--------	1248887	VTE5,VX,VXE,VXE8,VXU1,VX8
	13310-ZF6-W41	---------------------------	1	1248888	1337116	VTE5,VX,VXE,VXE8,VXU1,VX8
	13310-ZF6-W42	---------------------------	1	--------	--------	VSP,VXK
			1	1337117	--------	VTE5,VX,VXE,VXE8,VXU1,VX8
4	13310-Z1C-860	CRANKSHAFT COMP. ------------	1	--------	--------	PX,PXE8,PXU
5	13310-Z1C-870	CRANKSHAFT COMP. ------------	1	--------	--------	SH,SHE,SN,SWE,SWX,SX,SXC,SXE,SXE8,SXQ4
	13310-ZF6-W72	---------------------------	1	--------	--------	SWE2,SWX2
6	13351-ZE3-010	WEIGHT, BALANCER ------------	1			
7	90107-959-003	BOLT, HEX., 8X25 ------------	1	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU
8	90473-ZE3-010	WASHER, 8MM -----------------	1	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU
9	90741-805-000	KEY, 7X7X33 -----------------	1	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LP,LXE8,LXE9,LXU,SH,SHE,SN,SWE,SWE2,SWX,SWX2,SX,SXC SXE,SXE8,SXQ4
	90741-889-810	KEY, 7X7X33(YELLOW) ---------	(1)	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LP,LXE8,LXE9,LXU,SH,SHE,SN,SWE,SWE2,SWX,SWX2,SX,SXC SXE,SXE8,SXQ4
	90745-ZE2-600	KEY, 6.3X6.3X43 -------------	1	--------	--------	QAA2,QAA6,QA2,QA26,QBH,QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU


CRANKSHAFT

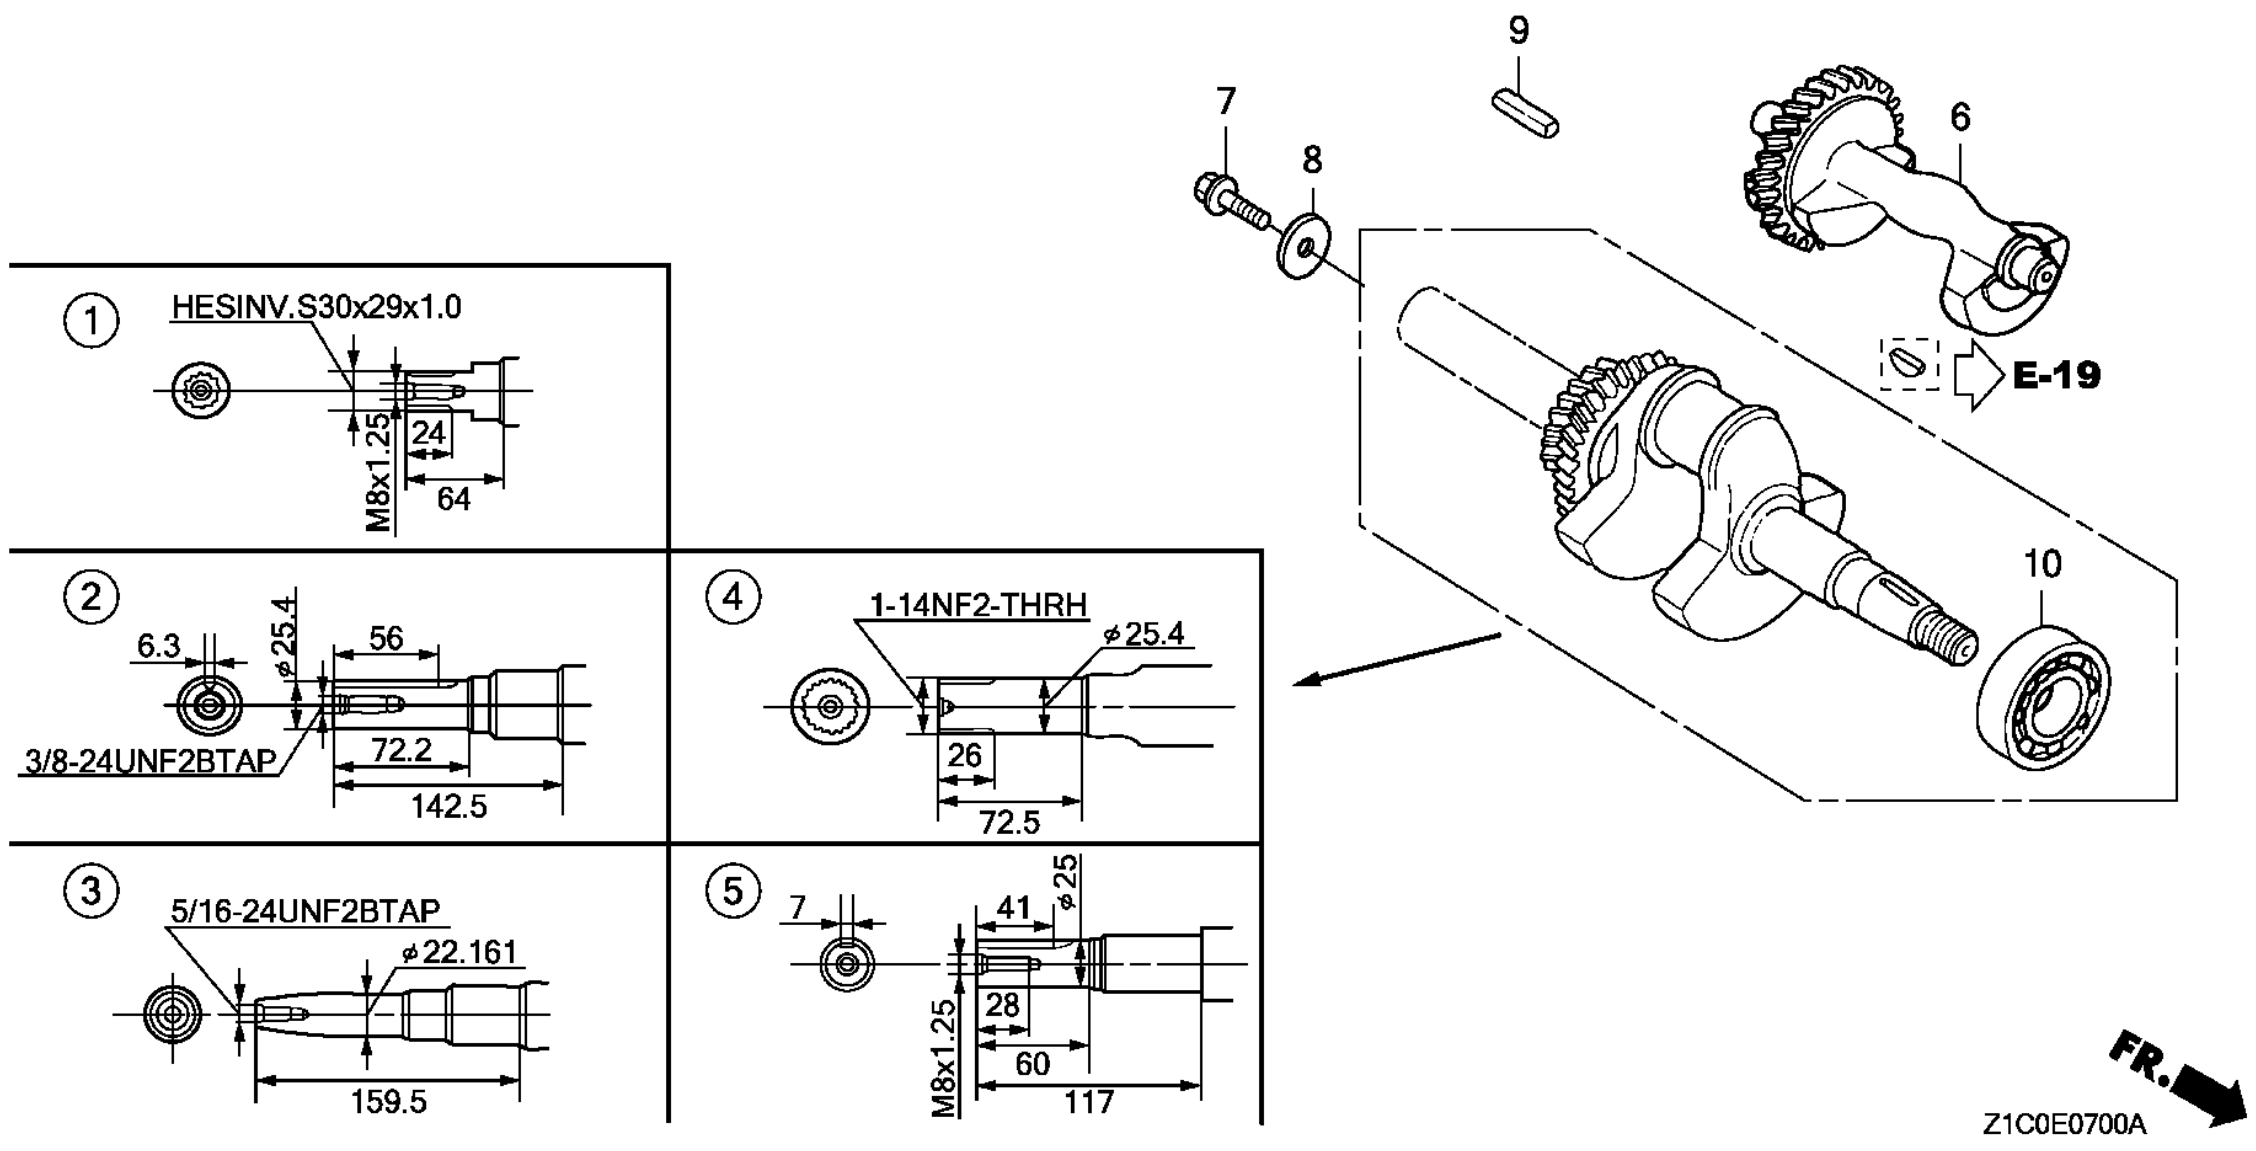

Ref. No.	Part No.	Description	Reqd. QTY GX390 T1	Serial No.		Parts catalogue code
10	91001-ZF6-003	BEARING, RADIAL BALL, 6207S ·	1	--------	--------	LH,LHB5,LHP1,LT,LXE8,LXU,PX,PXE8,PXU,SH,SHE,SN,SWE,SWX,SX,SXC,SXE,SXE8 SXQ4
			1	--------	1284384	LP
			1	--------	1331623	QAA2,QAA6,QA2,QA26,QH,QHB3,QHB5,QHP1,QMH,QP,QT,QX,QXE,QXE8,QXQ4,QXU
			1	--------	1337116	VTE5,VX,VXE,VXE8,VXU1,VX8
	91001-ZF6-013	BEARING, RADIAL BALL, 6207SH	1	--------	--------	LBHB,LH2,LXE9,QBH,QBHS,QBLS,QBS,QN,QTD,QXEK,QXK,SWE2,SWX2,VSP,VXK
			1	1284385	--------	LP
			1	1331624	--------	QAA2,QAA6,QA2,QA26,QH,QHB3,QHB5,QHP1,QMH,QP,QT,QX,QXE,QXE8,QXQ4,QXU
			1	1337117	--------	VTE5,VX,VXE,VXE8,VXU1,VX8

2

PISTON

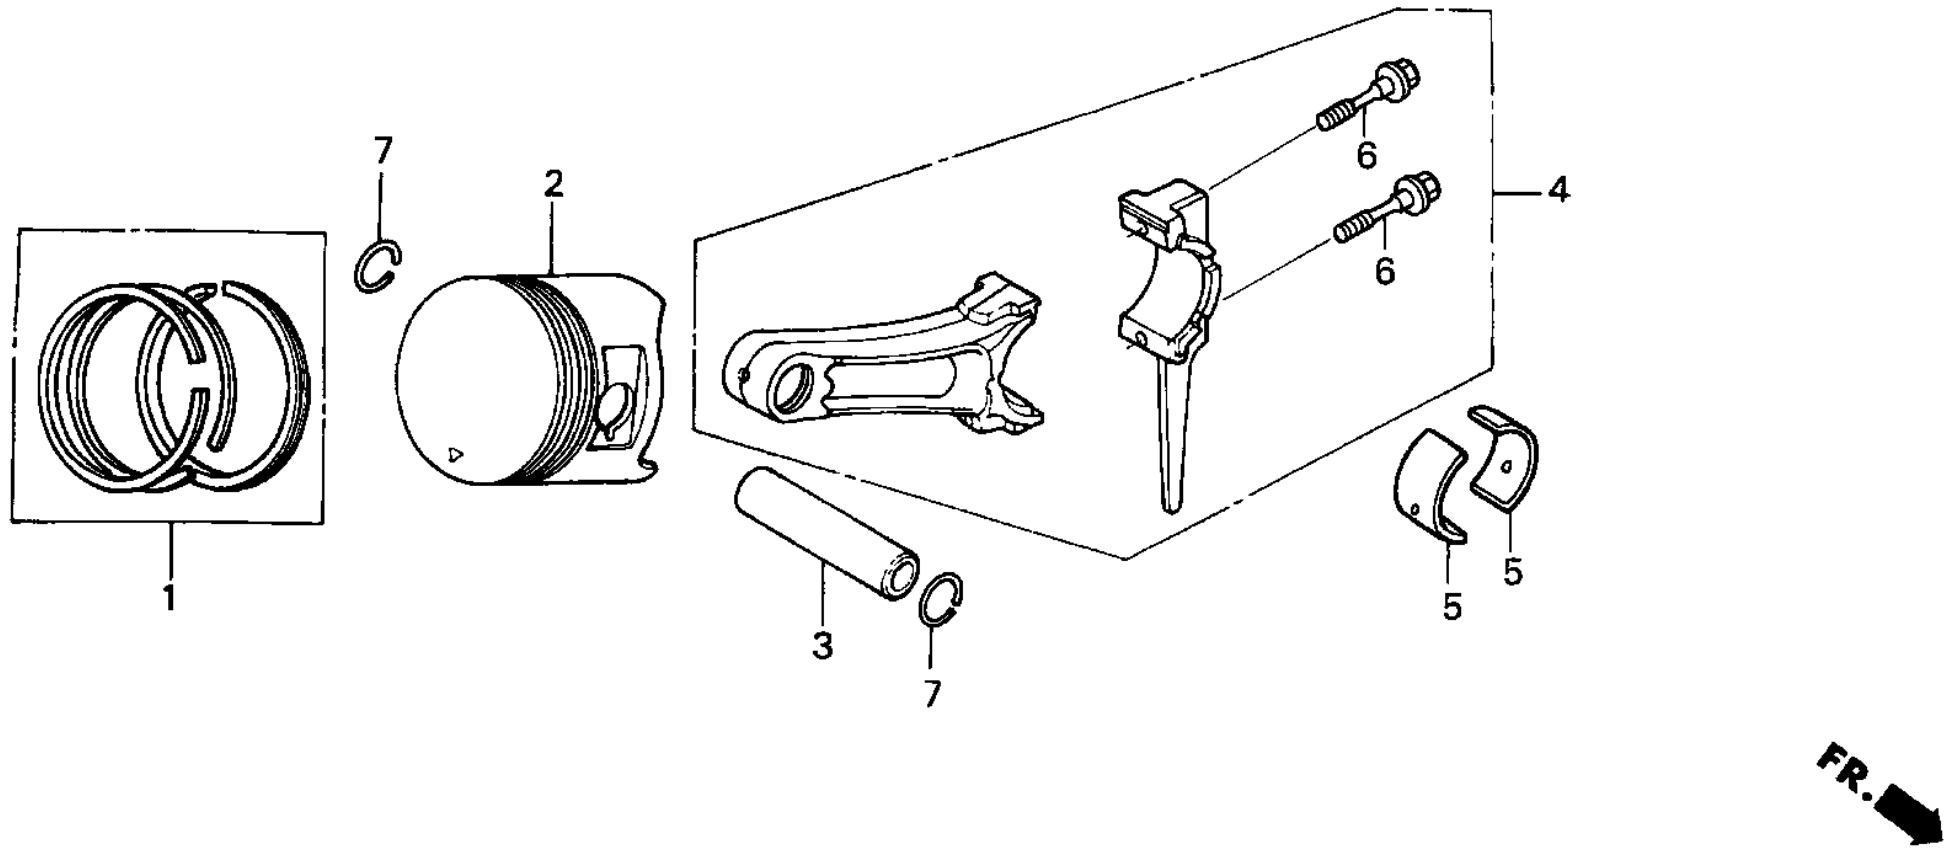

Z1C0-E0800


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	1111R1	(1,3,4,5) PISTON AND/OR RING SET AND/OR BEARING AND/OR ROD ---------- .INCLUDES: Inspection/ Measurement/Cleaning	1.2

Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.		Parts catalogue code
1	13010-Z1C-800	RING SET, PISTON (STD.)(RIKEN)	1	--------	--------	LXE8,LXU,PXE8,PXU,QAA2,QAA6,QA2,QA26,QXE8,QXQ4,QXU,SXE8,SXQ4,VXE8,VX8
			1	--------	1438369	LH,LHB5,LHP1,LP,LT,LXE9,PX,QH,QHB3,QHB5,QHP1,QMH,QX,QXE,QXEK,QXK,SH,SHE SWE,SWX,SX,SXC,SXE,VSP,VTE5,VX,VXE,VXK,VXU1
			1	--------	1450800	QN,QP,QT,QTD,SN
	13011-Z1C-800	RING SET, PISTON (0.25)(RIKEN)	(1)	--------	--------	LXE8,LXU,PXE8,PXU,QAA2,QAA6,QA2,QA26,QXE8,QXQ4,QXU,SXE8,SXQ4,VXE8,VX8
			(1)	--------	1438369	LH,LHB5,LHP1,LP,LT,LXE9,PX,QH,QHB3,QHB5,QHP1,QMH,QX,QXE,QXEK,QXK,SH,SHE SWE,SWX,SX,SXC,SXE,VSP,VTE5,VX,VXE,VXK,VXU1
			(1)	--------	1450800	QN,QP,QT,QTD,SN
	13012-Z1C-800	RING SET, PISTON (0.50)(RIKEN)	(1)	--------	--------	LXE8,LXU,PXE8,PXU,QAA2,QAA6,QA2,QA26,QXE8,QXQ4,QXU,SXE8,SXQ4,VXE8,VX8
			(1)	--------	1438369	LH,LHB5,LHP1,LP,LT,LXE9,PX,QH,QHB3,QHB5,QHP1,QMH,QX,QXE,QXEK,QXK,SH,SHE SWE,SWX,SX,SXC,SXE,VSP,VTE5,VX,VXE,VXK,VXU1
			(1)	--------	1450800	QN,QP,QT,QTD,SN
	13013-Z1C-800	RING SET, PISTON (0.75)(RIKEN)	(1)	--------	--------	LXE8,LXU,PXE8,PXU,QAA2,QAA6,QA2,QA26,QXE8,QXQ4,QXU,SXE8,SXQ4,VXE8,VX8
			(1)	--------	1438369	LH,LHB5,LHP1,LP,LT,LXE9,PX,QH,QHB3,QHB5,QHP1,QMH,QX,QXE,QXEK,QXK,SH,SHE SWE,SWX,SX,SXC,SXE,VSP,VTE5,VX,VXE,VXK,VXU1
			(1)	--------	1450800	QN,QP,QT,QTD,SN
	13010-Z5R-004	RING SET, PISTON (STD.) (TEIKOKU)	1	--------	--------	LBHB,LH2,QBH,QBHS,QBLS,QBS,SWE2,SWX2
			1	1438370	--------	LH,LHB5,LHP1,LP,LT,LXE9,PX,QH,QHB3,QHB5,QHP1,QMH,QX,QXE,QXEK,QXK,SH,SHE SWE,SWX,SX,SXC,SXE,VSP,VTE5,VX,VXE,VXK,VXU1
			1	1450801	--------	QN,QP,QT,QTD,SN
	13010-Z5T-003	RING SET, PISTON (STD.)(RIKEN)	1	--------	--------	LBHB,LH2,QBH,QBHS,QBLS,QBS,SWE2,SWX2
			1	1438370	--------	LH,LHB5,LHP1,LP,LT,LXE9,PX,QH,QHB3,QHB5,QHP1,QMH,QX,QXE,QXEK,QXK,SH,SHE SWE,SWX,SX,SXC,SXE,VSP,VTE5,VX,VXE,VXK,VXU1
			1	1450801	--------	QN,QP,QT,QTD,SN

PISTON

Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.		Parts catalogue code
(1)	13011-Z5R-004	RING SET, PISTON (0.25) (TEIKOKU)	(1)	--------	--------	LBHB,LH2,QBH,QBHS,QBLS,QBS,SWE2,SWX2
			(1)	1438370	--------	LH,LHB5,LHP1,LP,LT,LXE9,PX,QH,QHB3,QHB5,QHP1,QMH,QX,QXE,QXEK,QXK,SH,SHE SWE,SWX,SX,SXC,SXE,VSP,VTE5,VX,VXE,VXK,VXU1
			(1)	1450801	--------	QN,QP,QT,QTD,SN
	13011-Z5T-003	RING SET, PISTON (0.25)(RIKEN)	(1)	--------	--------	LBHB,LH2,QBH,QBHS,QBLS,QBS,SWE2,SWX2
			(1)	1438370	--------	LH,LHB5,LHP1,LP,LT,LXE9,PX,QH,QHB3,QHB5,QHP1,QMH,QX,QXE,QXEK,QXK,SH,SHE SWE,SWX,SX,SXC,SXE,VSP,VTE5,VX,VXE,VXK,VXU1
			(1)	1450801	--------	QN,QP,QT,QTD,SN
	13012-Z5R-004	RING SET, PISTON (0.50) (TEIKOKU)	(1)	--------	--------	LBHB,LH2,QBH,QBHS,QBLS,QBS,SWE2,SWX2
			(1)	1438370	--------	LH,LHB5,LHP1,LP,LT,LXE9,PX,QH,QHB3,QHB5,QHP1,QMH,QX,QXE,QXEK,QXK,SH,SHE SWE,SWX,SX,SXC,SXE,VSP,VTE5,VX,VXE,VXK,VXU1
			(1)	1450801	--------	QN,QP,QT,QTD,SN
	13012-Z5T-003	RING SET, PISTON (0.50)(RIKEN)	(1)	--------	--------	LBHB,LH2,QBH,QBHS,QBLS,QBS,SWE2,SWX2
			(1)	1438370	--------	LH,LHB5,LHP1,LP,LT,LXE9,PX,QH,QHB3,QHB5,QHP1,QMH,QX,QXE,QXEK,QXK,SH,SHE SWE,SWX,SX,SXC,SXE,VSP,VTE5,VX,VXE,VXK,VXU1
			(1)	1450801	--------	QN,QP,QT,QTD,SN
	13013-Z5R-004	RING SET, PISTON (0.75) (TEIKOKU)	(1)	--------	--------	LBHB,LH2,QBH,QBHS,QBLS,QBS,SWE2,SWX2
			(1)	1438370	--------	LH,LHB5,LHP1,LP,LT,LXE9,PX,QH,QHB3,QHB5,QHP1,QMH,QX,QXE,QXEK,QXK,SH,SHE SWE,SWX,SX,SXC,SXE,VSP,VTE5,VX,VXE,VXK,VXU1
			(1)	1450801	--------	QN,QP,QT,QTD,SN
	13013-Z5T-003	RING SET, PISTON (0.75)(RIKEN)	(1)	--------	--------	LBHB,LH2,QBH,QBHS,QBLS,QBS,SWE2,SWX2
			(1)	1438370	--------	LH,LHB5,LHP1,LP,LT,LXE9,PX,QH,QHB3,QHB5,QHP1,QMH,QX,QXE,QXEK,QXK,SH,SHE SWE,SWX,SX,SXC,SXE,VSP,VTE5,VX,VXE,VXK,VXU1
			(1)	1450801	--------	QN,QP,QT,QTD,SN
2	13101-ZF6-W00	PISTON (STD.) ----------------	1	--------	--------	LXE8,LXU,PXE8,PXU,QAA2,QAA6,QA2,QA26,QXE8,QXQ4,QXU,SXE8,SXQ4,VXE8,VX8
			1	--------	1438369	LH,LHB5,LHP1,LP,LT,LXE9,PX,QH,QHB3,QHB5,QHP1,QMH,QX,QXE,QXEK,QXK,SH,SHE SWE,SWX,SX,SXC,SXE,VSP,VTE5,VX,VXE,VXK,VXU1
	13101-ZF6-810	----------------------------	1	--------	1450800	QN,QP,QT,QTD,SN
	13102-ZF6-W00	PISTON (0.25) ----------------	(1)	--------	--------	LXE8,LXU,PXE8,PXU,QAA2,QAA6,QA2,QA26,QXE8,QXQ4,QXU,SXE8,SXQ4,VXE8,VX8
			(1)	--------	1438369	LH,LHB5,LHP1,LP,LT,LXE9,PX,QH,QHB3,QHB5,QHP1,QMH,QX,QXE,QXEK,QXK,SH,SHE SN,SWE,SWX,SX,SXC,SXE,VSP,VTE5,VX,VXE,VXK,VXU1
	13102-ZF6-810	----------------------------	(1)	--------	1450800	QN,QP,QT,QTD,SN
	13103-ZF6-W00	PISTON (0.50) ----------------	(1)	--------	--------	LXE8,LXU,PXE8,PXU,QAA2,QAA6,QA2,QA26,QXE8,QXQ4,QXU,SXE8,SXQ4,VXE8,VX8
			(1)	--------	1438369	LH,LHB5,LHP1,LP,LT,LXE9,PX,QH,QHB3,QHB5,QHP1,QMH,QX,QXE,QXEK,QXK,SH,SHE SN,SWE,SWX,SX,SXC,SXE,VSP,VTE5,VX,VXE,VXK,VXU1
	13103-ZF6-810	----------------------------	(1)	--------	1450800	QN,QP,QT,QTD,SN
	13104-ZF6-W00	PISTON (0.75) ----------------	(1)	--------	--------	LXE8,LXU,PXE8,PXU,QAA2,QAA6,QA2,QA26,QXE8,QXQ4,QXU,SXE8,SXQ4,VXE8,VX8
			(1)	--------	1438369	LH,LHB5,LHP1,LP,LT,LXE9,PX,QH,QHB3,QHB5,QHP1,QMH,QX,QXE,QXEK,QXK,SH,SHE SN,SWE,SWX,SX,SXC,SXE,VSP,VTE5,VX,VXE,VXK,VXU1
	13104-ZF6-810	----------------------------	(1)	--------	1450800	QN,QP,QT,QTD,SN
	13101-ZF6-W01	PISTON (STD.) ----------------	1	--------	--------	LH2,SWE2,SWX2
	13101-ZF6-811	----------------------------	1	--------	--------	QBLS
			1	1450801	--------	QN,QP,QT,QTD,SN
	13101-Z5T-000	----------------------------	1	--------	--------	LBHB,QBH,QBHS,QBS
			1	1438370	--------	LH,LHB5,LHP1,LP,LT,LXE9,PX,QH,QHB3,QHB5,QHP1,QMH,QX,QXE,QXEK,QXK,SH,SHE SWE,SWX,SX,SXC,SXE,VSP,VTE5,VX,VXE,VXK,VXU1
	13102-ZF6-W01	PISTON (0.25) ----------------	(1)	--------	--------	LH2,SWE2,SWX2
	13102-ZF6-811	----------------------------	(1)	--------	--------	QBLS
			(1)	1450801	--------	QN,QP,QT,QTD,SN
	13102-Z5T-000	----------------------------	(1)	--------	--------	LBHB,QBH,QBHS,QBS
			(1)	1438370	--------	LH,LHB5,LHP1,LP,LT,LXE9,PX,QH,QHB3,QHB5,QHP1,QMH,QX,QXE,QXEK,QXK,SH,SHE SWE,SWX,SX,SXC,SXE,VSP,VTE5,VX,VXE,VXK,VXU1
	13103-ZF6-W01	PISTON (0.50) ----------------	(1)	--------	--------	LH2,SWE2,SWX2
	13103-ZF6-811	----------------------------	(1)	--------	--------	QBLS
			(1)	1450801	--------	QN,QP,QT,QTD,SN


PISTON

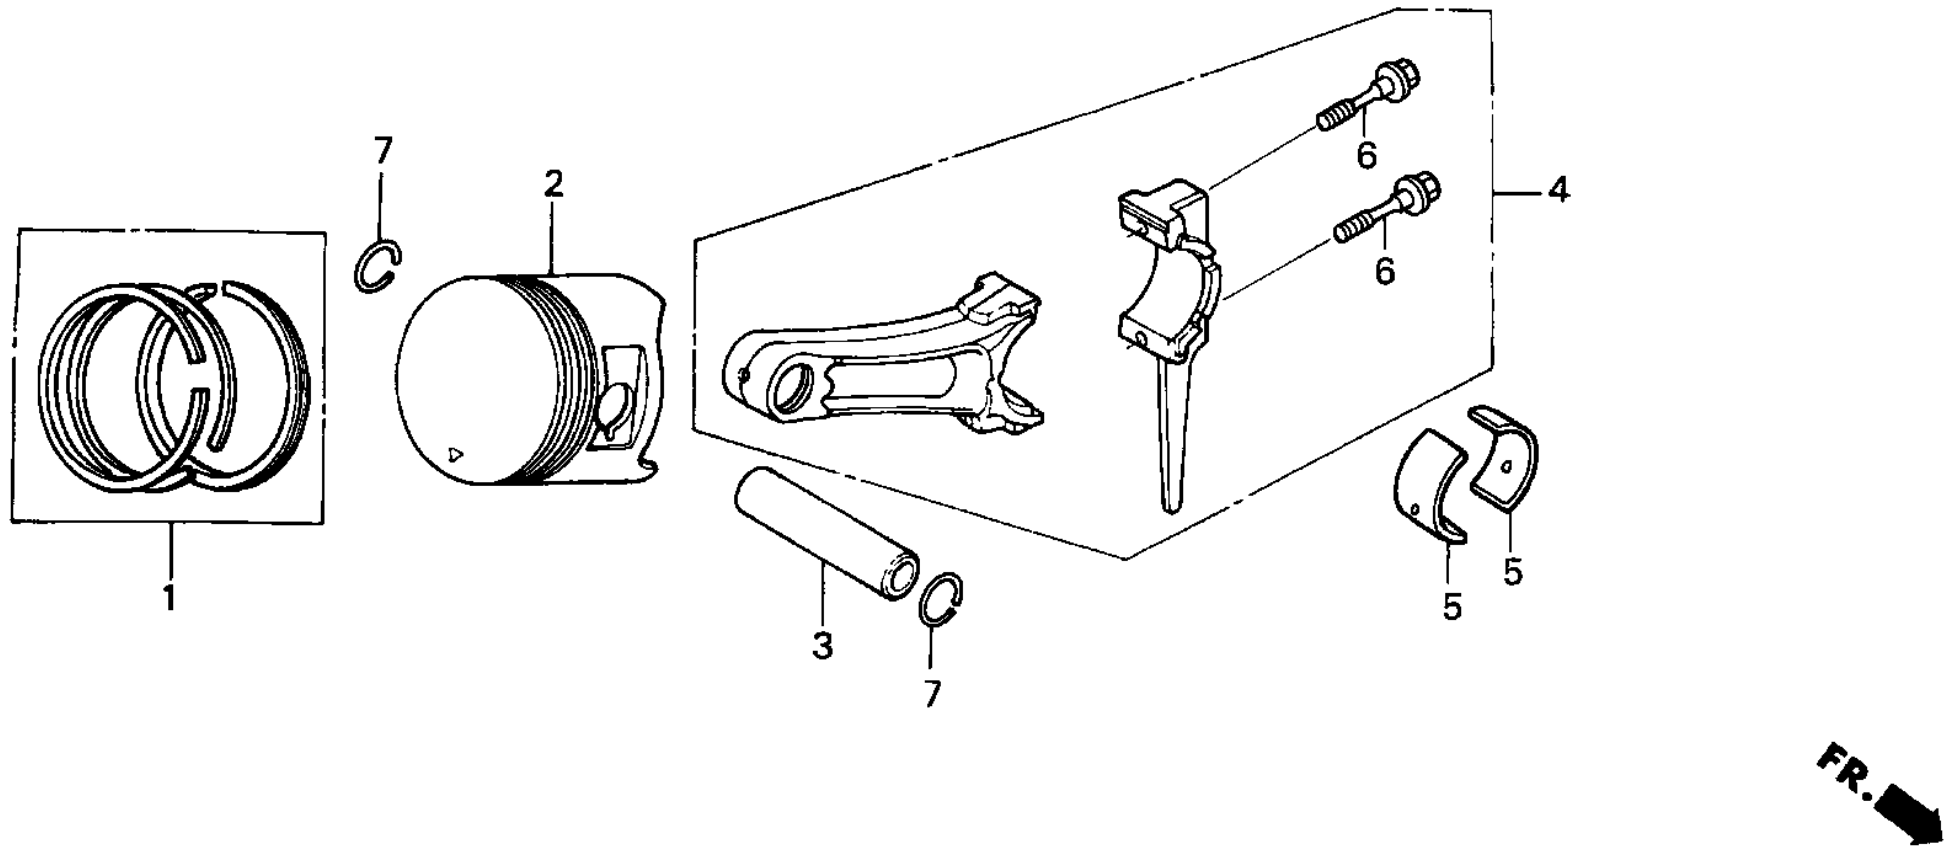

Z1C0-E0800


Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.		Parts catalogue code
(2)	13103-Z5T-000	PISTON (0.50) ················	(1)	--------	--------	LBHB,QBH,QBHS,QBS
			(1)	1438370	--------	LH,LHB5,LHP1,LP,LT,LXE9,PX,QH,QHB3,QHB5,QHP1,QMH,QX,QXE,QXEK,QXK,SH,SHE SWE,SWX,SX,SXC,SXE,VSP,VTE5,VX,VXE,VXK,VXU1
	13104-ZF6-W01	PISTON (0.75) ················	(1)	--------	--------	LH2,SWE2,SWX2
	13104-ZF6-811	····························	(1)	--------	--------	QBLS
			(1)	1450801	--------	QN,QP,QT,QTD,SN
	13104-Z5T-000	····························	(1)	--------	--------	LBHB,QBH,QBHS,QBS
			(1)	1438370	--------	LH,LHB5,LHP1,LP,LT,LXE9,PX,QH,QHB3,QHB5,QHP1,QMH,QX,QXE,QXEK,QXK,SH,SHE SWE,SWX,SX,SXC,SXE,VSP,VTE5,VX,VXE,VXK,VXU1
3	13111-ZF6-W00	PIN, PISTON ·················	1			
4	13200-Z1C-000	ROD ASSY., CONNECTING (STD.)	1	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBH QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK QXQ4,QXU,SH,SHE,SN,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE VXE8,VXK,VXU1,VX8
	13200-ZF6-000	ROD ASSY., CONNECTING ·······	1	--------	--------	LP
	13200-Z1C-305	ROD ASSY., CONNECTING (0.25 UNDER SIZE)	(1)	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBH QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK QXQ4,QXU,SH,SHE,SN,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE VXE8,VXK,VXU1,VX8
5	13215-ZF6-003	BEARING A, CONNECTING ROD (BLUE)	2	--------	--------	LP
	13216-ZF6-003	BEARING B, CONNECTING ROD (BLACK)	2	--------	--------	LP
	13217-ZF6-003	BEARING C, CONNECTING ROD (BROWN)	2	--------	--------	LP
	13218-ZF6-003	BEARING D, CONNECTING ROD (GREEN)	2	--------	--------	LP

PISTON

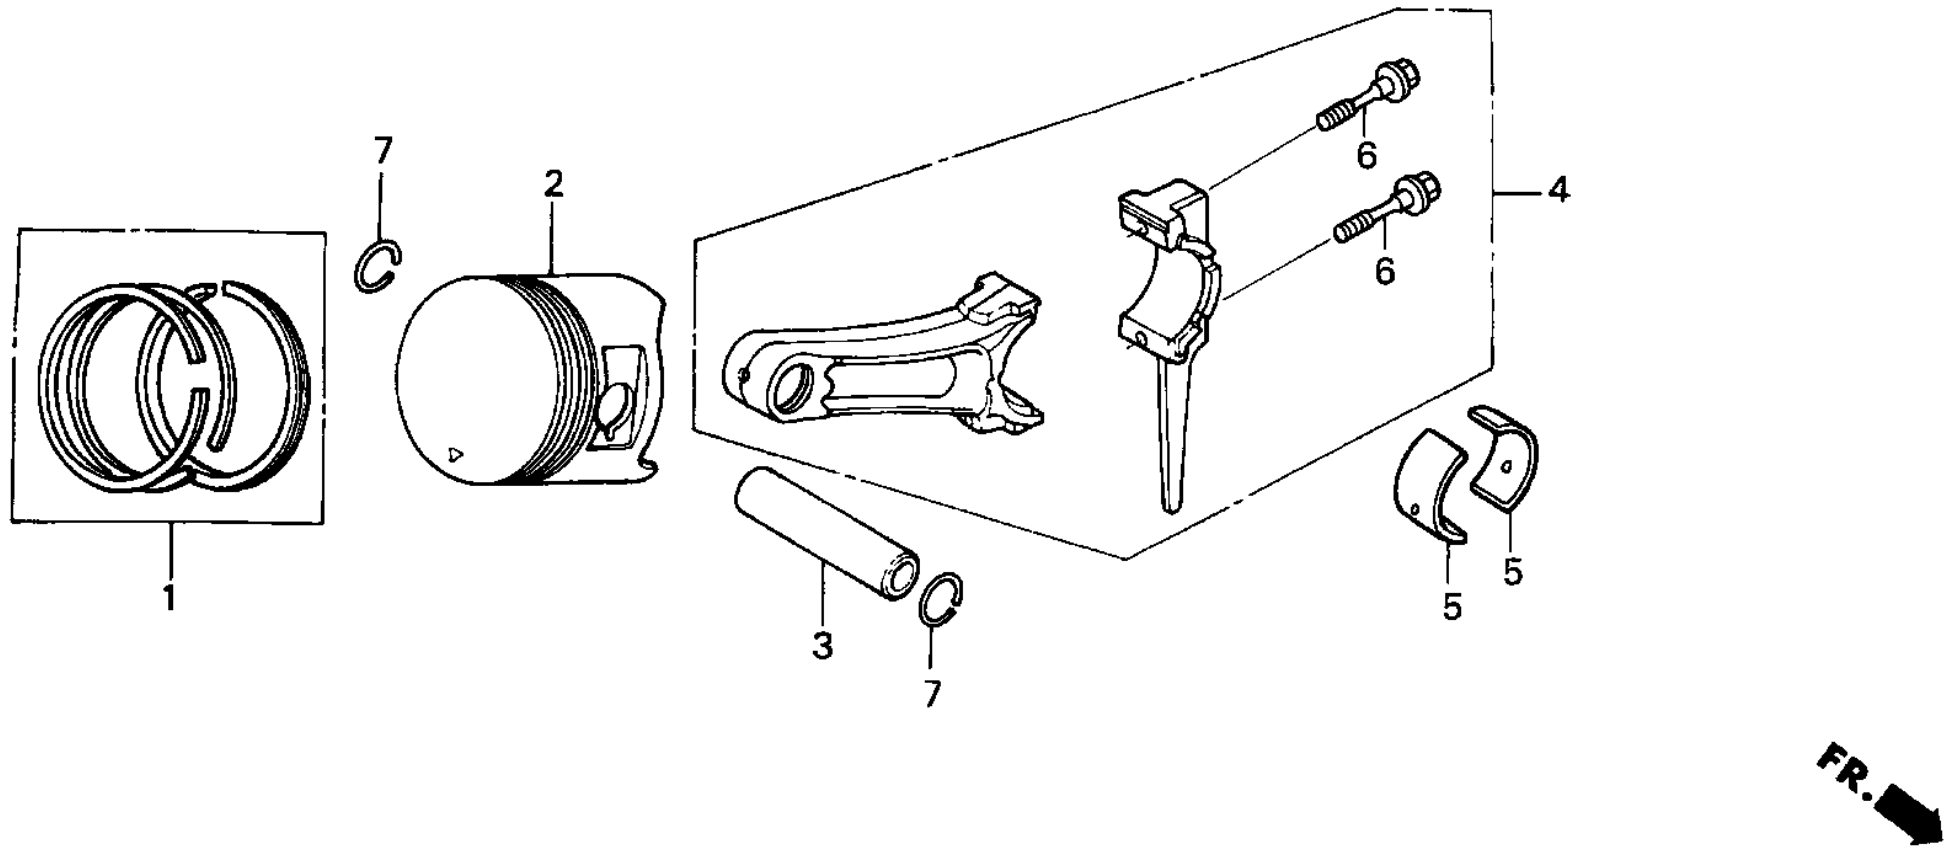

Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.		Parts catalogue code
6	90001-ZE8-000	BOLT, CONNECTING ROD --------	2	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBH QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK QXQ4,QXU,SH,SHE,SN,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE VXE8,VXK,VXU1,VX8
	90001-ZF6-003	----------------------------	2	--------	--------	LP
7	90601-ZE3-000	CLIP, PISTON PIN, 20MM ------	2			

CAMSHAFT

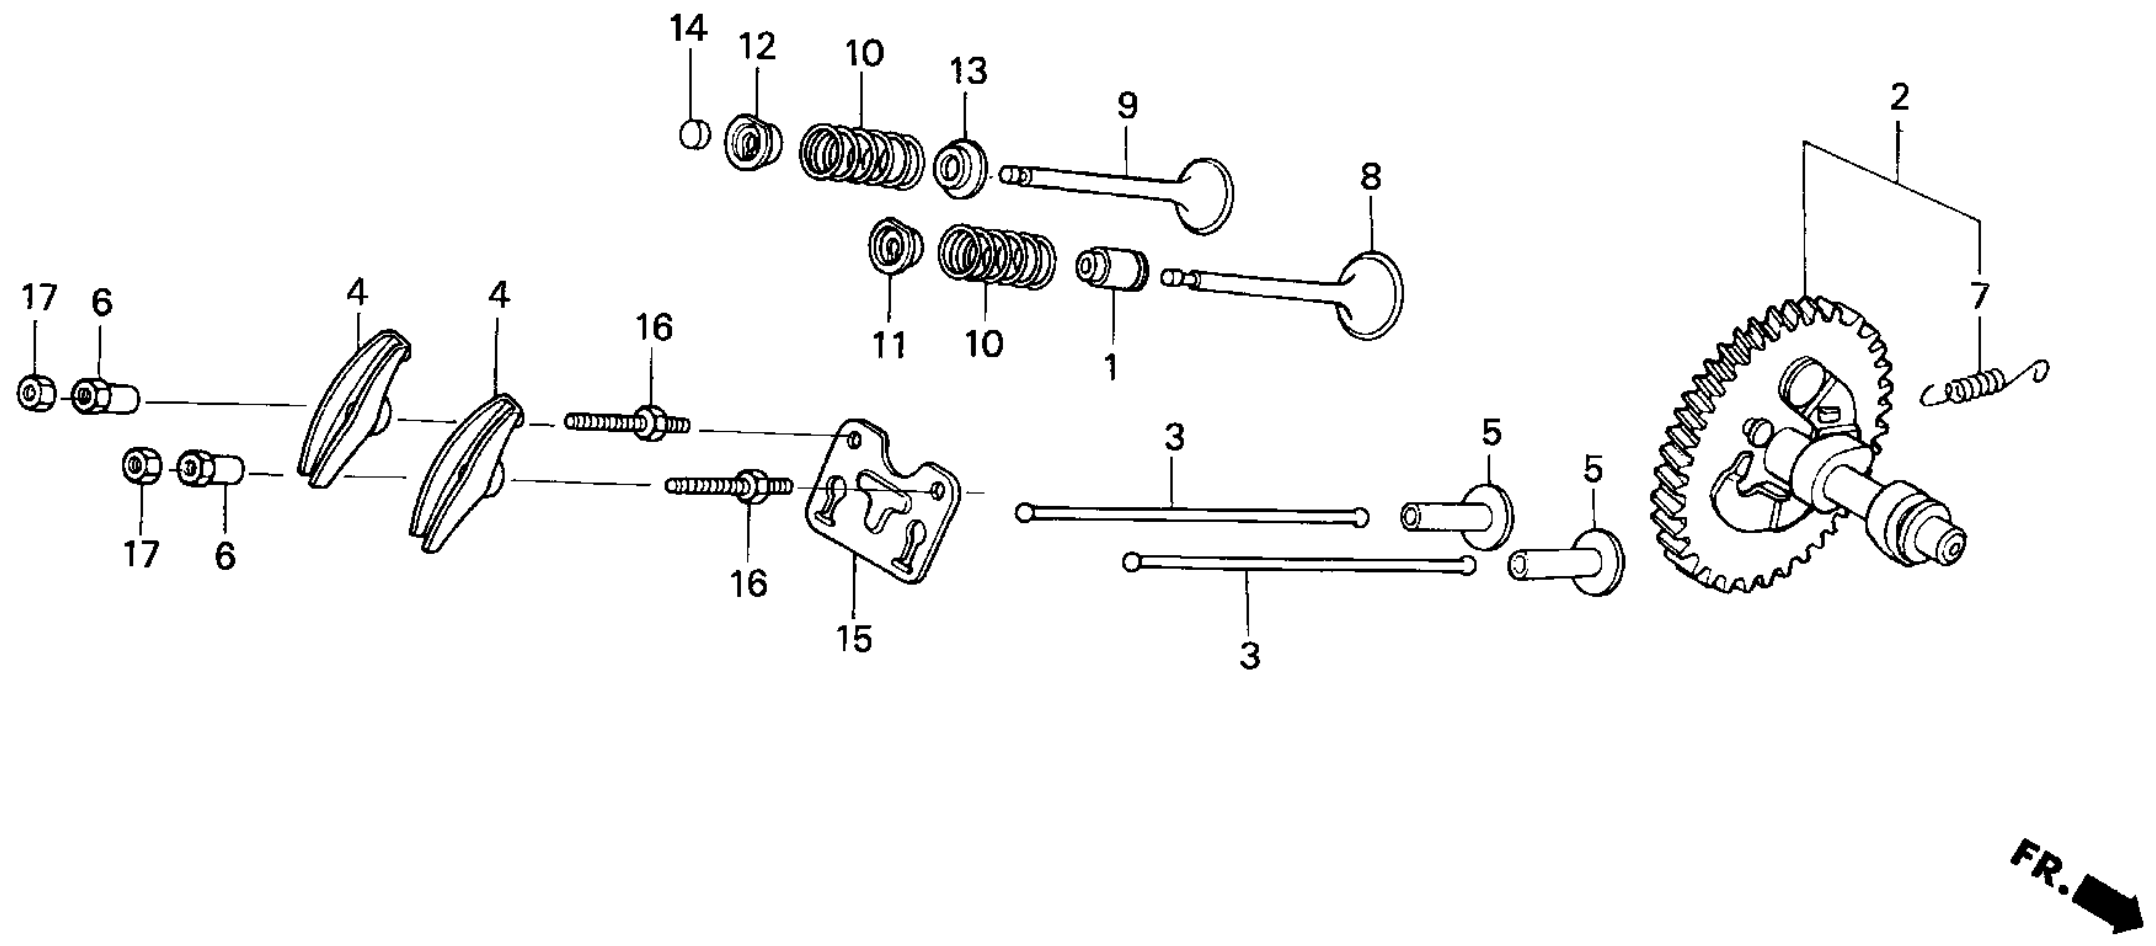


Z1C0-E0900

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1111K2	SEAL, INTAKE VALVE STEM ······ .INCLUDES: Valve clearance adjustment	0.6
2	1111C2	CAMSHAFT ···················· .INCLUDES: Valve clearance adjustment	0.4
3	1111L6	ROD, PUSH :INTAKE ··········· .INCLUDES: Valve clearance adjustment	0.2
	1111L6A	.Replace exhaust push rod add	0.1
	1111L7	ROD, PUSH :EXHAUST ·········· .INCLUDES: Valve clearance adjustment	0.2
	1111L7A	.Replace intake push rod add ·	0.1
4	1111A2	ARM, ROCKER :INTAKE ········· .INCLUDES: Valve clearance adjustment	0.2
	1111A2A	.Replace exhaust rocker arm add ························	0.1
	1111A1	ARM, ROCKER :EXHAUST ········ .INCLUDES: Valve clearance adjustment	0.2
	1111A1A	.Replace intake rocker arm add	0.1
5	1111L9	LIFTER, VALVE :INTAKE ········	0.4
+		.NOTE: Same time for two units	

Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.	Parts catalogue code
1	12209-ZE8-003	SEAL, VALVE STEM ············	1		
2	14100-ZF6-L02	CAMSHAFT ASSY. ··············	1	-------- --------	LP
	14100-ZF6-W01	····························	1	-------- --------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBLS,QBS QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE SN,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1 VX8
	14100-Z1C-800	····························	1	-------- --------	LBHB,QBH,QBHS
3	14410-Z1C-000	ROD, PUSH ··················	2		
4	14431-ZE2-010	ARM, VALVE ROCKER ···········	2		
5	14441-ZE2-000	LIFTER, VALVE ···············	2		
6	14451-ZE1-013	PIVOT, ROCKER ARM ···········	2		
7	14568-ZE1-000	SPRING, WEIGHT RETURN ·······	1	-------- --------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBLS,QBS QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE SN,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1 VX8
	14568-ZE3-790	····························	1	-------- --------	LP
	14568-Z1C-800	····························	1	-------- --------	LBHB,QBH,QBHS
8	14711-ZE3-000	VALVE, IN. ·················	1	-------- --------	LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBLS QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH SHE,SN,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK VXU1,VX8
	14711-Z1C-800	····························	1	-------- --------	LBHB,QBH,QBHS
9	14721-ZE3-000	VALVE, EX. ·················	1	-------- --------	LBHB,LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBH QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK QXQ4,QXU,SH,SHE,SN,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE VXE8,VXK,VXU1,VX8
	14721-ZK6-800	····························	1	-------- --------	LP
10	14751-Z1C-000	SPRING, VALVE ··············	2		


CAMSHAFT

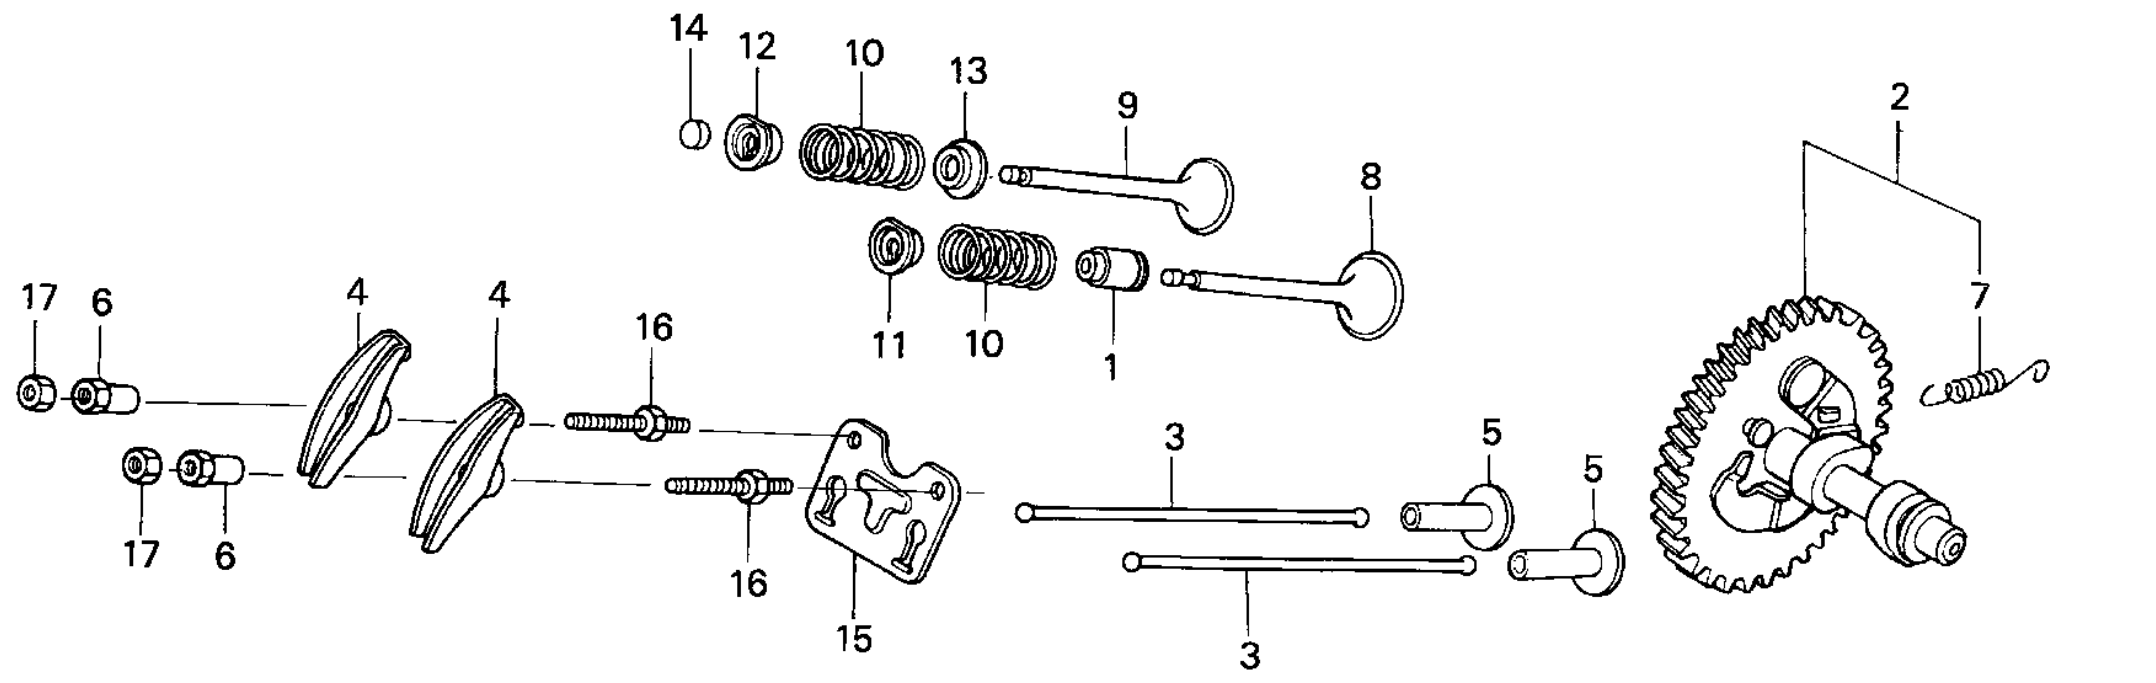

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
+ 5	1111M0	LIFTER, VALVE :EXHAUST ·······	0.4
		.NOTE: Same time for two units	
8	1111L1	VALVE, INTAKE ················	0.7
		.INCLUDES: Valve clearance adjustment and reface	
	1111L1E	.Replace intake and exhaust all add ···················	0.1
9	1111L0	VALVE, EXHAUST ················	0.7
		.INCLUDES: Valve clearance adjustment and reface	
	1111L0E	.Replace intake and exhaust all add ···················	0.1
10	1111P3	SPRING, VALVE :INTAKE ········	0.6
		.INCLUDES: Valve clearance adjustment	
	1111P3A	.Replace intake and exhaust all add ···················	0.1
	1111P4	SPRING, VALVE :EXHAUST ·······	0.6
		.INCLUDES: Valve clearance adjustment	
	1111P4A	.Replace intake and exhaust all add ···················	0.1
14	1111J7	ROTATOR, VALVE ················	0.2
		.INCLUDES: Valve clearance adjustment	

Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.	Parts catalogue code
11	14771-ZE2-000	RETAINER, IN. VALVE SPRING ··	1		
12	14773-ZE2-000	RETAINER, EX. VALVE SPRING ··	1		
13	14775-ZE2-010	SEAT, VALVE SPRING ··········	1		
14	14781-ZE2-000	ROTATOR, VALVE ··············	1		
15	14791-ZE2-010	PLATE, PUSH ROD GUIDE ·······	1		
16	90012-ZE0-010	BOLT, PIVOT, 8MM ············	2		
17	90206-ZE1-000	NUT, PIVOT ADJUSTING ········	2		


RECOIL STARTER

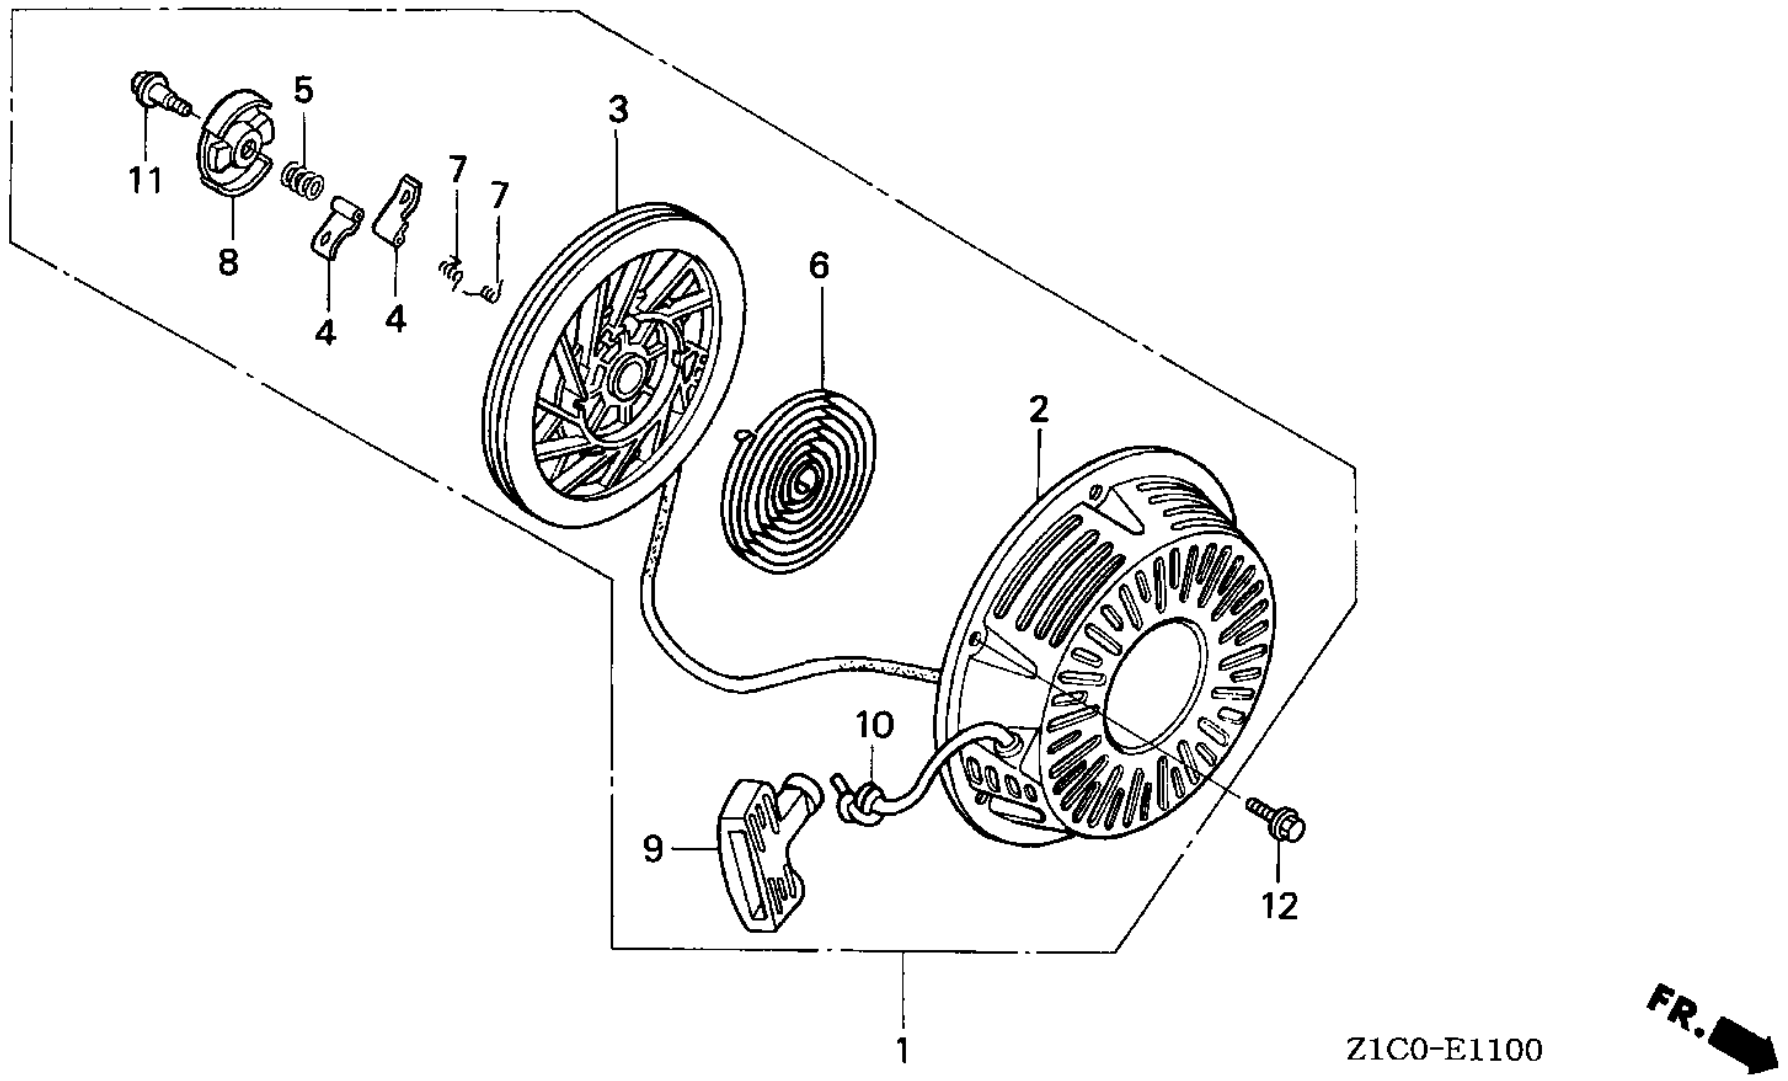

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1121B9	STARTER, RECOIL	0.1
3	1121B1	REEL, RECOIL STARTER	0.3
4		(7)	
	1121B0	RATCHET, STARTER AND/OR SPRING, RATCHET	0.2
		.NOTE: Same time for two units	
6	1121B7	SPRING, RECOIL STARTER RETURN	0.3
8		(5)	
	1121B2	RETAINER, SPRING	0.2
10	1121B3	ROPE, RECOIL STARTER	0.3

Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.	Parts catalogue code
1	28400-ZE3-W01ZB	STARTER ASSY., RECOIL *NH1*....................BLACK	1	-------- --------	QAA2,QA2
	28400-ZE3-W01ZP	*R280*..............POWER RED	1	-------- --------	LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
	28400-Z1C-801ZA	*R280*..............POWER RED	1	-------- --------	LBHB,QBH,QBHS,QBLS,QBS
2	28410-ZE3-W01ZB	CASE COMP., RECOIL STARTER *NH1*....................BLACK	1	-------- --------	QAA2,QA2
	28410-ZE3-W01ZP	*R280*..............POWER RED	1	-------- --------	LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
3	28421-ZE3-W01	PULLEY, RECOIL STARTER	1		
4	28422-ZE2-W01	RATCHET, STARTER	2		
5	28441-ZE2-W01	SPRING, FRICTION	1		
6	28442-ZE2-W01	SPRING, STARTER RETURN	1		
7	28443-ZE2-W01	SPRING, RATCHET	2		
8	28444-ZE2-W01	RETAINER, SPRING	1		
9	28461-ZE2-W02	GRIP, STARTER	1		
10	28462-ZE3-W01	ROPE, RECOIL STARTER	1	-------- --------	LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
11	90004-ZE2-W01	SCREW, CENTER	1		
12	90008-ZE2-003	BOLT, FLANGE, 6X10	3	-------- --------	LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
	90001-Z0T-800		3	-------- --------	LBHB,QBH,QBHS,QBLS,QBS

FAN COVER(1)

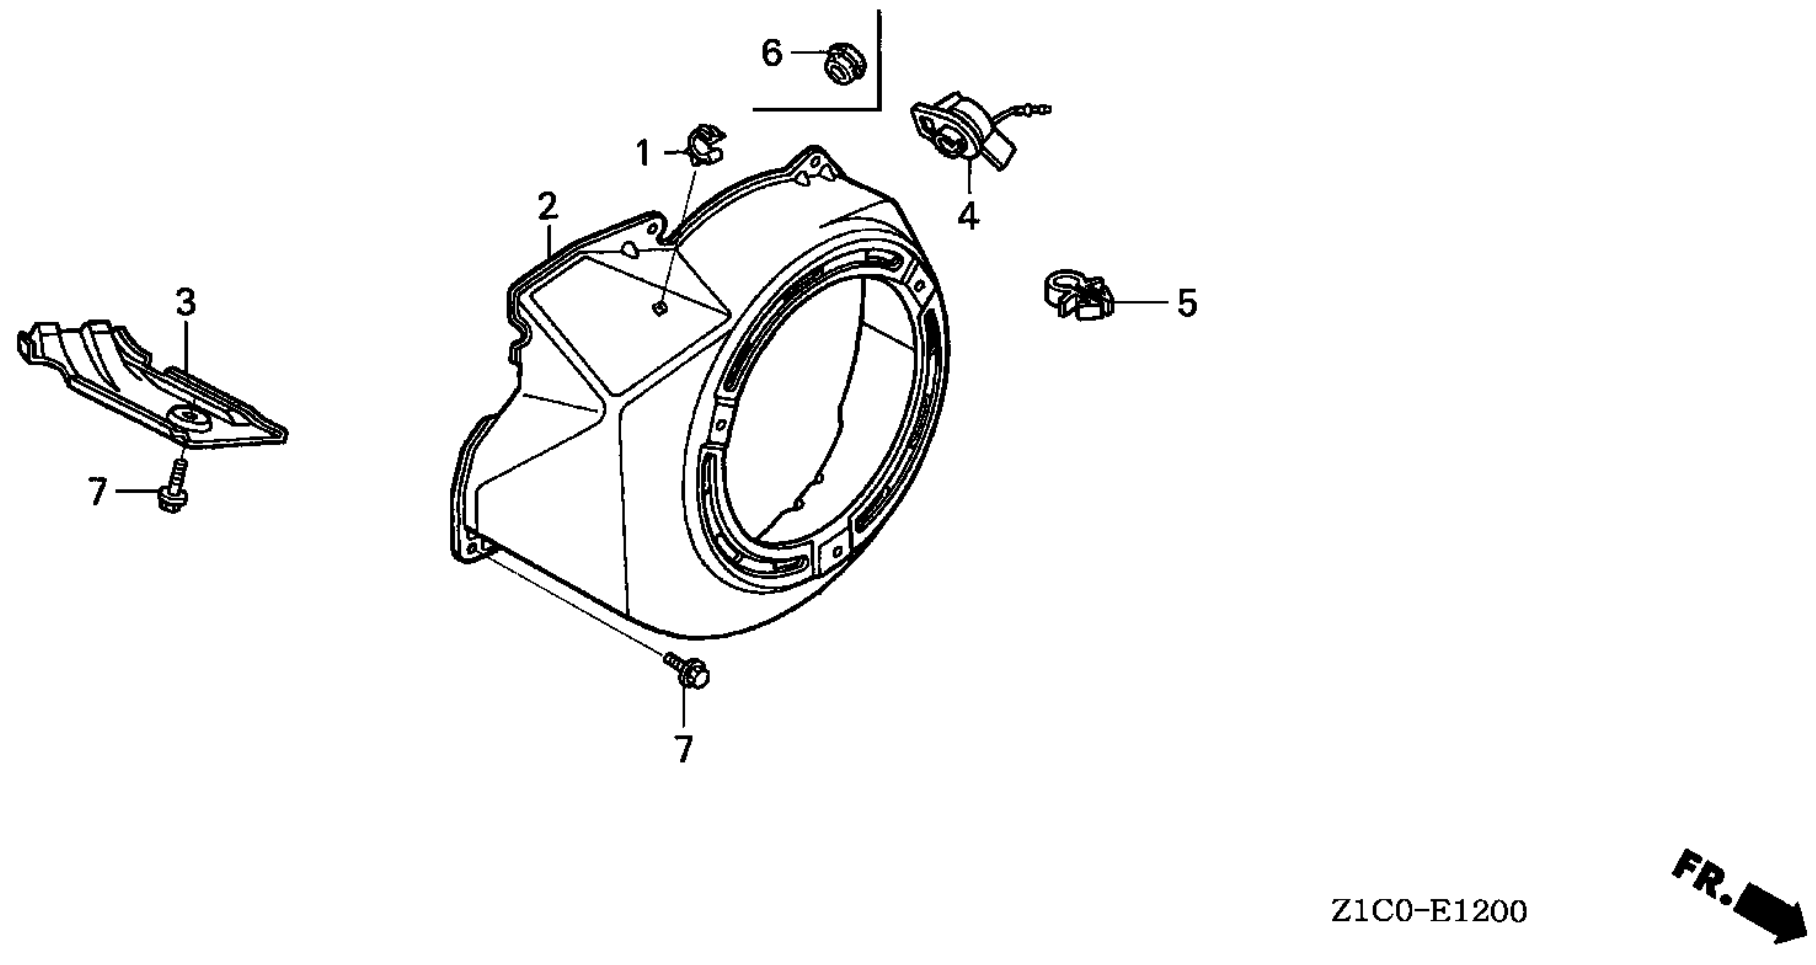


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	1141G8	COVER, ENGINE COOLING FAN ----	0.2
4	6151D9	SWITCH, ENGINE STOP ----------	0.2

2

Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.		Parts catalogue code
1	16731-ZE2-003	CLIP, TUBE ------------------	1	--------	--------	LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
2	19610-ZE3-010ZB	COVER COMP., FAN *NH1*....................BLACK	1	--------	--------	QAA2,QA2
	19610-ZE3-010ZL	*R280*..............POWER RED	1	--------	--------	LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
3	19631-ZE3-W00	SHROUD ----------------------	1	--------	--------	LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
4	35120-Z0D-V81	SWITCH ASSY., ENGINE STOP ---	1	--------	--------	LH,LHB5,LHP1,LH2,LT,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,SH,SN
	36100-ZF6-P81	----------------------------	1	--------	--------	LXU,PX,PXU,QAA2,QAA6,QA2,QA26,QX,QXK,QXQ4,QXU,SWX,SX,SXC,SXQ4,VSP,VX,VX8
	36100-ZF6-P82	----------------------------	1	--------	--------	SWX2
5	36103-ZE1-000	HOLDER, STOP SWITCH CORD ----	1	--------	--------	LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,PXE8,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD QXE,QXEK,QXE8,SH,SHE,SN,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
6	81329-567-020	GROMMET, DRAIN HOLE ---------	1	--------	--------	LP,LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK VXU1
7	90013-883-000	BOLT, FLANGE, 6X12(CT200) ---	6	--------	--------	LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8


FAN COVER(2)

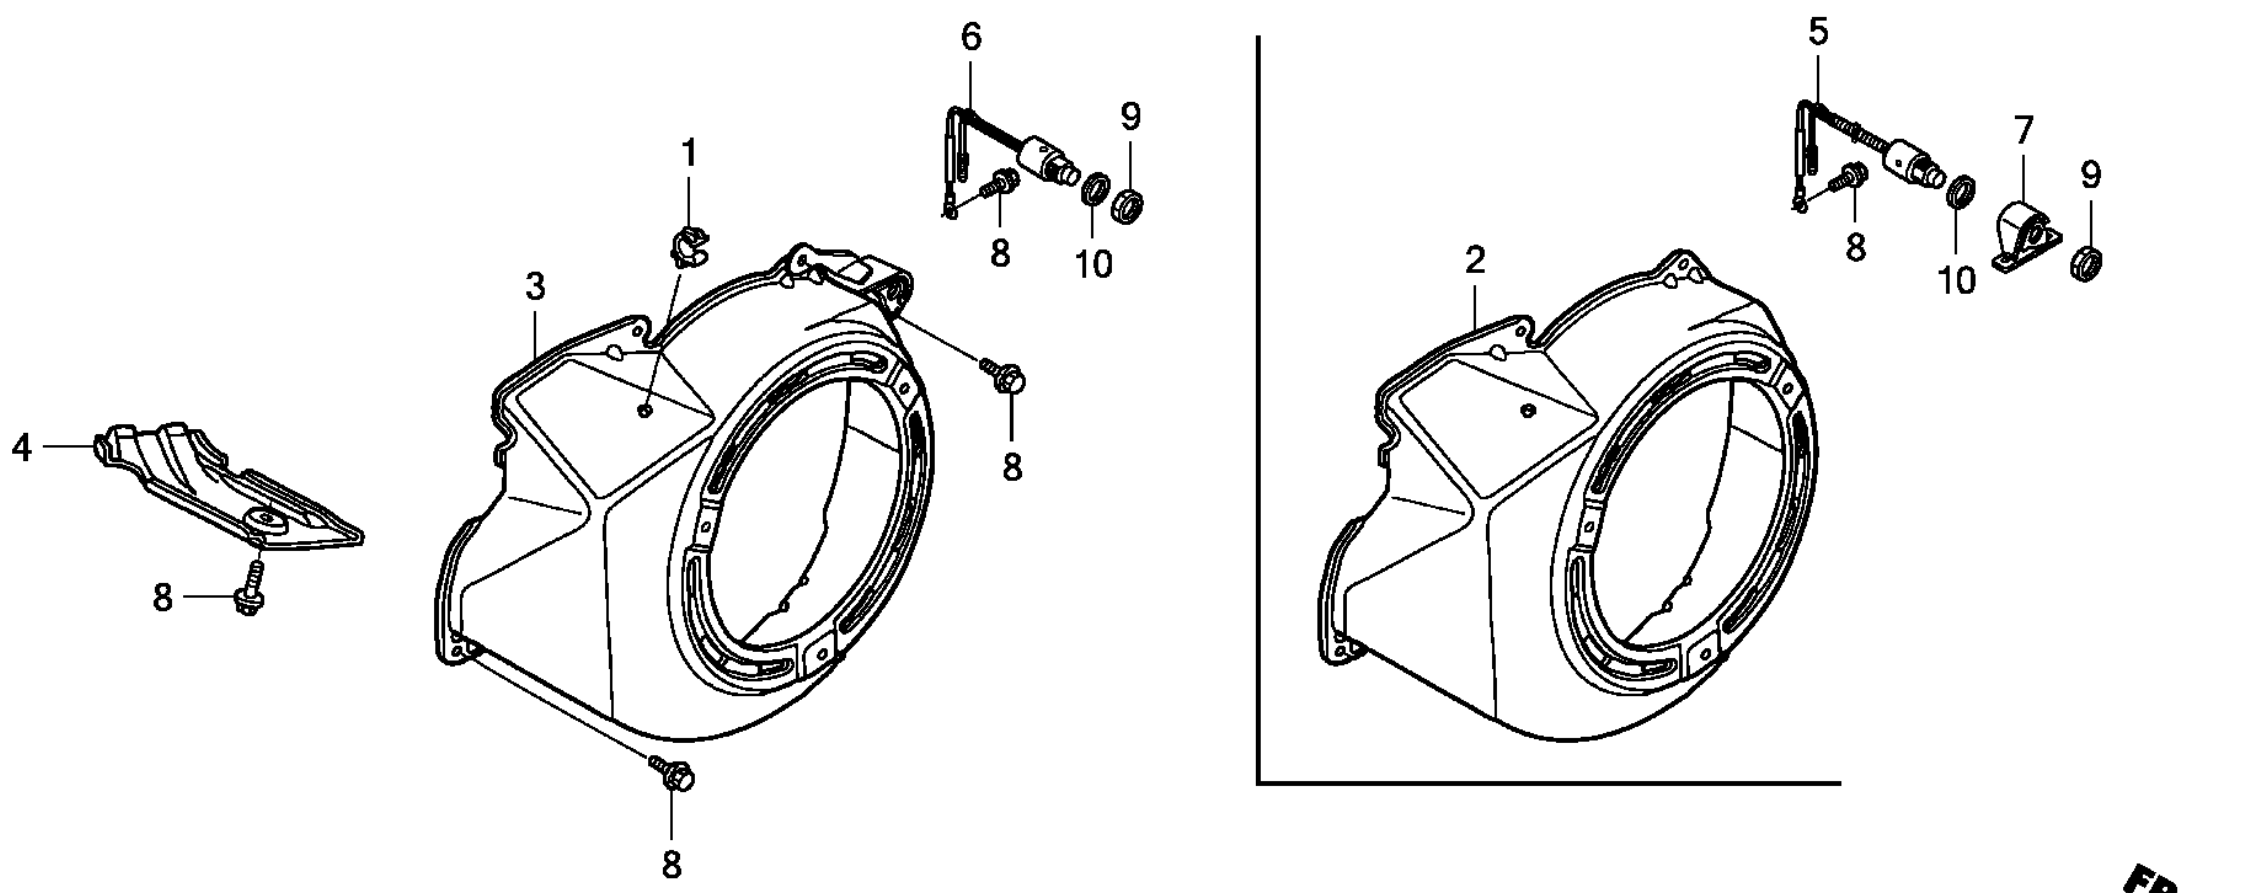

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
3	1141G8	(2) COVER, ENGINE COOLING FAN ····	0.2
6	6151D9	(5) SWITCH, ENGINE STOP ··········	0.2

Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.	Parts catalogue code
1	16731-ZE2-003	CLIP, TUBE ····················	1	-------- --------	LBHB,QBH,QBHS,QBLS,QBS
2	19610-Z1C-800ZA	COVER COMP., FAN *R280*..............POWER RED	1	-------- --------	LBHB
3	19610-Z1C-820ZA	COVER COMP., FAN *R280*..............POWER RED	1	-------- --------	QBH,QBHS,QBLS,QBS
4	19631-Z1C-810	SHROUD ······················	1	-------- --------	LBHB,QBH,QBHS,QBLS,QBS
5	35120-Z0V-811	SWITCH ASSY., ENGINE STOP ···	1	-------- --------	LBHB
6	35120-Z0V-821	SWITCH ASSY., ENGINE STOP ···	1	-------- --------	QBH,QBHS,QBLS,QBS
7	35124-Z0T-810	BRACKET COMP., STOP SWITCH (BANKA)	1	-------- --------	LBHB
8	90013-Z0T-810	BOLT, FLANGE, 6X12(CT200) ···	7	-------- --------	LBHB,QBH,QBHS,QBLS,QBS
9	90302-921-000	NUT, HEX., 16MM ·············	1	-------- --------	LBHB,QBH,QBHS,QBLS,QBS
10	90401-Z0T-800	WASHER, 16MM ················	1	-------- --------	LBHB,QBH,QBHS,QBLS,QBS


CARBURETOR(1)

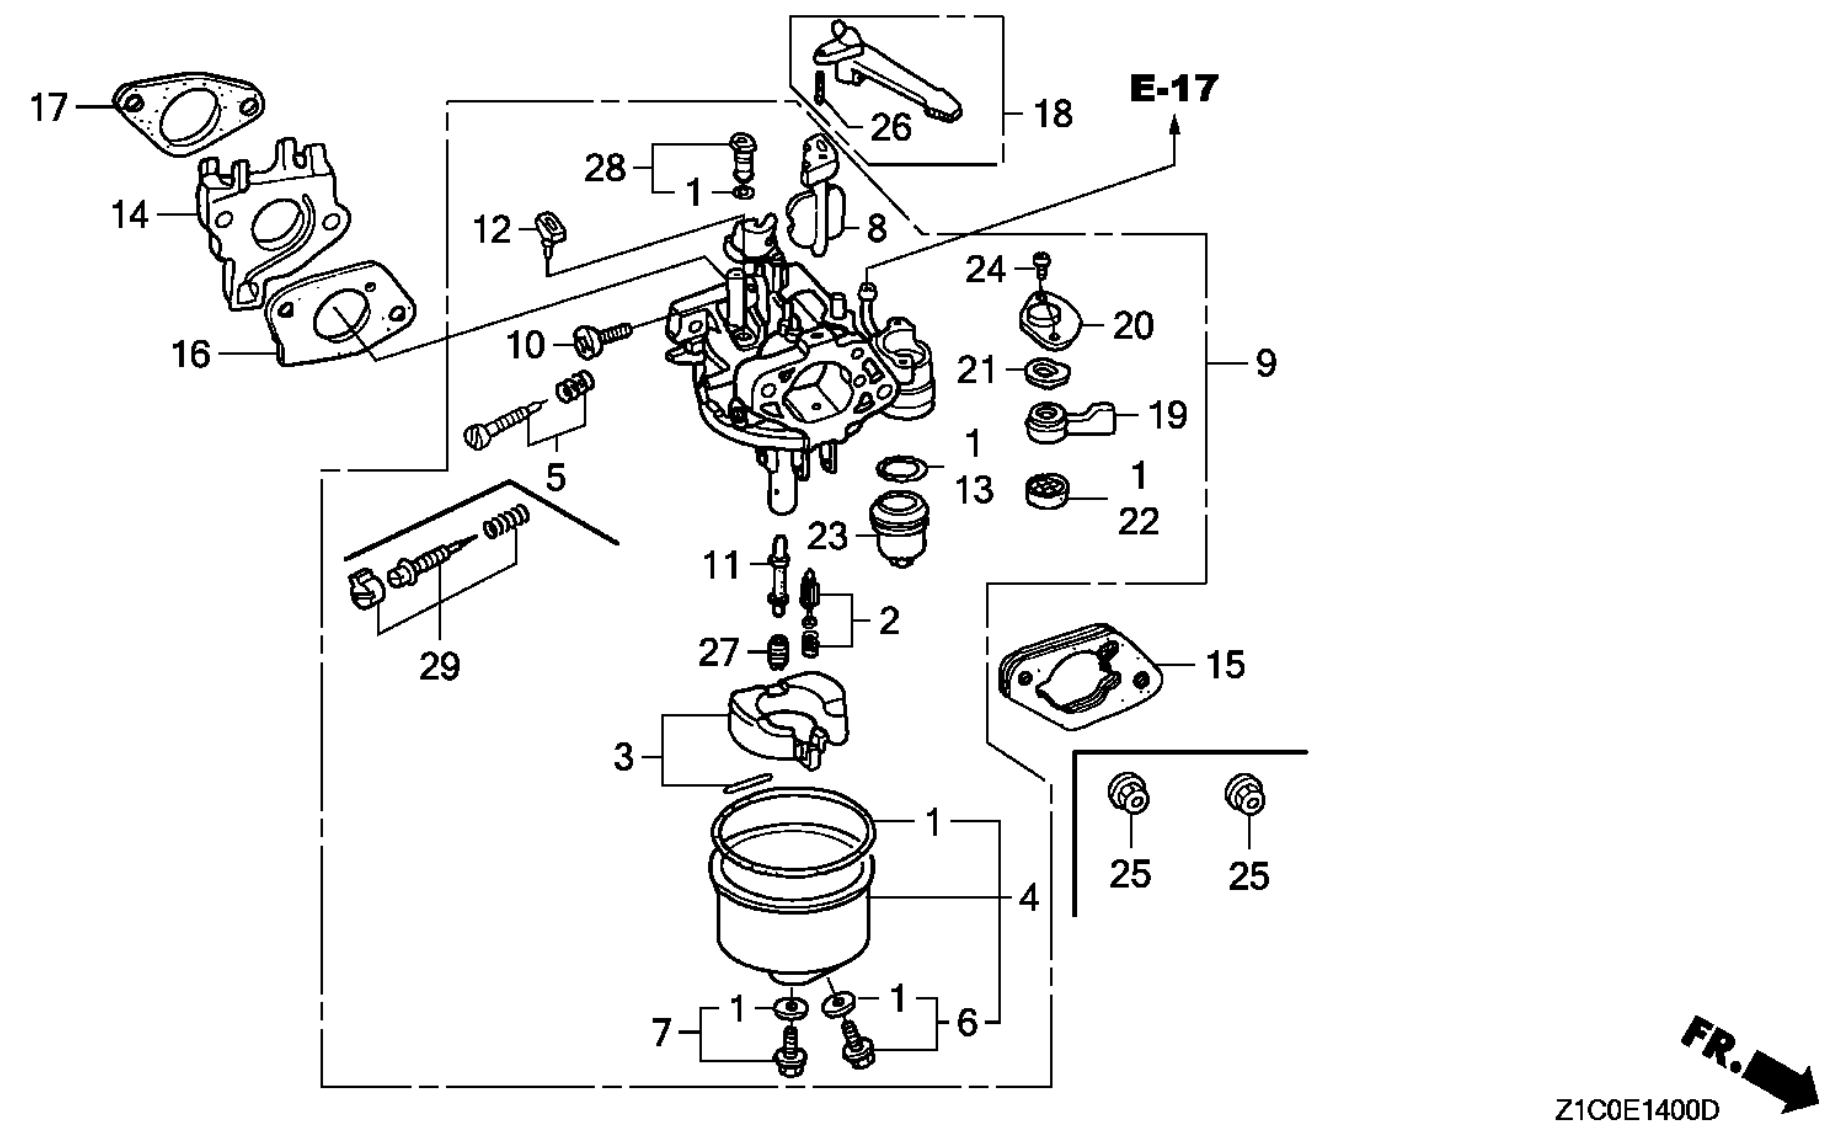

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3111B1	GASKET SET, CARBURETOR	0.3
2		(3)	
	3111E1	VALVE SET, FLOAT AND/OR FLOAT SET	0.3
5		(29)	
	3111D7	SCREW SET, PILOT	0.2
9	3111F3	CARBURETOR	0.2
13		(23)	
	3101L6	PACKING, FUEL STRAINER CUP	0.2
14		(17)	
	3111C0	INSULATOR, CARBURETOR AND/OR PACKING, INSULATOR	0.2
16	3111C8	PACKING, CARBURETOR	0.2
18	8101F9	LEVER, CARBURETOR CHOKE	0.2
22		(19,20,21)	
	3101C5	PACKING, FUEL COCK	0.2
27		(11)	
	3111C3	JET, MAIN	0.3

Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.		Parts catalogue code
1	16010-ZE2-015	GASKET SET (EXCEPT 16173-001-004)	1	--------	--------	LBHB,LT,QBH,QBHS,QBLS,QBS,QN,QP,QT,QTD,SWE,SWE2,SWX,SWX2,VTE5
	16010-ZE2-812	GASKET SET (INCLUDE 16173-001-004)	1	--------	--------	LH,LHB5,LHP1,LH2,LP,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SX,SXC,SXE,SXE8,SXQ4 VSP,VX,VXE,VXE8,VXK,VXU1,VX8
2	16011-ZA0-931	VALVE SET, FLOAT	1	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26 QBH,QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK QXQ4,QXU,SH,SHE,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE VXE8,VXK,VXU1,VX8
3	16013-Z1C-003	FLOAT SET	1	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26 QBH,QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK QXQ4,QXU,SH,SHE,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE VXE8,VXK,VXU1,VX8
4	16015-ZE8-005	CHAMBER SET, FLOAT	1	--------	--------	LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SWE SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
	16015-Z1C-801		1	--------	--------	LBHB,QBH,QBHS,QBLS,QBS
5	16016-ZE0-005	SCREW SET, PILOT	1	--------	--------	LP,LT,QN,QP,QT,QTD,SWE,SWE2,SWX,SWX2,VTE5
	16016-ZF6-005	SCREW SET	1	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LXE8,LXE9,LXU,PX,PXE8,PXU,QBH,QBHS,QBLS,QBS,QH,QHB3 QHB5,QHP1,QMH,QX,QXE,QXEK,QXE8,QXK,QXU,SH,SHE,SX,SXC,SXE,SXE8,VX,VXE,VXE8 VXK,VXU1,VX8
6	16024-ZE1-811	SCREW SET, DRAIN	1	--------	--------	LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SWE SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
	16024-Z0T-841		1	--------	--------	LBHB,QBH,QBHS,QBLS,QBS

CARBURETOR(1)

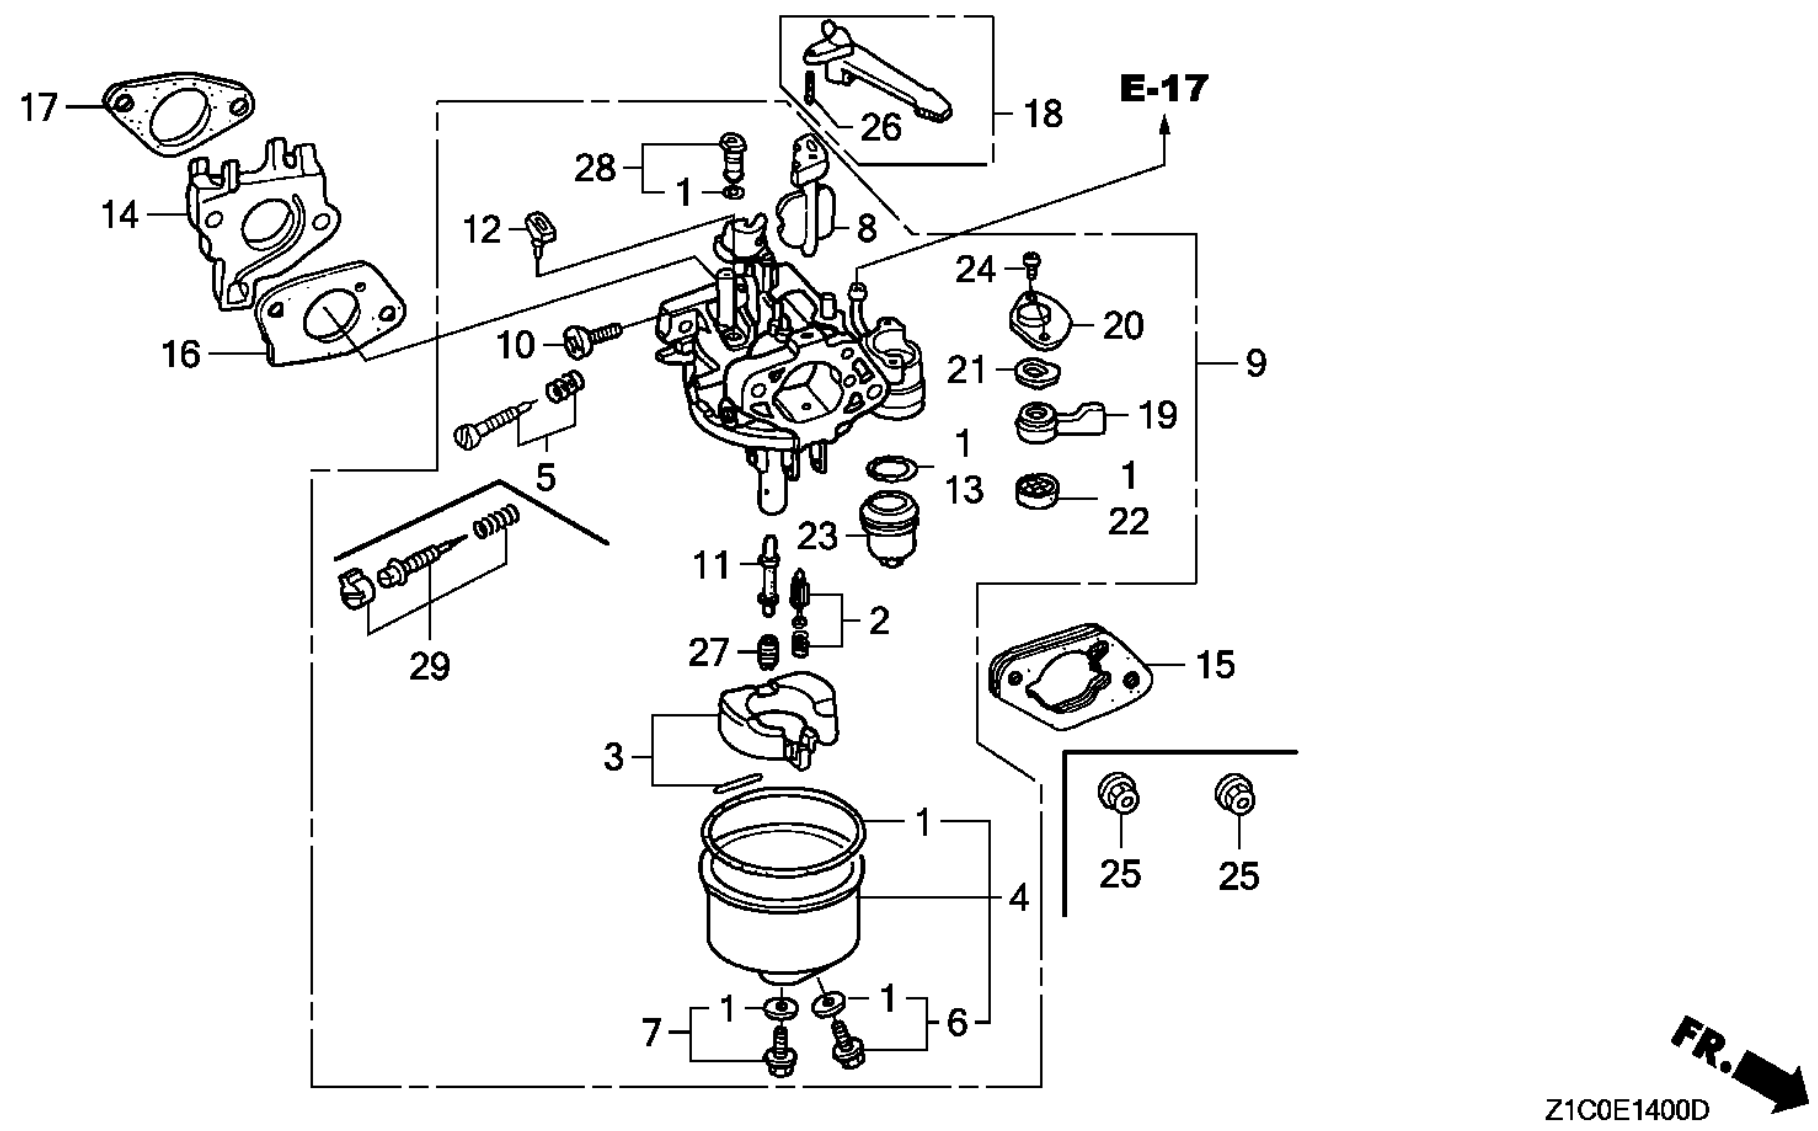


Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.		Parts catalogue code
7	16028-ZE0-005	SCREW SET ------------------	1	--------	--------	LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SWE SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
	16028-Z0T-841	----------------------------	1	--------	--------	LBHB,QBH,QBHS,QBLS,QBS
8	16044-ZE3-W20	CHOKE SET ------------------	1	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26 QBH,QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK QXQ4,QXU,SH,SHE,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE VXE8,VXK,VXU1,VX8
9	16100-Z1C-W31	CARBURETOR ASSY. (BE85N A) --	1	--------	--------	LT,QN,QP,QT,QTD,SWE,SWE2,SWX,SWX2,VTE5
	16100-Z1C-Y31	CARBURETOR ASSY. (BE85P A) --	1	--------	--------	LP
	16100-Z1C-601	CARBURETOR ASSY. (BE85K A) --	1	--------	--------	LH,LHB5,LHP1,LH2,LXE8,LXE9,LXU,PX,PXE8,PXU,QH,QHB3,QHB5,QHP1,QMH,QX,QXE QXEK,QXE8,QXK,QXU,SH,SHE,SX,SXC,SXE,SXE8
	16100-Z1C-651	CARBURETOR ASSY. (BE85M A) --	1	--------	--------	VX,VXE,VXE8,VXK,VXU1,VX8
	16100-Z1C-V01	CARBURETOR ASSY. (BE85Q A) --	1	--------	--------	QAA2,QAA6,QA2,QA26,QXQ4,SXQ4
	16100-Z1C-V51	CARBURETOR ASSY. (BE85L A) --	1	--------	--------	VSP
	16100-Z1C-801	CARBURETOR ASSY. (BE85W A) --	1	--------	--------	LBHB,QBH,QBHS
	16100-Z1C-811	CARBURETOR ASSY. (BE85Y A) --	1	--------	--------	QBLS,QBS
10	16124-ZE0-005	SCREW, THROTTLE STOP --------	1	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26 QBH,QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK QXQ4,QXU,SH,SHE,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE VXE8,VXK,VXU1,VX8
11	16166-ZF6-V00	NOZZLE, MAIN ---------------	1	--------	--------	LH,LHB5,LHP1,LH2,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SX,SXC,SXE,SXE8,SXQ4 VSP,VX,VXE,VXE8,VXK,VXU1,VX8
	16166-ZF6-W20	----------------------------	1	--------	--------	LP,LT,QBLS,QBS,QN,QP,QT,QTD,SWE,SWE2,SWX,SWX2,VTE5
	16166-Z1C-801	----------------------------	1	--------	--------	LBHB,QBH,QBHS

CARBURETOR(1)


Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.		Parts catalogue code
12	16172-ZE3-W10	COLLAR, SETTING	1	--------	--------	LH,LHB5,LHP1,LH2,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SX,SXC,SXE,SXE8,SXQ4 VSP,VX,VXE,VXE8,VXK,VXU1,VX8
13	16173-001-004	PACKING, FUEL STRAINER CUP	1	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26 QBH,QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK QXQ4,QXU,SH,SHE,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE VXE8,VXK,VXU1,VX8
14	16211-ZF6-000	INSULATOR, CARBURETOR	1	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26 QBH,QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK QXQ4,QXU,SH,SHE,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE VXE8,VXK,VXU1,VX8
15	16220-ZA0-702	SPACER COMP., CARBURETOR	1	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26 QBH,QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK QXQ4,QXU,SH,SHE,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE VXE8,VXK,VXU1,VX8
16	16221-ZF6-800	PACKING, CARBURETOR	1	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26 QBH,QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK QXQ4,QXU,SH,SHE,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE VXE8,VXK,VXU1,VX8
17	16223-ZE3-W00	PACKING, INSULATOR	1	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26 QBH,QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK QXQ4,QXU,SH,SHE,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE VXE8,VXK,VXU1,VX8
18	16610-ZE1-000	LEVER COMP., CHOKE (STD.)	1	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26 QBH,QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK QXQ4,QXU,SH,SHE,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE VXE8,VXK,VXU1,VX8
19	16953-ZE1-812	LEVER, COCK	1	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26 QBH,QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK QXQ4,QXU,SH,SHE,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE VXE8,VXK,VXU1,VX8
20	16954-ZE1-812	PLATE, LEVER SETTING	1	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26 QBH,QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK QXQ4,QXU,SH,SHE,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE VXE8,VXK,VXU1,VX8
21	16956-ZE1-811	SPRING, COCK LEVER	1	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26 QBH,QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK QXQ4,QXU,SH,SHE,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE VXE8,VXK,VXU1,VX8
22	16957-ZE1-812	PACKING, FUEL COCK	1	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26 QBH,QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK QXQ4,QXU,SH,SHE,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE VXE8,VXK,VXU1,VX8
23	16967-ZE0-811	CUP, FUEL STRAINER	1	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26 QBH,QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK QXQ4,QXU,SH,SHE,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE VXE8,VXK,VXU1,VX8
24	93500-03006-1H	SCREW, PAN, 3X6	2	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26 QBH,QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK QXQ4,QXU,SH,SHE,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE VXE8,VXK,VXU1,VX8
25	94050-06000	NUT, FLANGE, 6MM	2	--------	--------	LP

CARBURETOR(1)

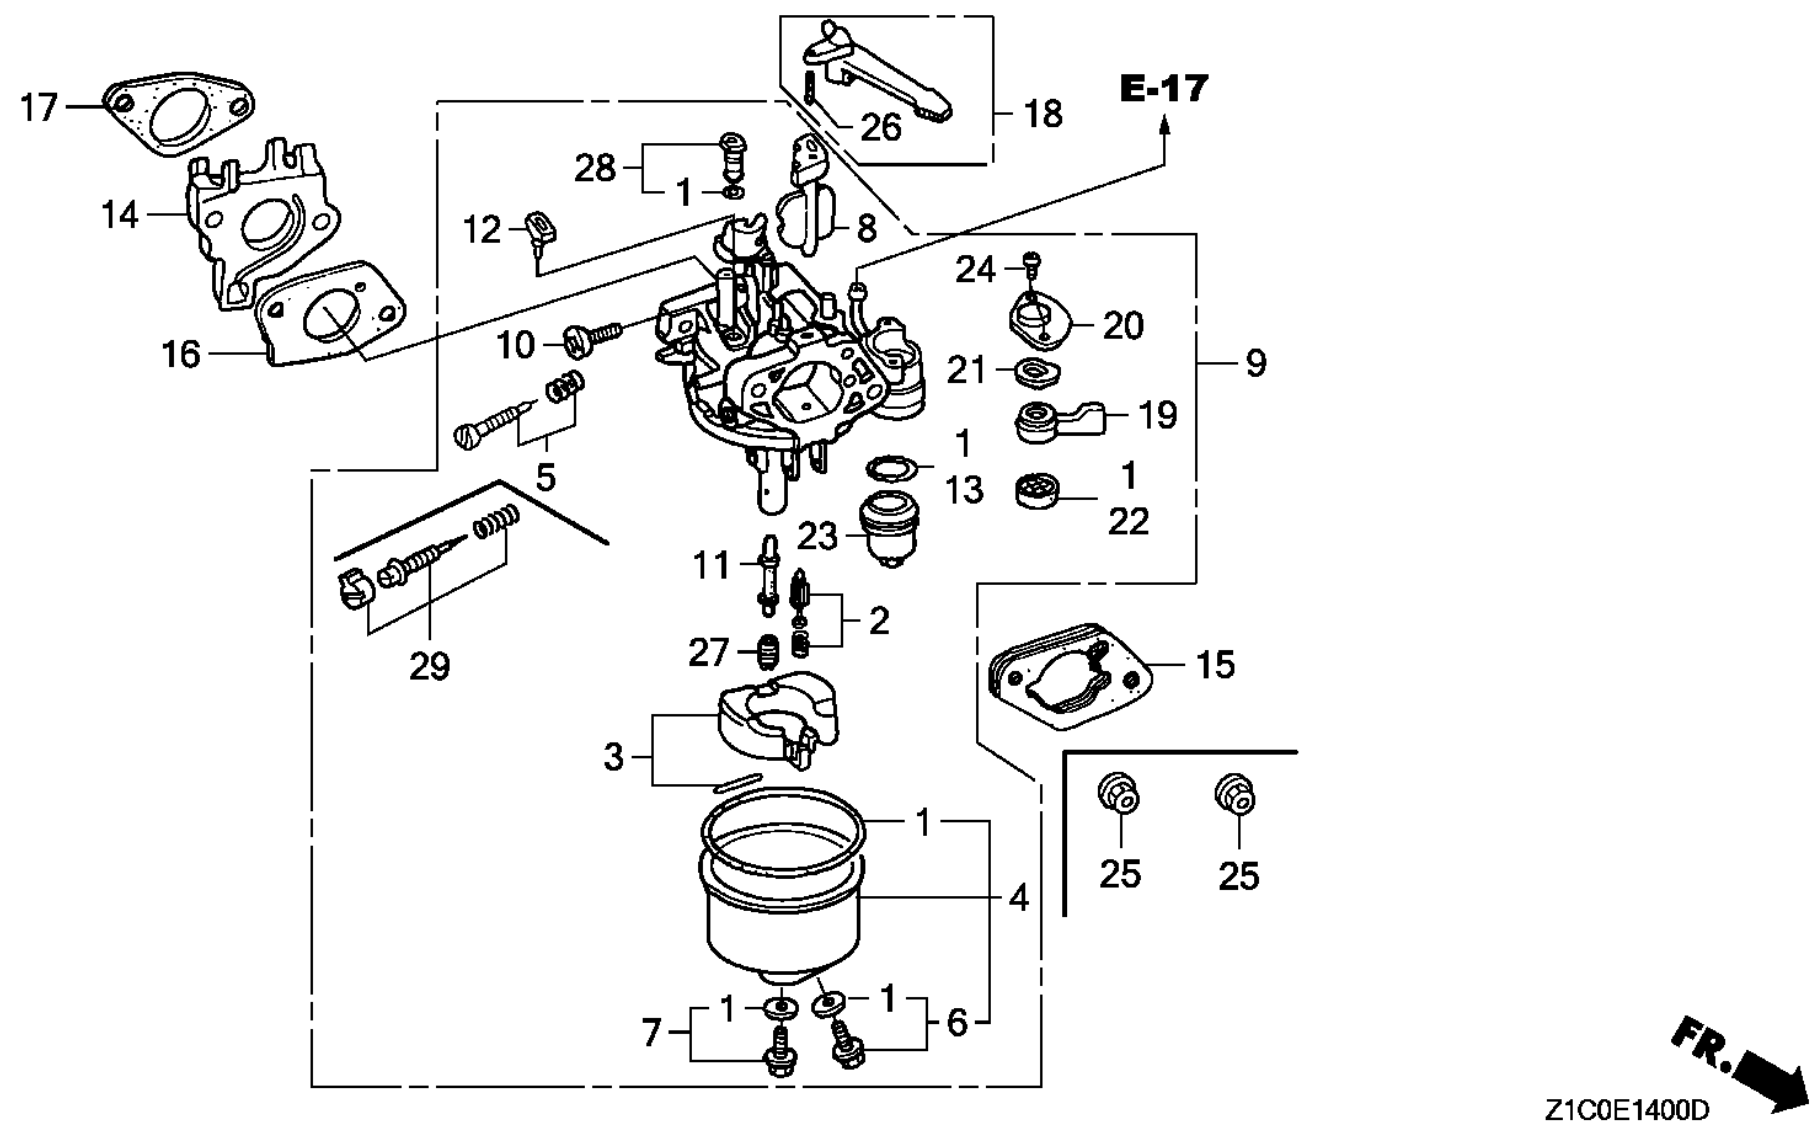

Ref. No.	Part No.	Description	Reqd. QTY GX390 T1	Serial No.		Parts catalogue code
26	94305-20122	PIN, SPRING, 2X12	1	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26 QBH,QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK QXQ4,QXU,SH,SHE,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE VXE8,VXK,VXU1,VX8
27	99101-ZH8-0880	JET, MAIN, #88	(1)	--------	--------	LH,LHB5,LHP1,LH2,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SX,SXC,SXE,SXE8,SXQ4
	99101-ZH8-0900	JET, MAIN, #90	(1)	--------	--------	LH,LHB5,LHP1,LH2,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SX,SXC,SXE,SXE8,SXQ4 VSP,VX,VXE,VXE8,VXK,VXU1,VX8
	99101-ZH8-0920	JET, MAIN, #92	1	--------	--------	LH,LHB5,LHP1,LH2,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SX,SXC,SXE,SXE8,SXQ4
			(1)	--------	--------	VSP,VX,VXE,VXE8,VXK,VXU1,VX8
	99101-ZH8-0950	JET, MAIN, #95	1	--------	--------	VSP,VX,VXE,VXE8,VXK,VXU1,VX8
	99101-ZH8-1000	JET, MAIN, #100	(1)	--------	--------	LT,QBLS,QBS,QN,QP,QT,QTD,SWE,SWE2,SWX,SWX2,VTE5
	99101-ZH8-1020	JET, MAIN, #102	(1)	--------	--------	LT,QBLS,QBS,QN,QP,QT,QTD,SWE,SWE2,SWX,SWX2,VTE5
	99101-ZH8-1050	JET, MAIN, #105	1	--------	--------	LT,QBLS,QBS,QN,QP,QT,QTD,SWE,SWE2,SWX,SWX2,VTE5
			(1)	--------	--------	LBHB,QBH,QBHS
	99101-ZH8-1100	JET, MAIN, #110	1	--------	--------	LBHB,LP,QBH,QBHS
	99101-ZH8-1080	JET, MAIN, #108	(1)	--------	--------	LBHB,QBH,QBHS
28	99204-ZA0-0400	JET SET, PILOT, #40	1	--------	--------	LBHB,LP,LT,QBH,QBHS,QBLS,QBS,QN,QP,QT,QTD,SWE,SWE2,SWX,SWX2,VTE5
	99204-ZA0-0450	JET SET, PILOT, #45	1	--------	--------	LH,LHB5,LHP1,LH2,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SX,SXC,SXE,SXE8,SXQ4 VSP,VX,VXE,VXE8,VXK,VXU1,VX8
29	16016-ZH7-W01	SCREW SET, PILOT	1	--------	--------	QAA2,QAA6,QA2,QA26,QXQ4,SXQ4,VSP

CARBURETOR(2)

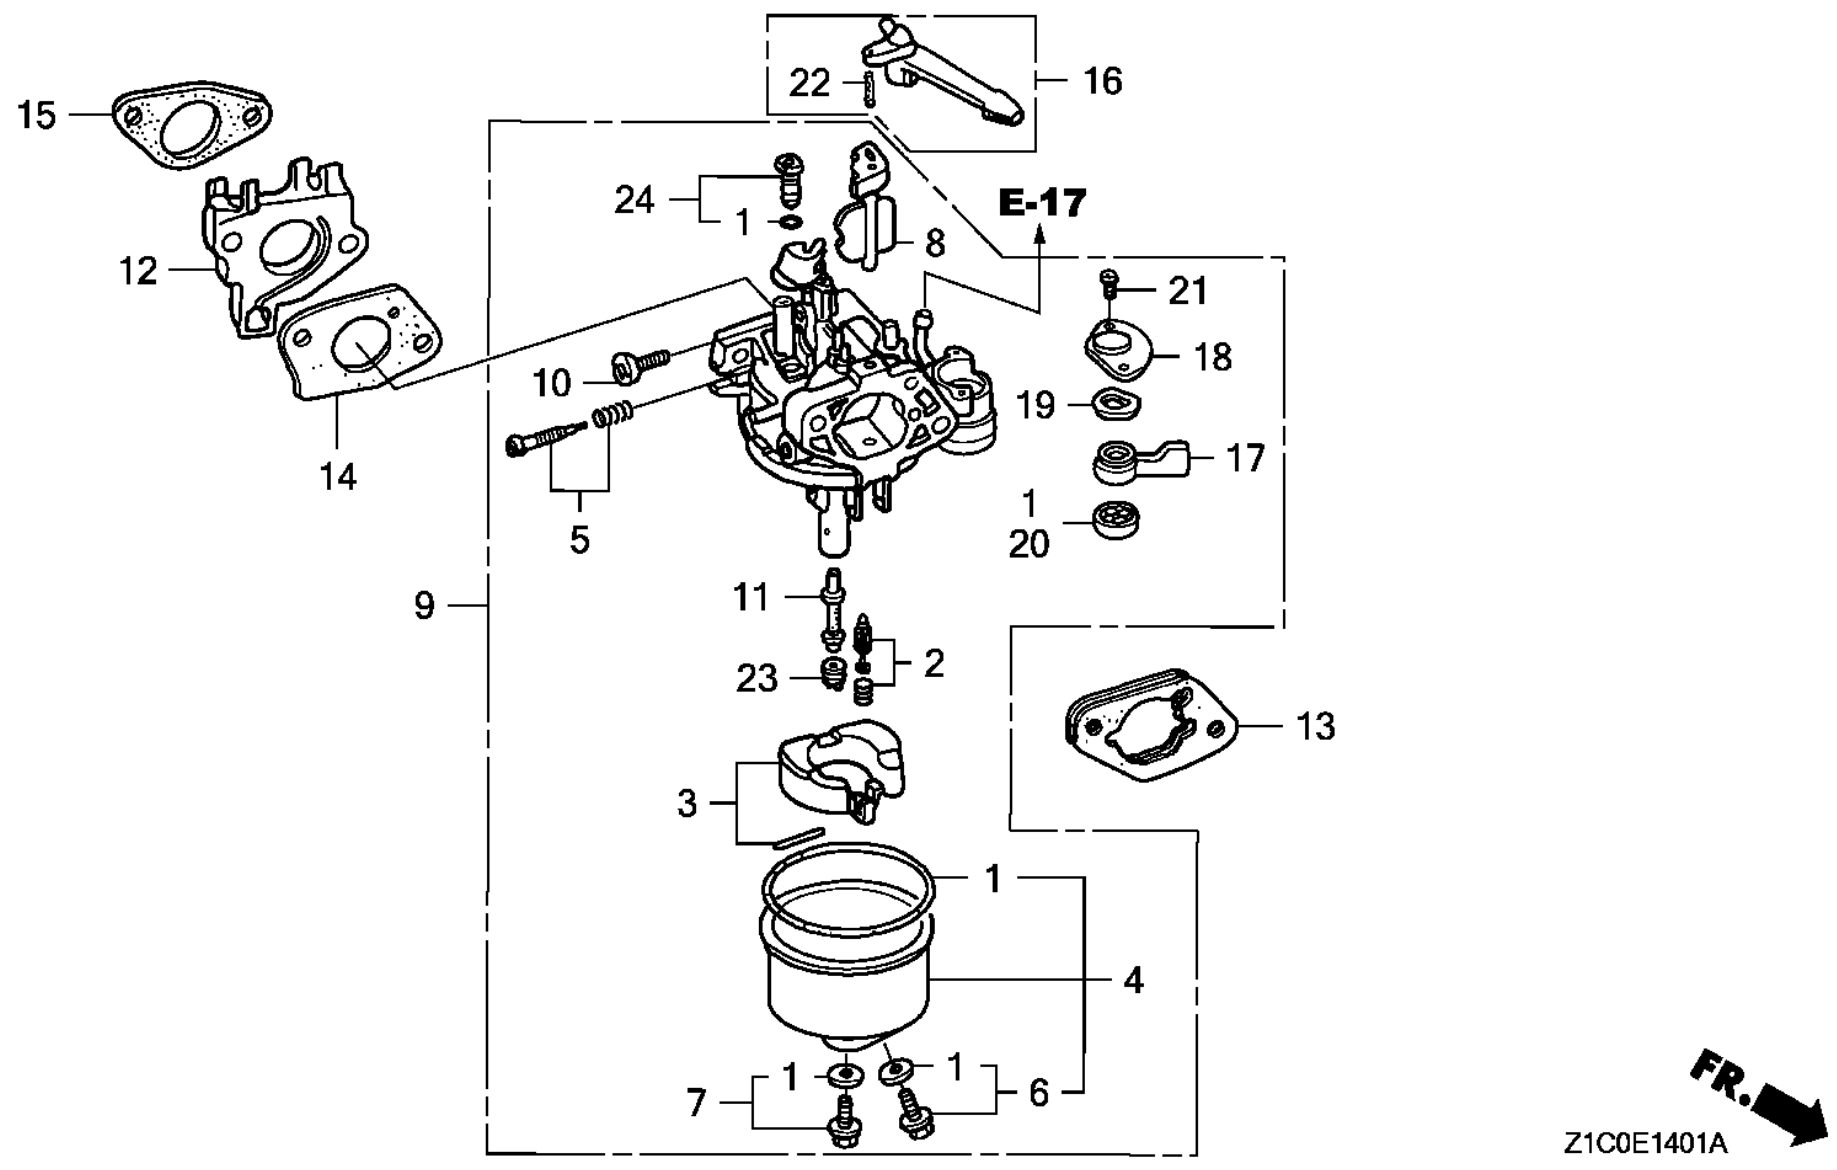


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3111B1	GASKET SET, CARBURETOR ·······	0.3
2		(3)	
	3111E1	VALVE SET, FLOAT AND/OR FLOAT SET ························	0.3
5	3111D7	SCREW SET, PILOT ·············	0.2
9	3111F3	CARBURETOR ··················	0.2
12		(15)	
	3111C0	INSULATOR, CARBURETOR AND/OR PACKING, INSULATOR ··········	0.2
14	3111C8	PACKING, CARBURETOR ··········	0.2
16	8101F9	LEVER, CARBURETOR CHOKE ······	0.2
20		(17,18,19)	
	3101C5	PACKING, FUEL COCK ···········	0.2
23		(11)	
	3111C3	JET, MAIN ···················	0.3

Ref. No.	Part No.	Description	Reqd. QTY GX390 T1	Serial No.	Parts catalogue code
1	16010-ZE2-015	GASKET SET (EXCEPT 16173-001-004)	1	-------- -------- SN	
2	16011-ZA0-931	VALVE SET, FLOAT ············	1	-------- -------- SN	
3	16013-Z1C-003	FLOAT SET ··················	1	-------- -------- SN	
4	16015-ZE8-005	CHAMBER SET, FLOAT ··········	1	-------- -------- SN	
5	16016-ZE0-005	SCREW SET, PILOT ············	1	-------- -------- SN	
6	16024-ZE1-811	SCREW SET, DRAIN ············	1	-------- -------- SN	
7	16028-ZE0-005	SCREW SET ··················	1	-------- -------- SN	
8	16044-ZE3-W20	CHOKE SET ··················	1	-------- -------- SN	
9	16100-Z1C-W21	CARBURETOR ASSY. (BE86N A) ··	1	-------- -------- SN	
10	16124-ZE0-005	SCREW, THROTTLE STOP ········	1	-------- -------- SN	
11	16166-ZF6-W20	NOZZLE, MAIN ················	1	-------- -------- SN	
12	16211-ZF6-000	INSULATOR, CARBURETOR ·······	1	-------- -------- SN	
13	16220-ZA0-702	SPACER COMP., CARBURETOR ····	1	-------- -------- SN	
14	16221-ZF6-800	PACKING, CARBURETOR ·········	1	-------- -------- SN	
15	16223-ZE3-W00	PACKING, INSULATOR ··········	1	-------- -------- SN	
16	16610-ZE1-000	LEVER COMP., CHOKE (STD.) ···	1	-------- -------- SN	
17	16953-ZE1-812	LEVER, COCK ·················	1	-------- -------- SN	
18	16954-ZE1-812	PLATE, LEVER SETTING ········	1	-------- -------- SN	
19	16956-ZE1-811	SPRING, COCK LEVER ··········	1	-------- -------- SN	
20	16957-ZE1-812	PACKING, FUEL COCK ··········	1	-------- -------- SN	
21	93500-03006-1H	SCREW, PAN, 3X6 ·············	2	-------- -------- SN	
22	94305-20122	PIN, SPRING, 2X12 ···········	1	-------- -------- SN	
23	99101-ZH8-1000	JET, MAIN, #100 ·············	(1)	-------- -------- SN	
	99101-ZH8-1020	JET, MAIN, #102 ·············	(1)	-------- -------- SN	

E-14-1 CARBURETOR(2)


E 8

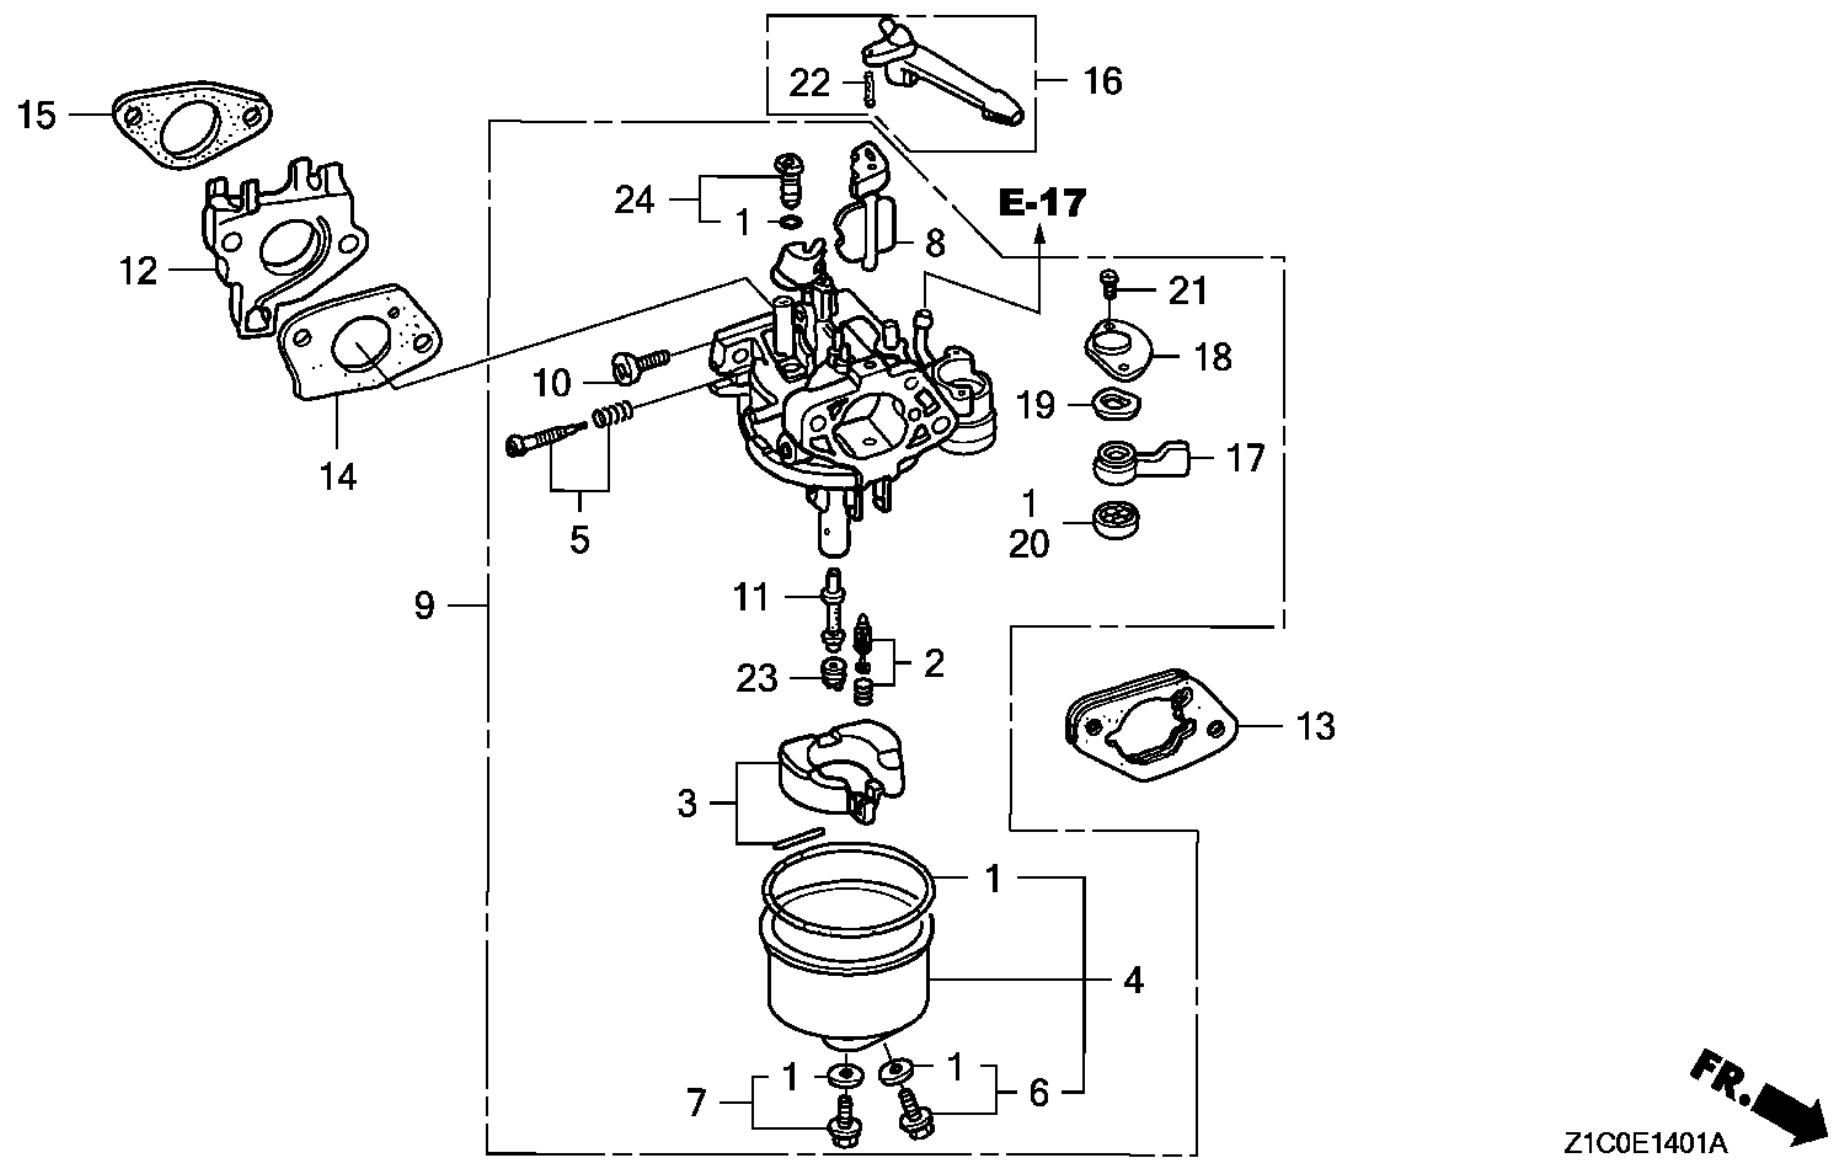

Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.	Parts catalogue code
23)	99101-ZH8-1050	JET, MAIN, #105	1	-------- -------- SN	
24	99204-ZA0-0400	JET SET, PILOT, #40	1	-------- -------- SN	

2


AIR CLEANER(SILENT)

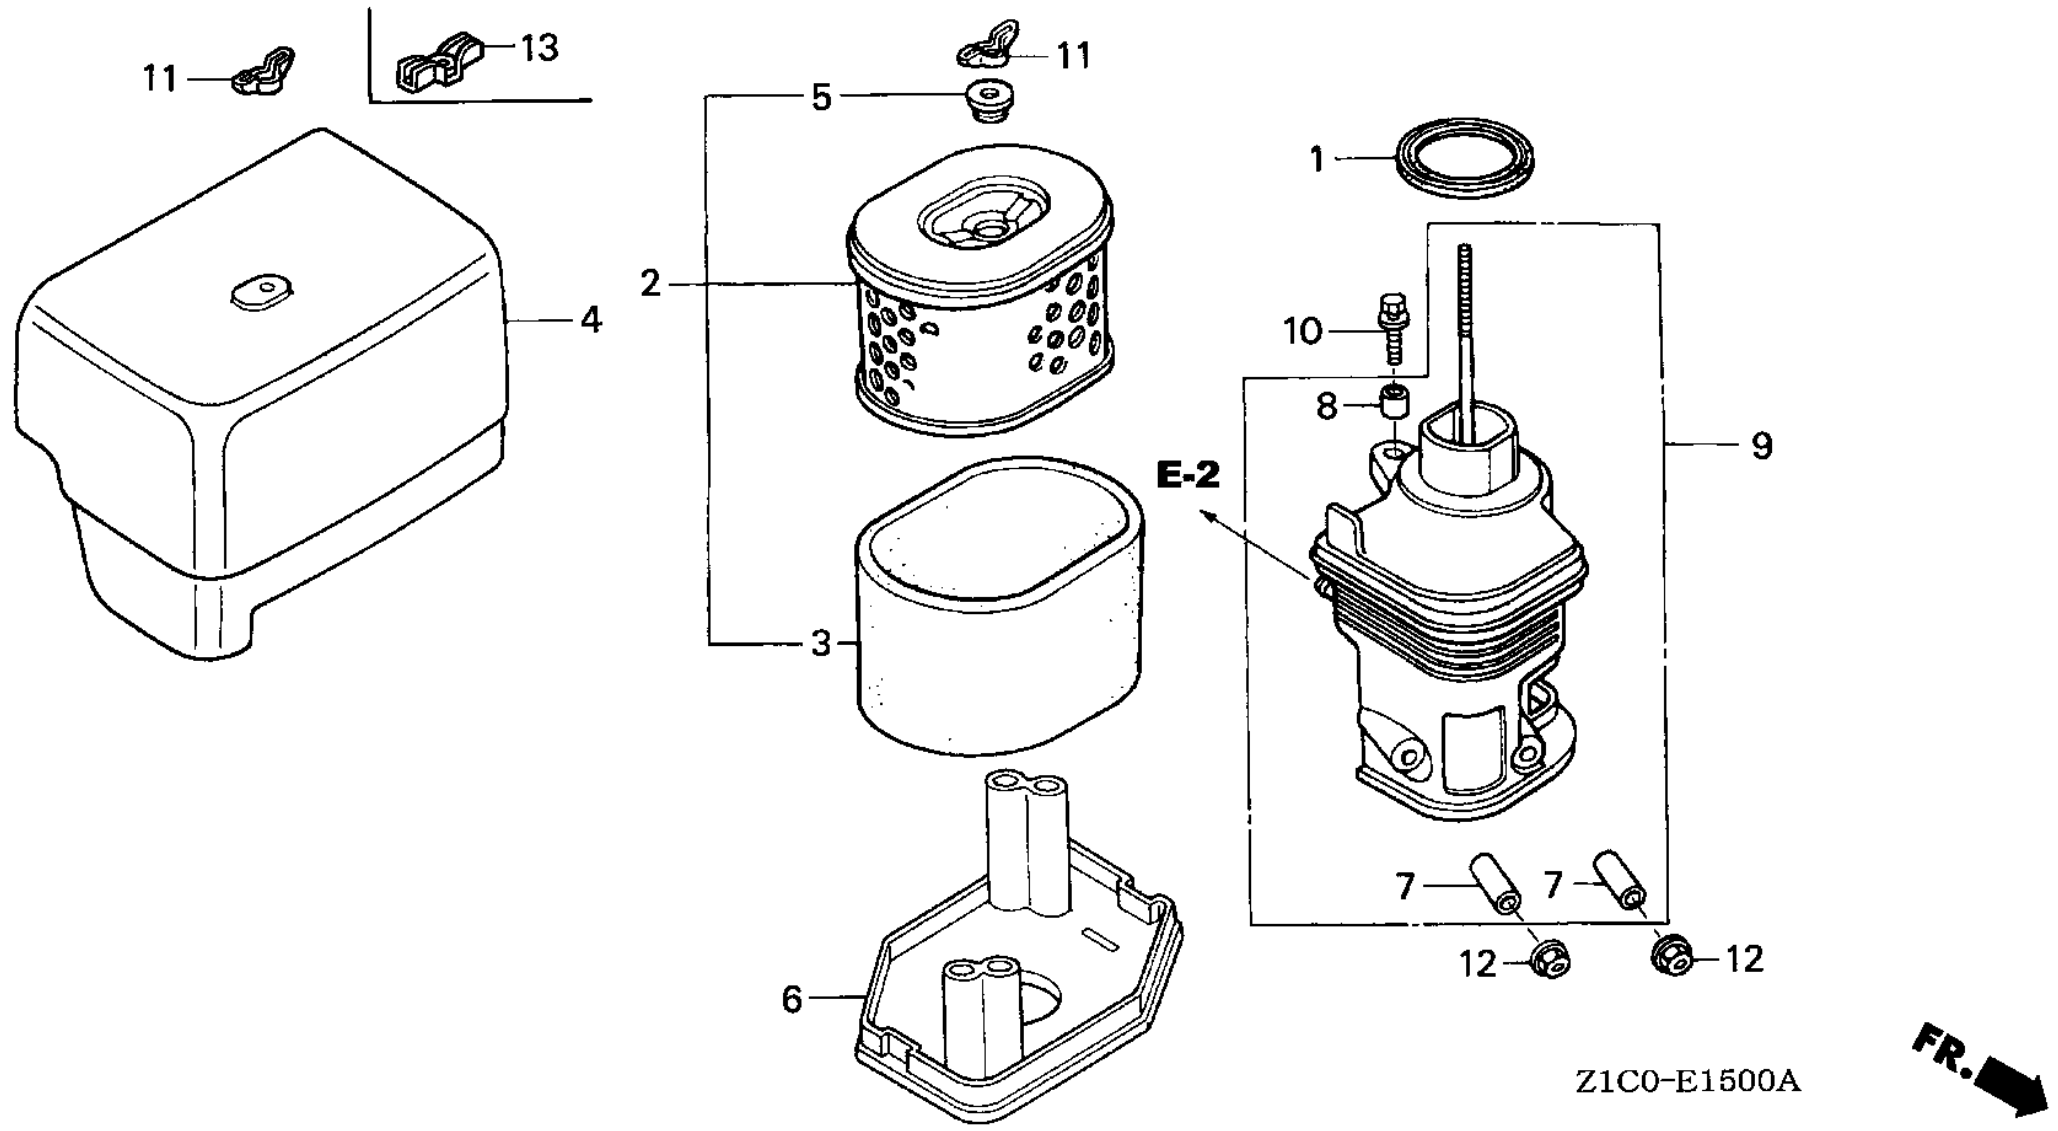

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3121E1	PACKING, ELBOW	0.1
2	3121B8	ELEMENT, AIR CLEANER	0.1
3	3121C1	FILTER, OUTER	0.1
6	3121D6	NOSE, SILENCER	0.1
9	3121B4	ELBOW, AIR CLEANER	0.1


Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.		Parts catalogue code
1	16271-ZE2-010	PACKING, ELBOW	1	--------	--------	LH,LHB5,LHP1,LH2,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QN,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SX,SXC,SXE,SXE8 SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
2	17210-ZE3-010	ELEMENT, AIR CLEANER	1	--------	--------	LH,LHB5,LHP1,LH2,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QN,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SX,SXC,SXE,SXE8 SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
3	17218-ZE3-000	FILTER, OUTER	1	--------	--------	LH,LHB5,LHP1,LH2,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QN,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SX,SXC,SXE,SXE8 SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
4	17231-ZE3-W01	COVER, AIR CLEANER	1	--------	--------	LH,LHB5,LHP1,LH2,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QN,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SX,SXC,SXE,SXE8 SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
5	17232-891-000	GROMMET, AIR CLEANER	1	--------	--------	LH,LHB5,LHP1,LH2,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QN,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SX,SXC,SXE,SXE8 SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
6	17235-ZH9-N00	NOSE, SILENCER	1	--------	1248887	LH,LHB5,LHP1,LXE8,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3,QHB5,QHP1 QMH,QX,QXE,QXE8,QXQ4,QXU,SH,SHE,SN,SX,SXC,SXE,SXE8,SXQ4,VTE5,VX,VXE,VXE8 VXU1,VX8
	17235-ZH9-N01		1	--------	--------	LH2,LXE9,QN,QXEK,QXK,VSP,VXK
			1	1248888	--------	LH,LHB5,LHP1,LXE8,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3,QHB5,QHP1 QMH,QX,QXE,QXE8,QXQ4,QXU,SH,SHE,SN,SX,SXC,SXE,SXE8,SXQ4,VTE5,VX,VXE,VXE8 VXU1,VX8
7	17238-ZE2-310	COLLAR, AIR CLEANER	2	--------	--------	LH,LHB5,LHP1,LH2,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QN,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SX,SXC,SXE,SXE8 SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
8	17239-ZE1-000	COLLAR B, AIR CLEANER	1	--------	--------	LH,LHB5,LHP1,LH2,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QN,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SX,SXC,SXE,SXE8 SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8

AIR CLEANER(SILENT)

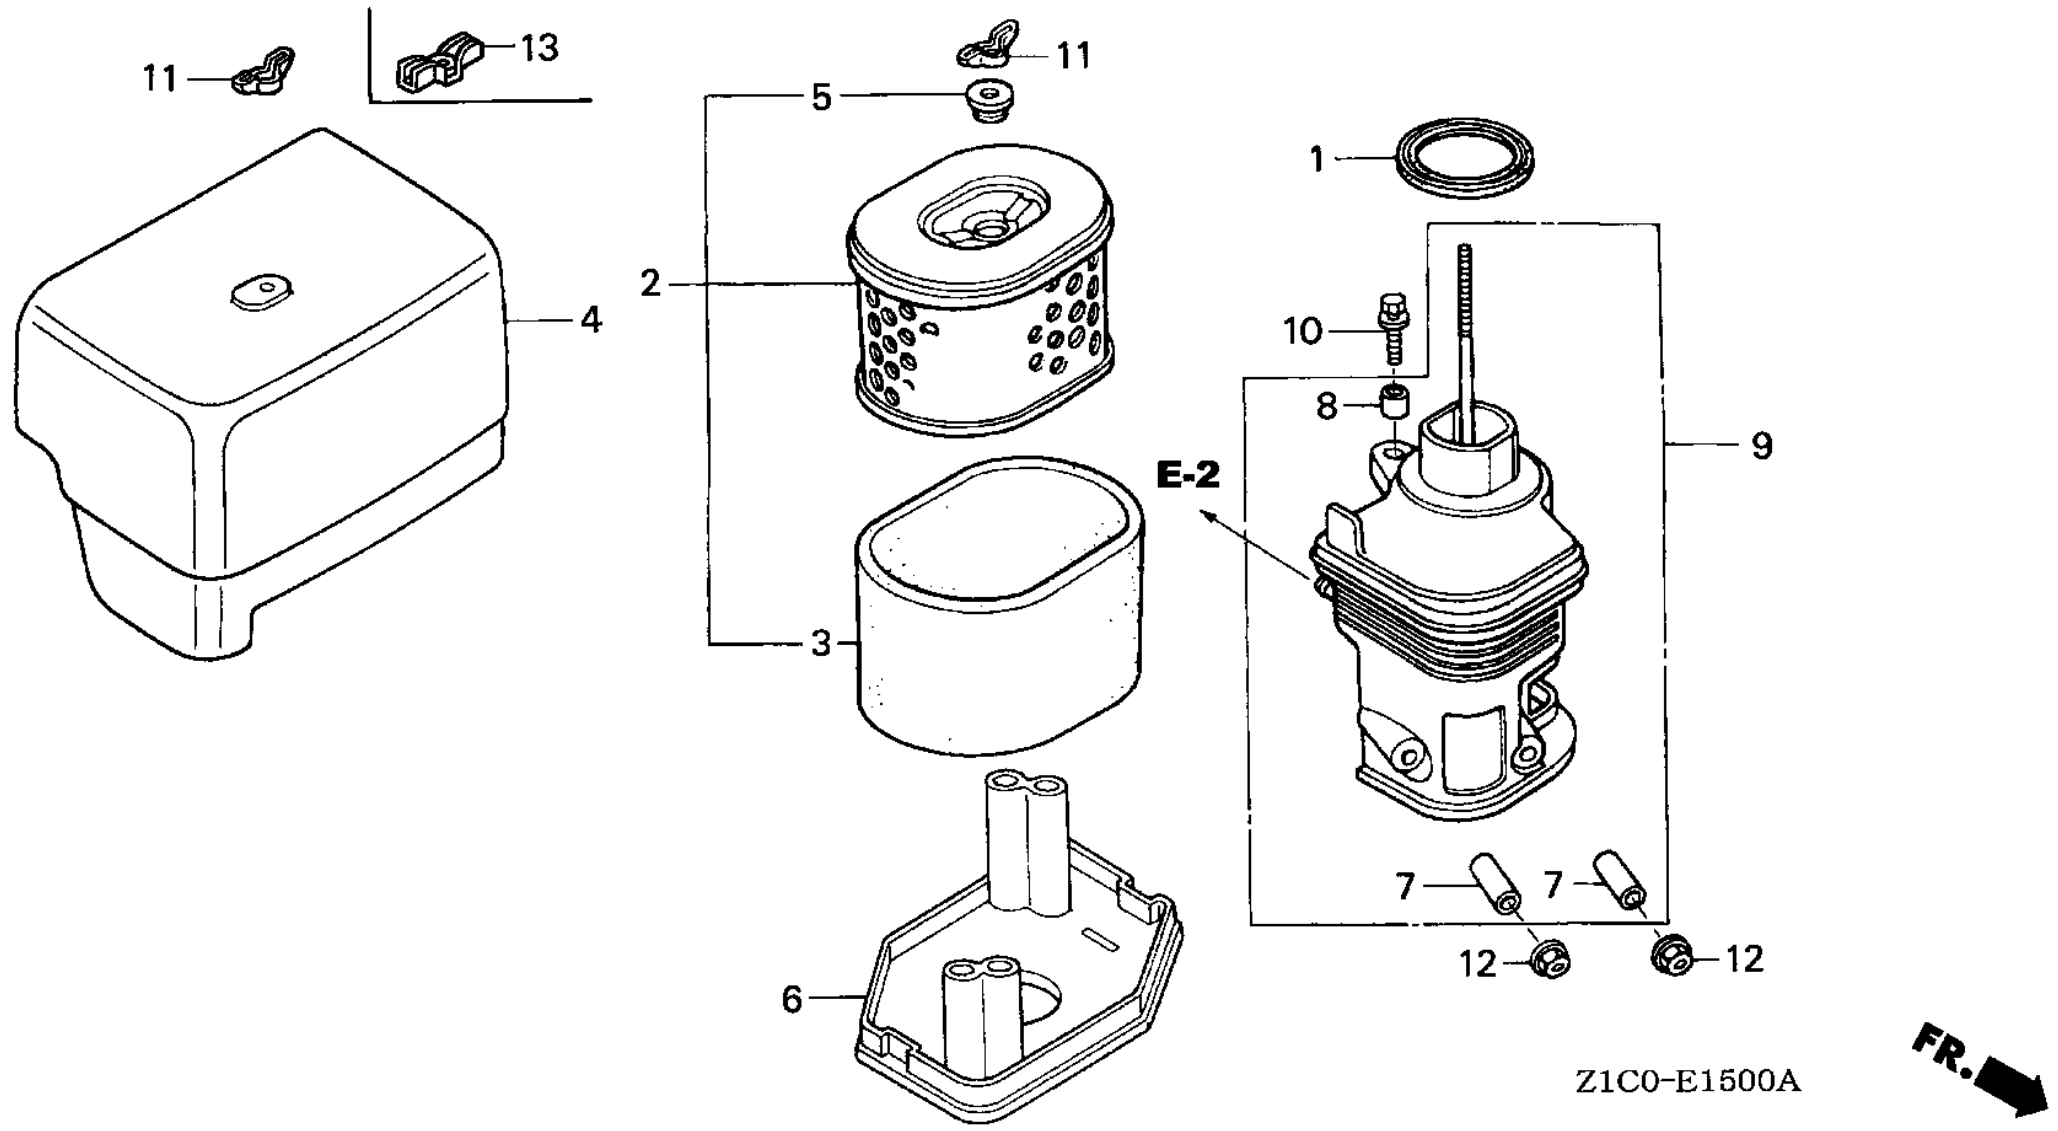

Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.		Parts catalogue code
9	17410-ZH9-N00	ELBOW COMP., AIR CLEANER ····	1	--------	--------	LH,LHB5,LHP1,LH2,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QN,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SX,SXC,SXE,SXE8 SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
10	90009-Z1C-000	BOLT-WASHER, 6X22 ············	1	--------	--------	LH,LHB5,LHP1,LH2,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QN,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SX,SXC,SXE,SXE8 SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
11	90325-044-000	NUT, TOOL BOX SETTING ·······	1	--------	--------	QAA2,QAA6,QA2,QA26
			2	--------	--------	LH,LHB5,LHP1,LH2,LXE8,LXE9,LXU,PX,PXE8,PXU,QH,QHB3,QHB5,QHP1,QMH,QN,QX QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE VXE8,VXK,VXU1,VX8
12	94050-06000	NUT, FLANGE, 6MM ············	2	--------	--------	LH,LHB5,LHP1,LH2,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QN,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SX,SXC,SXE,SXE8 SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
13	90203-ZA0-800	NUT, WING, 6MM(BLACK) ·······	1	--------	--------	QAA2,QAA6,QA2,QA26


AIR CLEANER(OIL BATH)

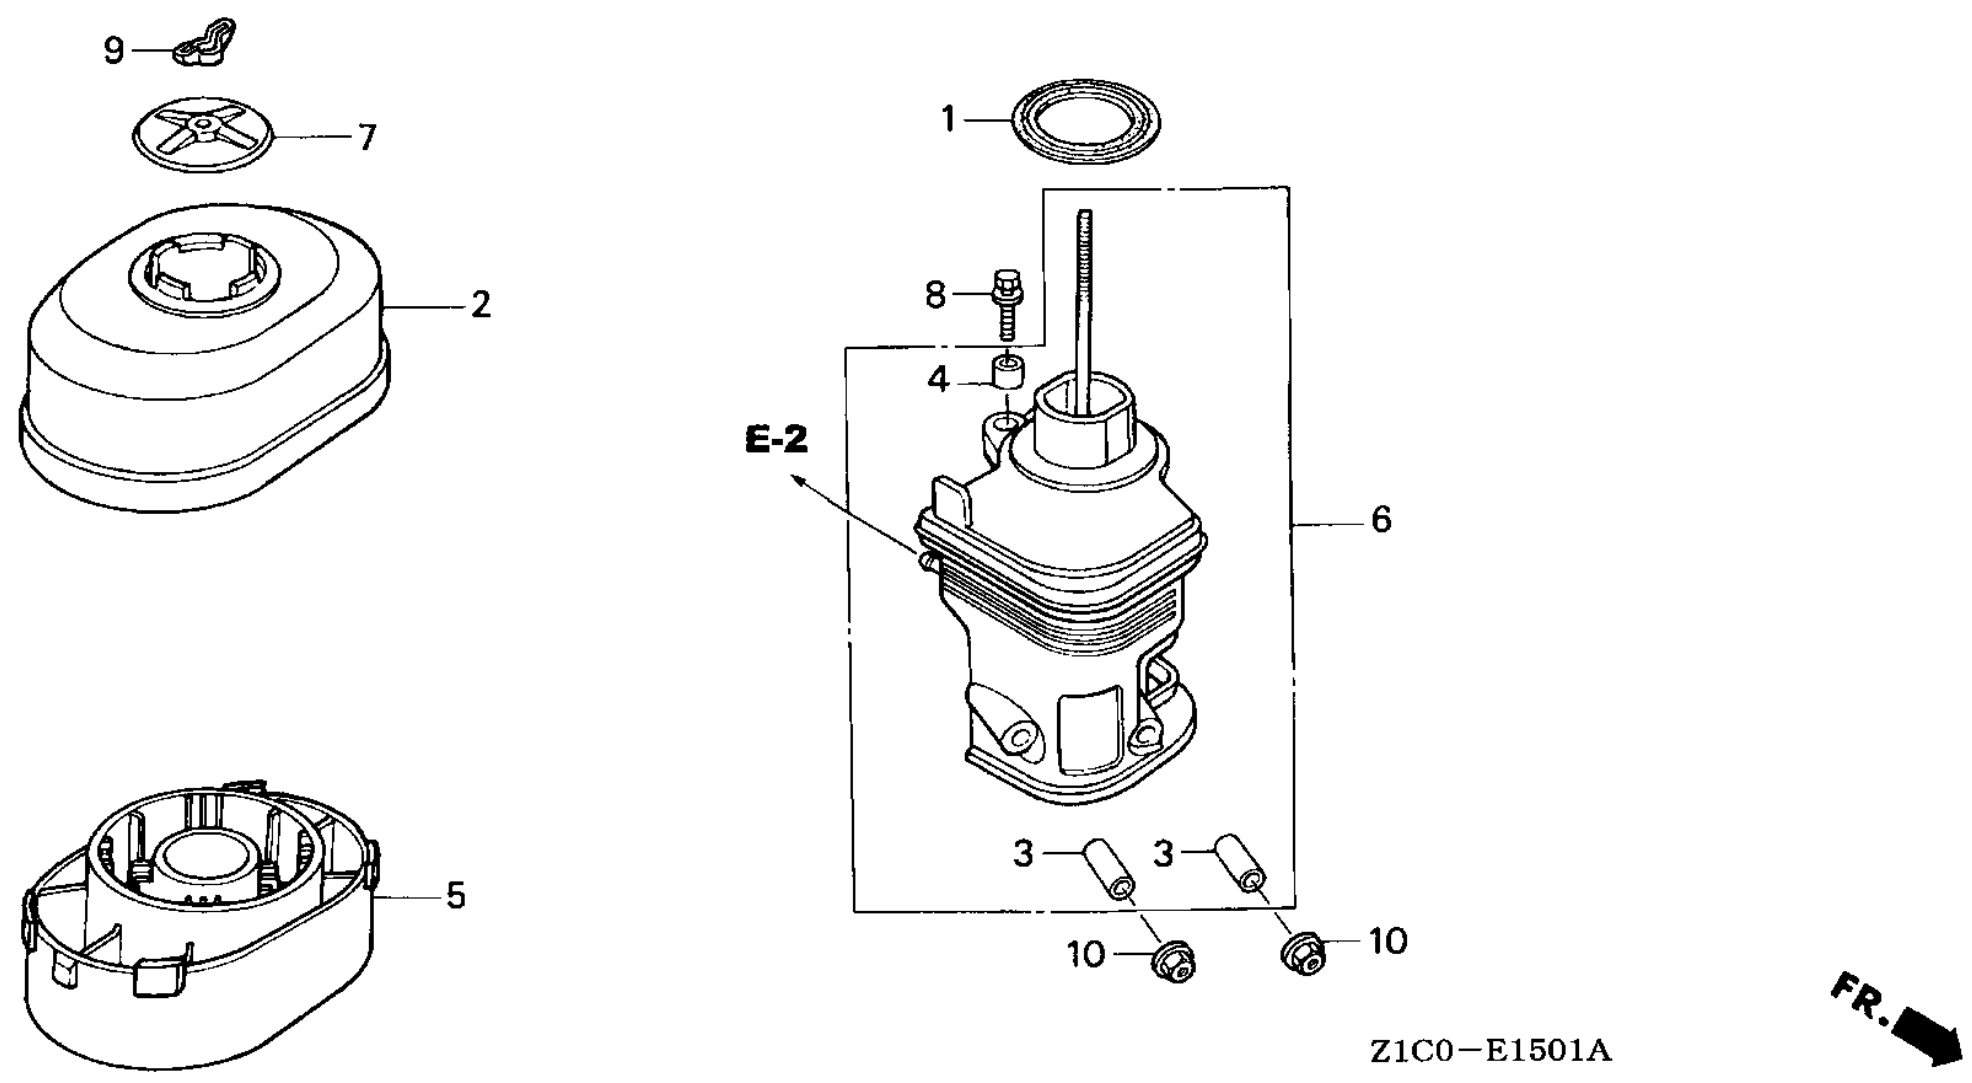

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3121E1	PACKING, ELBOW	0.1
5	3121E5	PAN, AIR CLEANER OIL	0.1
6	3121B4	ELBOW, AIR CLEANER	0.1

Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.		Parts catalogue code
1	16271-ZE2-010	PACKING, ELBOW	1	--------	--------	LT,QP,QT,QTD,SWE,SWE2,SWX,SWX2
2	17230-ZE3-811	COVER COMP., AIR CLEANER (OIL BATH)	1	--------	--------	LT,QP,QT,QTD,SWE,SWE2,SWX,SWX2
3	17238-ZE2-310	COLLAR, AIR CLEANER	2	--------	--------	LT,QP,QT,QTD,SWE,SWE2,SWX,SWX2
4	17239-ZE1-000	COLLAR B, AIR CLEANER	1	--------	--------	LT,QP,QT,QTD,SWE,SWE2,SWX,SWX2
5	17402-ZE3-810	PAN, CLEANER OIL (OIL BATH)	1	--------	--------	LT,QP,QT,QTD,SWE,SWE2,SWX,SWX2
6	17410-ZE3-010	ELBOW COMP., AIR CLEANER	1	--------	--------	LT,QP,QT,QTD,SWE,SWE2,SWX,SWX2
7	17420-ZE3-810	CAP COMP., AIR CLEANER	1	--------	--------	LT,QP,QT,QTD,SWE,SWE2,SWX,SWX2
8	90009-Z1C-000	BOLT-WASHER, 6X22	1	--------	--------	LT,QP,QT,QTD,SWE,SWE2,SWX,SWX2
9	90325-044-000	NUT, TOOL BOX SETTING	1	--------	--------	LT,QP,QT,QTD,SWE,SWE2,SWX,SWX2
10	94050-06000	NUT, FLANGE, 6MM	2	--------	--------	LT,QP,QT,QTD,SWE,SWE2,SWX,SWX2


AIR CLEANER(BOAT)

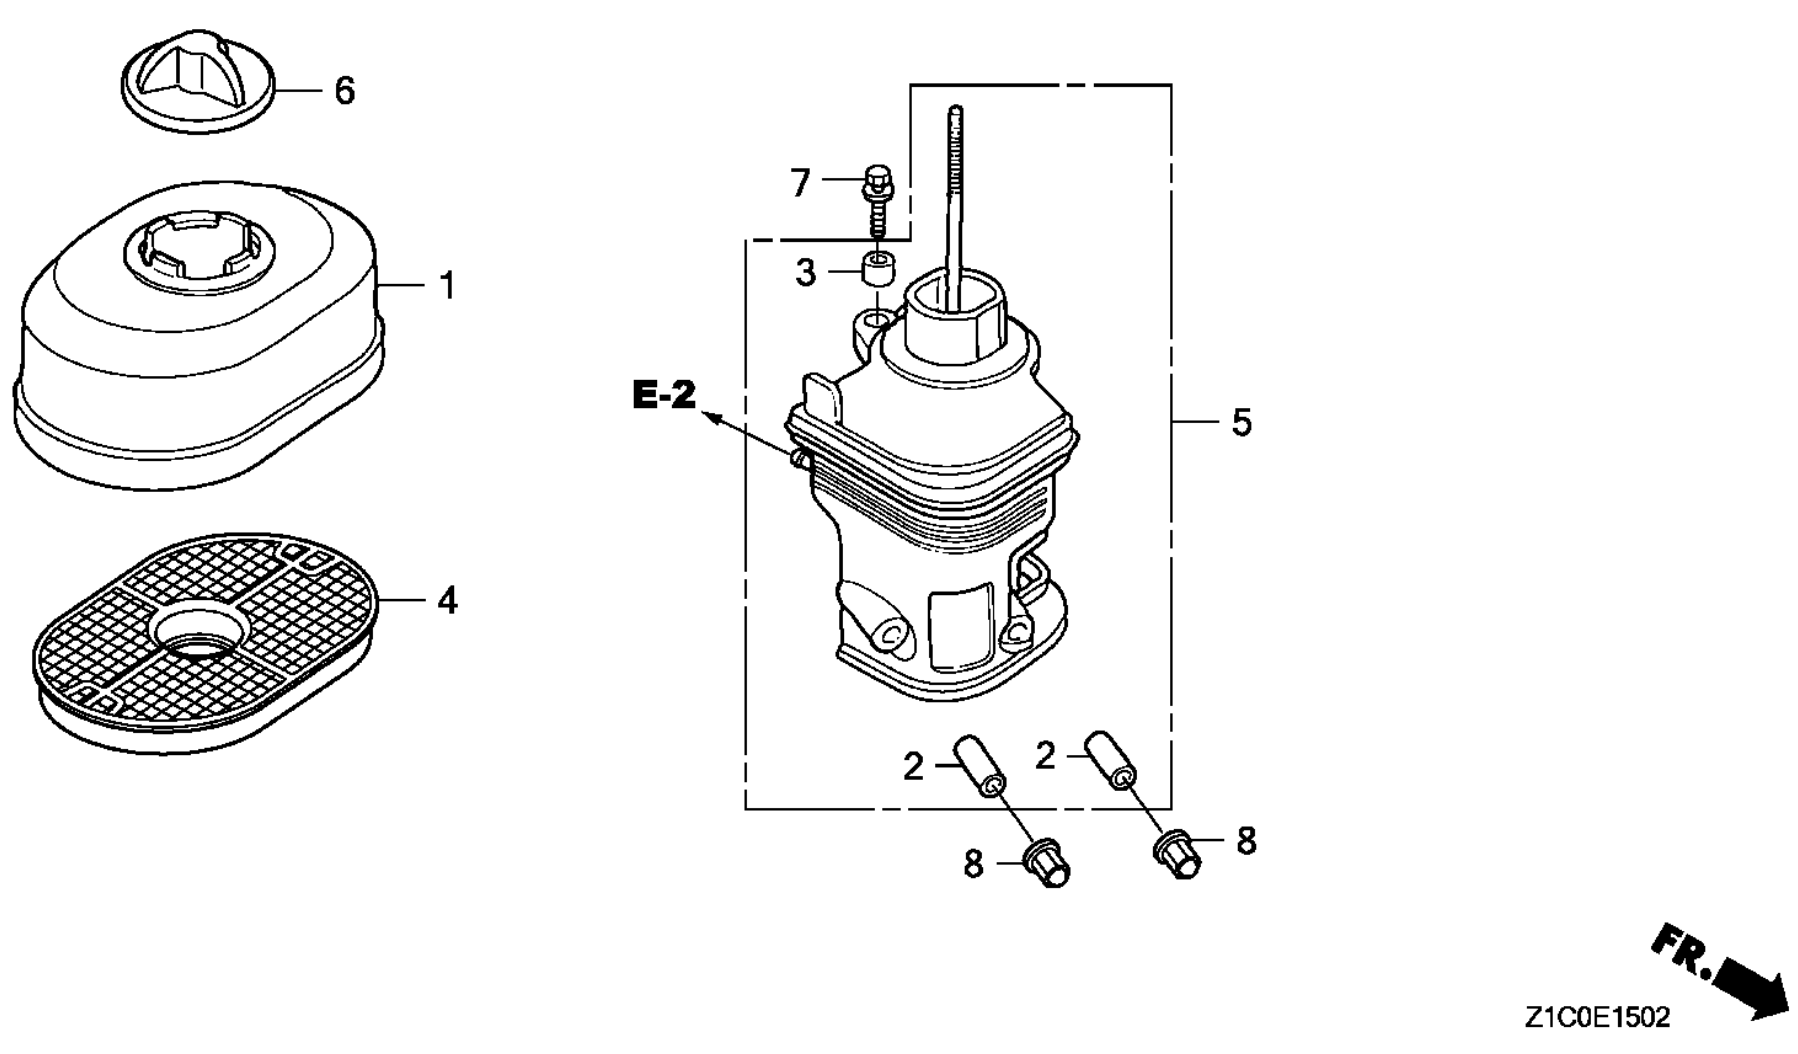

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
4	3121Q5	GRID, AIR CLEANER	0.1
5	3121B4	ELBOW, AIR CLEANER	0.1


Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.	Parts catalogue code
1	17231-ZE2-000	COVER, AIR CLEANER (SEMI DRY)	1	-------- --------	LBHB,QBH,QBHS,QBLS,QBS
2	17238-ZE2-310	COLLAR, AIR CLEANER	2	-------- --------	LBHB,QBH,QBHS,QBLS,QBS
3	17239-ZE1-000	COLLAR B, AIR CLEANER	1	-------- --------	LBHB,QBH,QBHS,QBLS,QBS
4	17250-Z1C-810	GRID, AIR CLEANER	1	-------- --------	LBHB,QBH,QBHS,QBLS,QBS
5	17410-ZE2-020	ELBOW COMP., AIR CLEANER	1	-------- --------	LBHB,QBH,QBHS,QBLS,QBS
6	17420-Z0T-800	CAP COMP., AIR CLEANER	1	-------- --------	LBHB,QBH,QBHS,QBLS,QBS
7	90001-Z0V-800	BOLT, FLANGE, 6X18	1	-------- --------	LBHB,QBH,QBHS,QBLS,QBS
8	90304-438-000	NUT, CAP, 6MM	2	-------- --------	LBHB,QBH,QBHS,QBLS,QBS

MUFFLER(1)

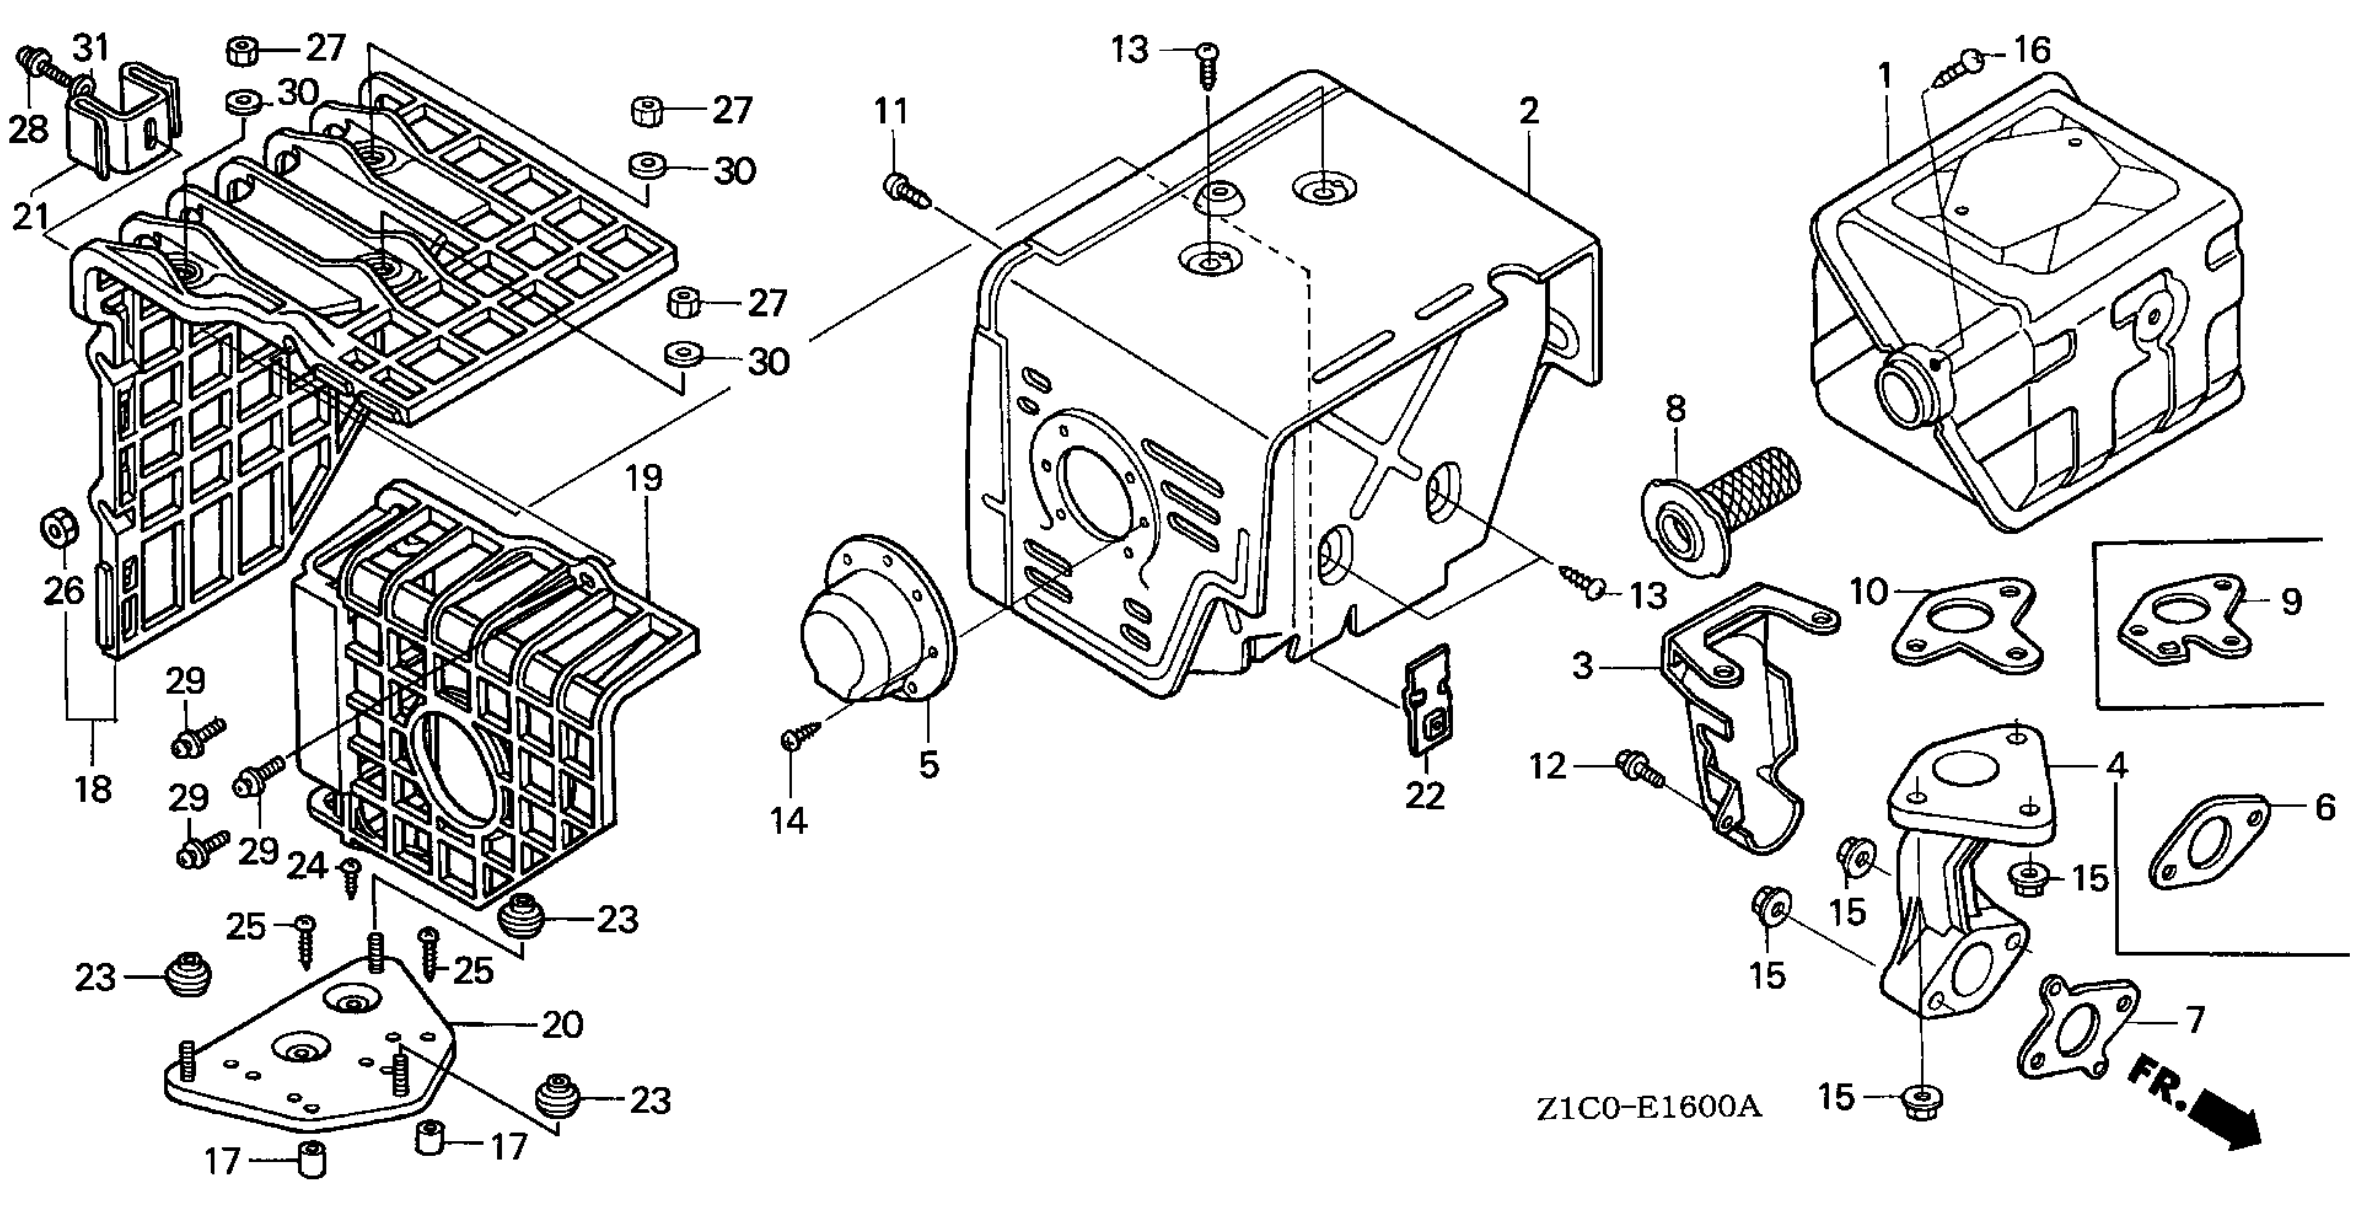


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3131C5	MUFFLER, EXHAUST ·············	0.2
2	3131D6	PROTECTOR, EXHAUST MUFFLER ···	0.2
4	3131C9	PIPE, EXHAUST ················	0.2
7		(6)	
	3131B5	GASKET, EXHAUST PIPE ·········	0.2
8	3131A1	ARRESTER, SPARK ··············	0.2
10		(9)	
	3131B4	GASKET, EXHAUST MUFFLER ······	0.2
18	3131A7	COVER, EXHAUST MUFFLER ·······	0.1
19	3131A6	COVER, EXHAUST MUFFLER :REAR ·	0.1
20	3131A2	BASE, EXHAUST MUFFLER COVER ··	0.2

Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.		Parts catalogue code
1	18310-ZE2-W61	MUFFLER COMP. (100DB) ·······	1	--------	--------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QN,QP,QT,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SWE,SWE2 SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
2	18320-ZE2-W61	PROTECTOR COMP., MUFFLER ····	1	--------	--------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QN,QP,QT,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SWE,SWE2 SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
3	18323-ZE3-W40	PROTECTOR, EX. PIPE ·········	1	--------	--------	LT,QAA2,QAA6,QA2,QA26
4	18330-ZE2-W00	PIPE, EX. ···················	1	--------	--------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QN,QP,QT,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SWE,SWE2 SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
5	18331-ZE3-810	CAP, MUFFLER ················	1	--------	--------	QA2,QA26
			1	--------	1443262	LT,QMH,QP,QT,SWX
	18331-ZE3-811	·····························	1	--------	--------	QN,SWX2
			1	1443263	--------	LT,QMH,QP,QT,SWX
6	18333-ZE3-800	GASKET, EX. PIPE ············	1	--------	1324128	LP
	18333-Z1C-801	·····························	1	1324129	--------	LP
7	18333-ZF6-W01	GASKET, EX. PIPE ············	1	--------	--------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QN,QP,QT,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SWE,SWE2 SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
8	18355-ZE2-W00	ARRESTER, SPARK ·············	1	--------	--------	QA2,QA26
			(1)	--------	--------	LXE9,LXU
9	18381-ZE2-W10	GASKET, MUFFLER (ARRESTER) ··	1	--------	--------	QA2,QA26
			(1)	--------	--------	LXE9,LXU
10	18381-ZE2-800	GASKET, MUFFLER (NIPPON LEAKLESS)	1	--------	--------	LXE8,LXU,PXE8,PXU,QAA2,QAA6,QXE8,QXQ4,QXU,SXE8,SXQ4,VXE8,VX8
			1	--------	1337116	LH,LHB5,LHP1,LT,PX,QH,QHB3,QHB5,QHP1,QMH,QP,QT,QX,QXE,SH,SHE,SN,SWE,SWX SX,SXC,SXE,VTE5,VX,VXE,VXU1

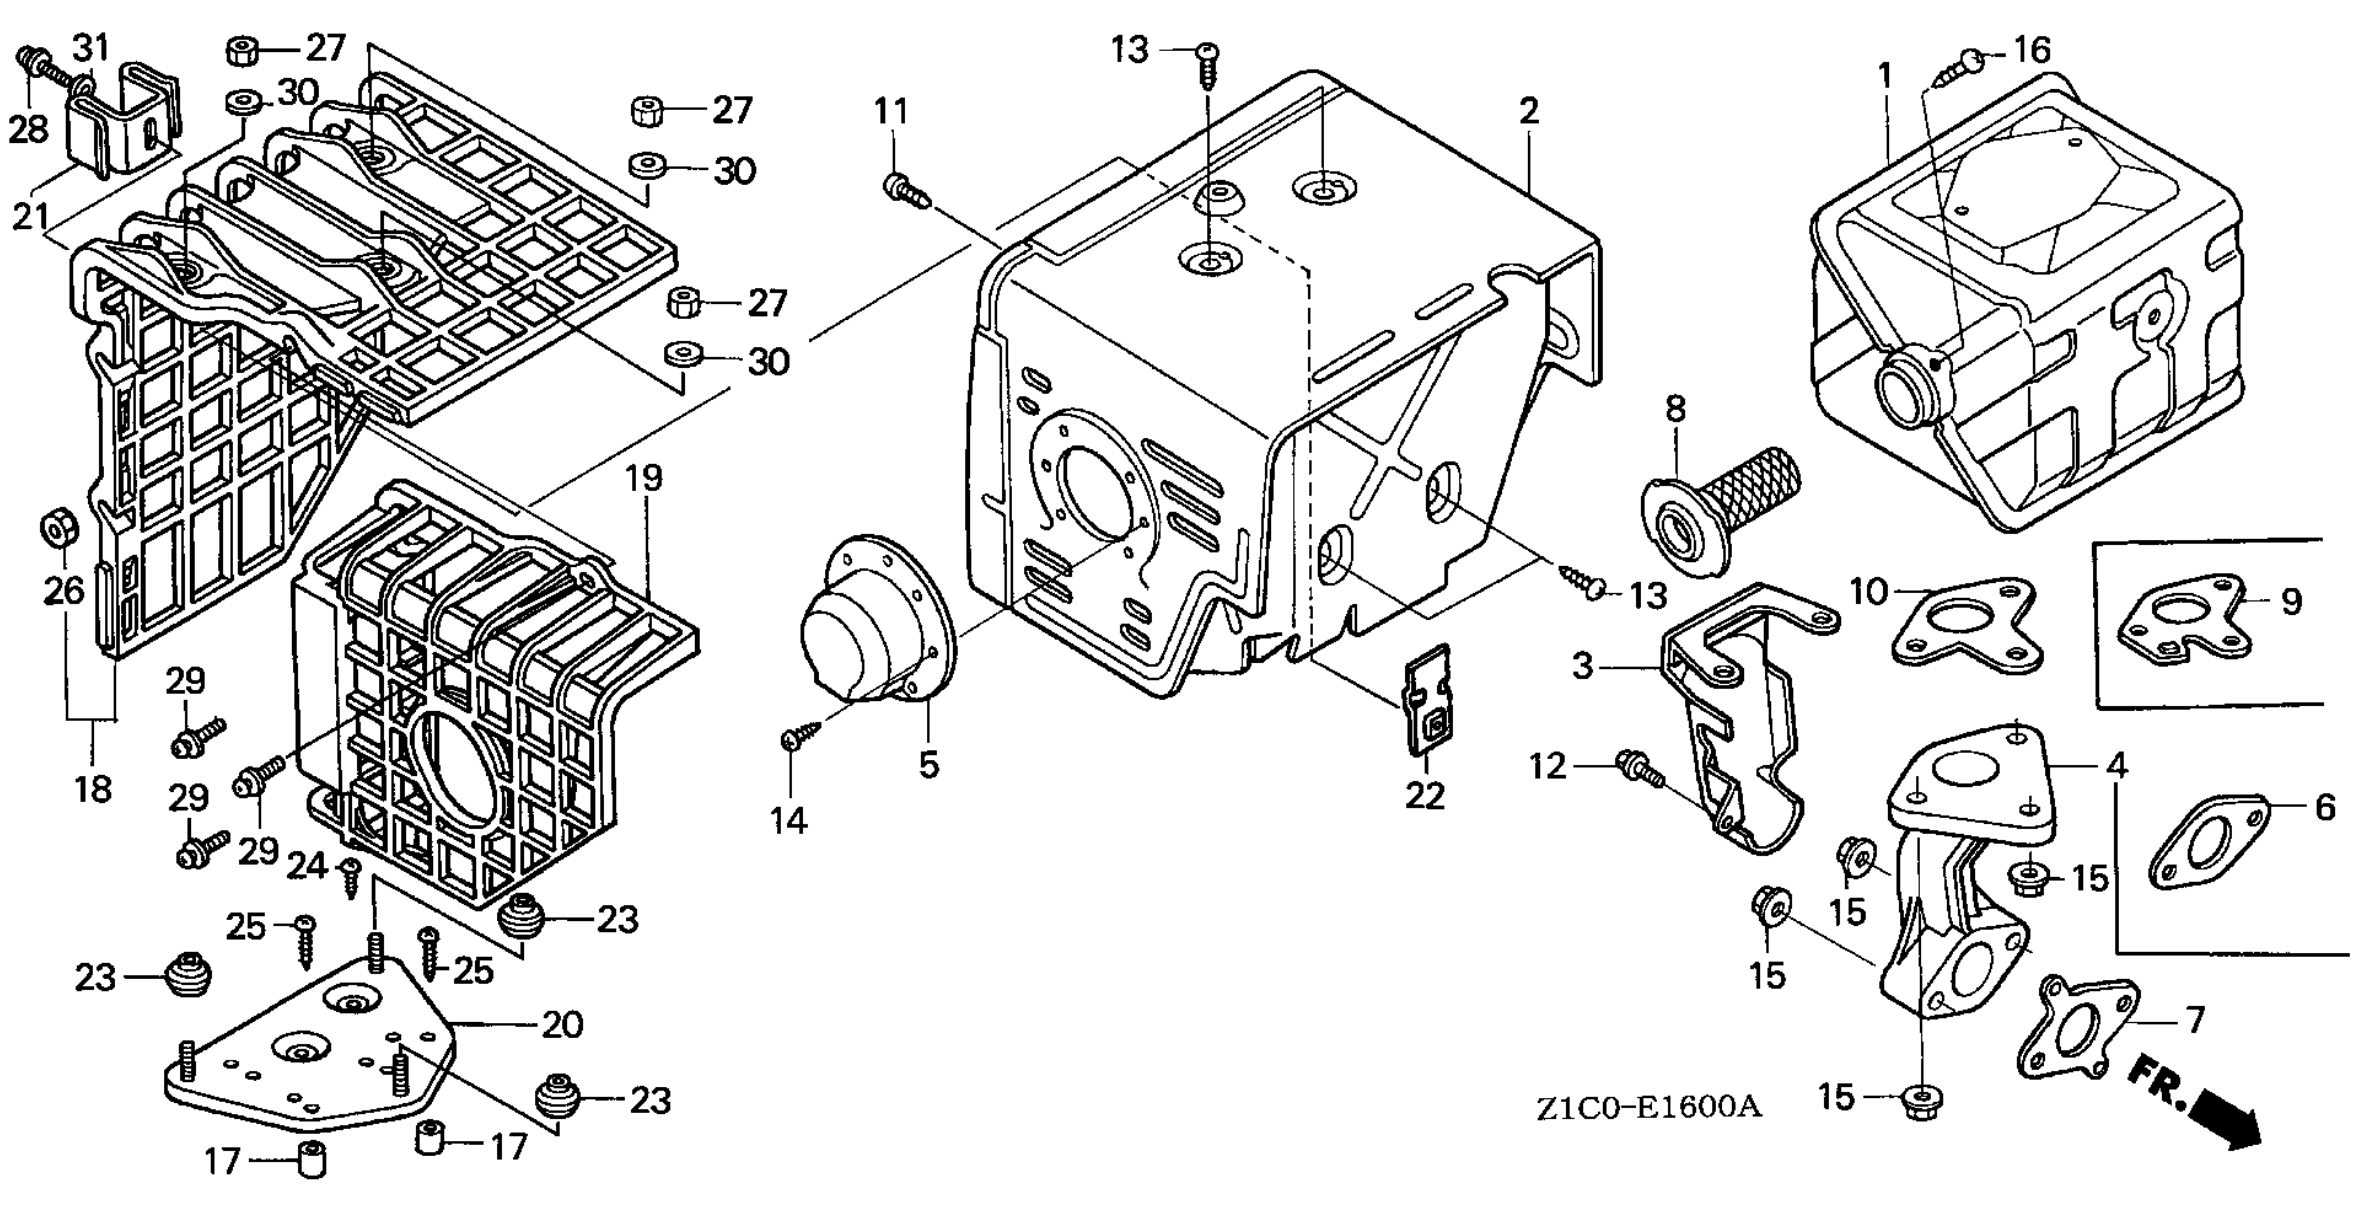


Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.		Parts catalogue code
10)	18381-Z1C-801	GASKET, MUFFLER				
		(THAI LEAKLESS)	1	--------	--------	LH2,LXE9,QN,QXEK,QXK,SWE2,SWX2,VSP,VXK
			1	1337117	--------	LH,LHB5,LHP1,LT,PX,QH,QHB3,QHB5,QHP1,QMH,QP,QT,QX,QXE,SH,SHE,SN,SWE,SWX SX,SXC,SXE,VTE5,VX,VXE,VXU1
11	90006-ZE2-000	SCREW, TAPPING, 6X10	1	--------	--------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QN,QP,QT,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SWE,SWE2 SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
12	90013-883-000	BOLT, FLANGE, 6X12(CT200)	1	--------	--------	LT,QAA2,QAA6,QA2,QA26
13	90050-ZE1-000	SCREW, TAPPING, 5X8	4	--------	--------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QN,QP,QT,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SWE,SWE2 SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
14	90055-ZE1-000	SCREW, TAPPING, 4X6	3	--------	--------	LT,QA2,QA26,QMH,QN,QP,QT,SWX,SWX2
15	94050-08000	NUT, FLANGE, 8MM	5	--------	--------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QN,QP,QT,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SWE,SWE2 SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
16	90050-ZE1-000	SCREW, TAPPING, 5X8	1	--------	--------	QA2,QA26
	90055-ZE1-000	SCREW, TAPPING, 4X6	(1)	--------	--------	LXE9,LXU
17	17233-896-701	COLLAR, AIR CLEANER CASE	(2)	--------	--------	QXQ4,SXQ4
18	18433-ZF6-W40	COVER COMP., MUFFLER	(1)	--------	--------	QXQ4,SXQ4
19	18434-ZF6-W40	COVER COMP., RR. MUFFLER	(1)	--------	--------	QXQ4,SXQ4
20	18436-ZH8-W40	BASE COMP., MUFFLER COVER	(1)	--------	--------	QXQ4,SXQ4
21	18437-ZF6-W40	STAY, MUFFLER COVER	(1)	--------	--------	QXQ4,SXQ4
22	18438-ZF6-W40	PLATE, SET	(1)	--------	--------	QXQ4,SXQ4
23	18466-ZH8-W40	SPACER, MUFFLER COVER	(3)	--------	--------	QXQ4,SXQ4
24	90050-ZE1-000	SCREW, TAPPING, 5X8	(1)	--------	--------	QXQ4,SXQ4
25	90050-ZH8-W40	SCREW, TAPPING, 5X25	(2)	--------	--------	QXQ4,SXQ4

MUFFLER(1)

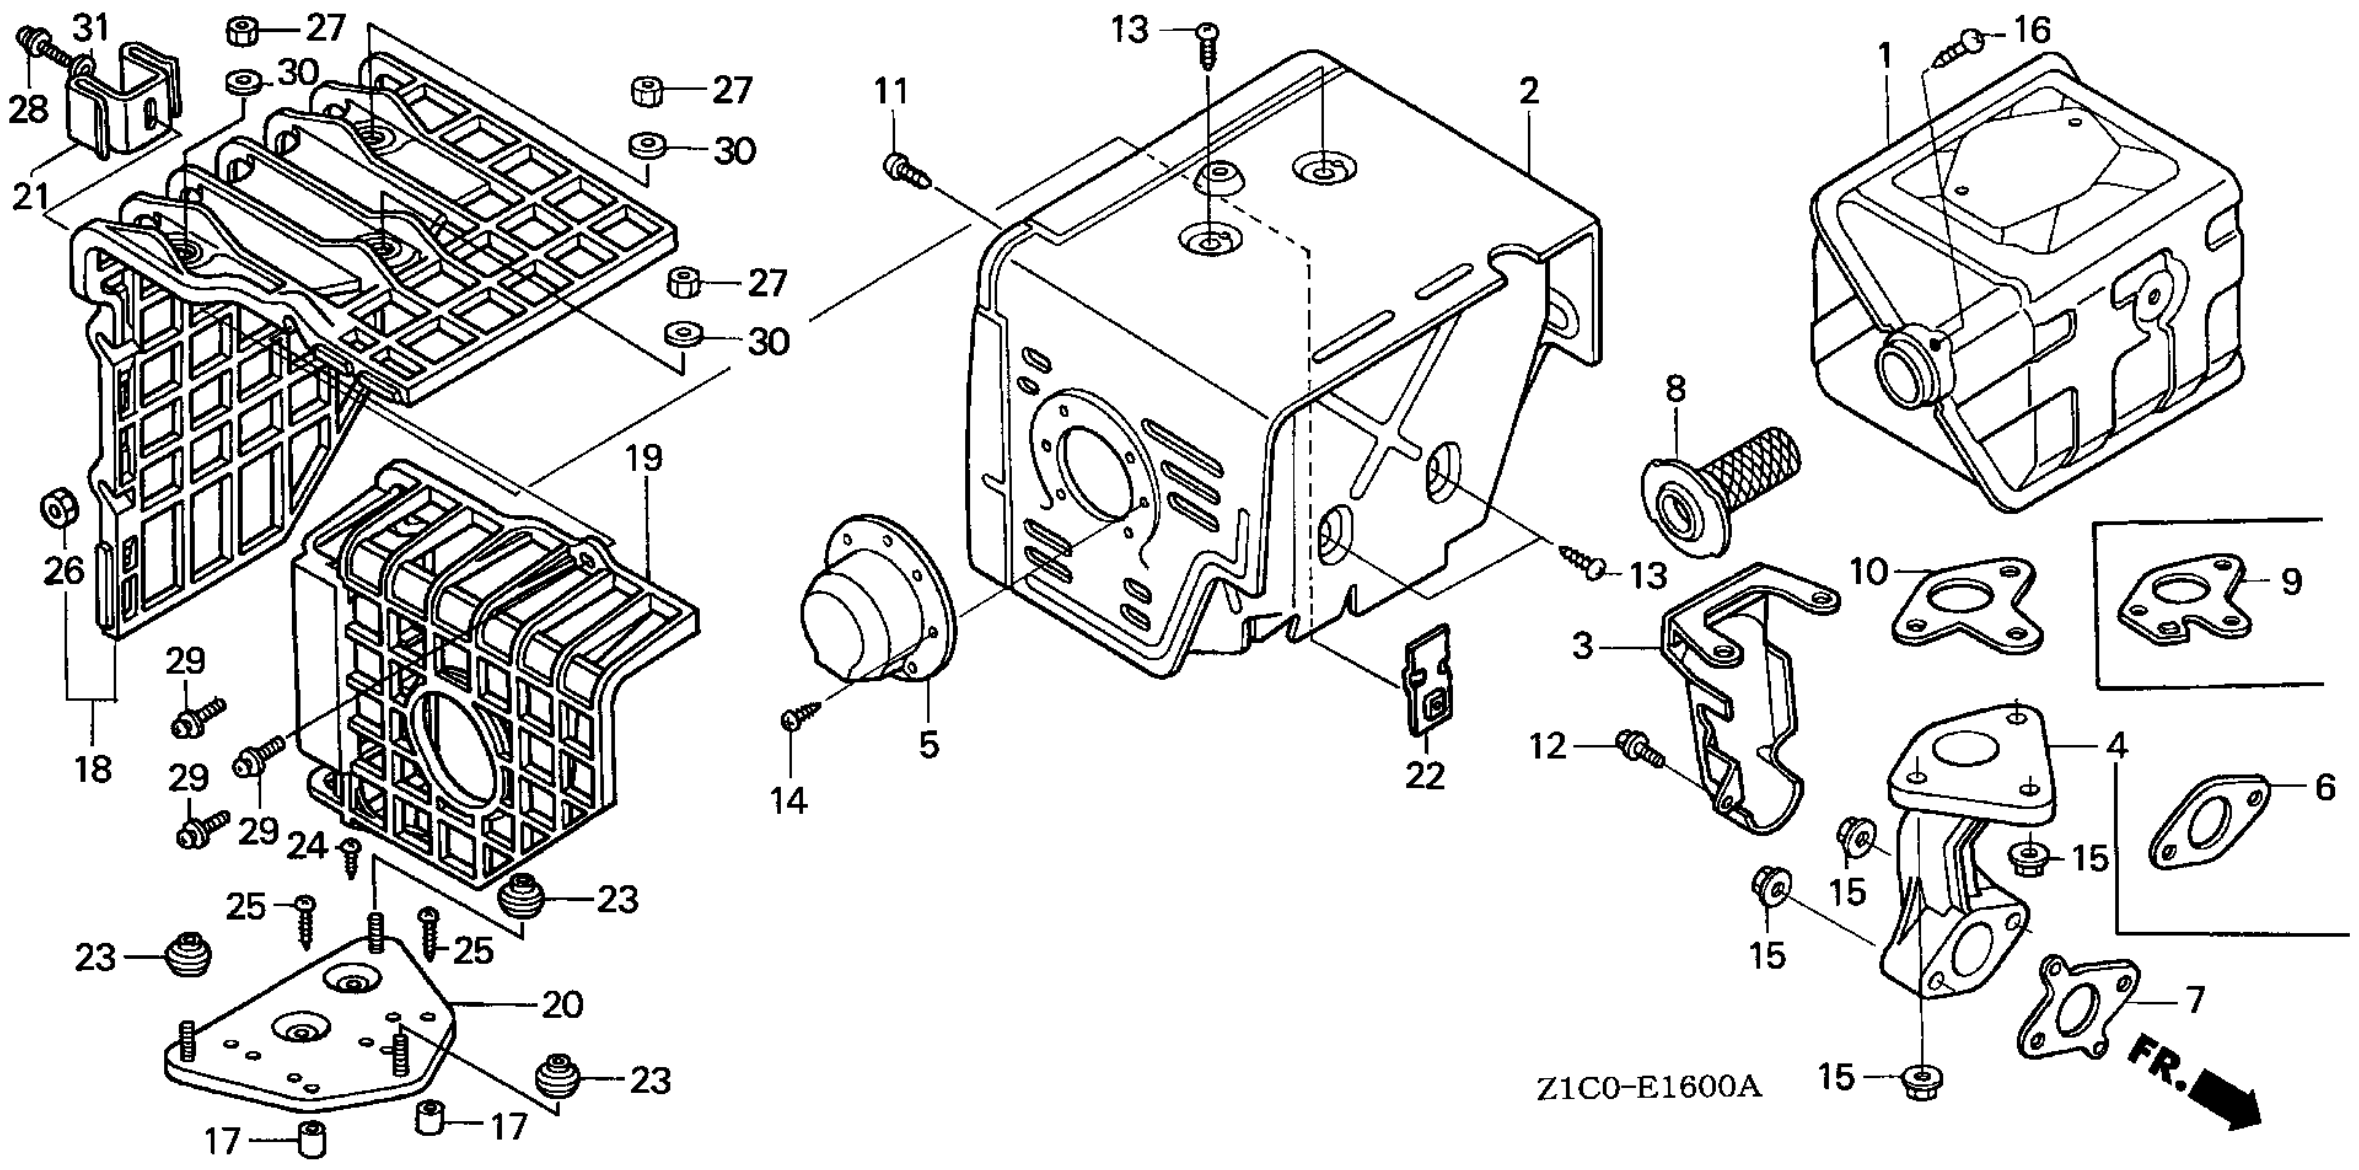

Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.		Parts catalogue code
26	90301-782-000	NUT, U, 6MM	(3)	--------	--------	QXQ4,SXQ4
27	90302-KF9-900	NUT, HEX., 5MM	(3)	--------	--------	QXQ4,SXQ4
28	93891-05012-00	SCREW-WASHER, 5X12	(1)	--------	--------	QXQ4,SXQ4
29	93891-06020-07	SCREW-WASHER, 6X20	(3)	--------	--------	QXQ4,SXQ4
30	94103-05700	WASHER, PLAIN, 5MM	(3)	--------	--------	QXQ4,SXQ4
31	94111-05000	WASHER, SPRING, 5MM	(1)	--------	--------	QXQ4,SXQ4


MUFFLER(2)

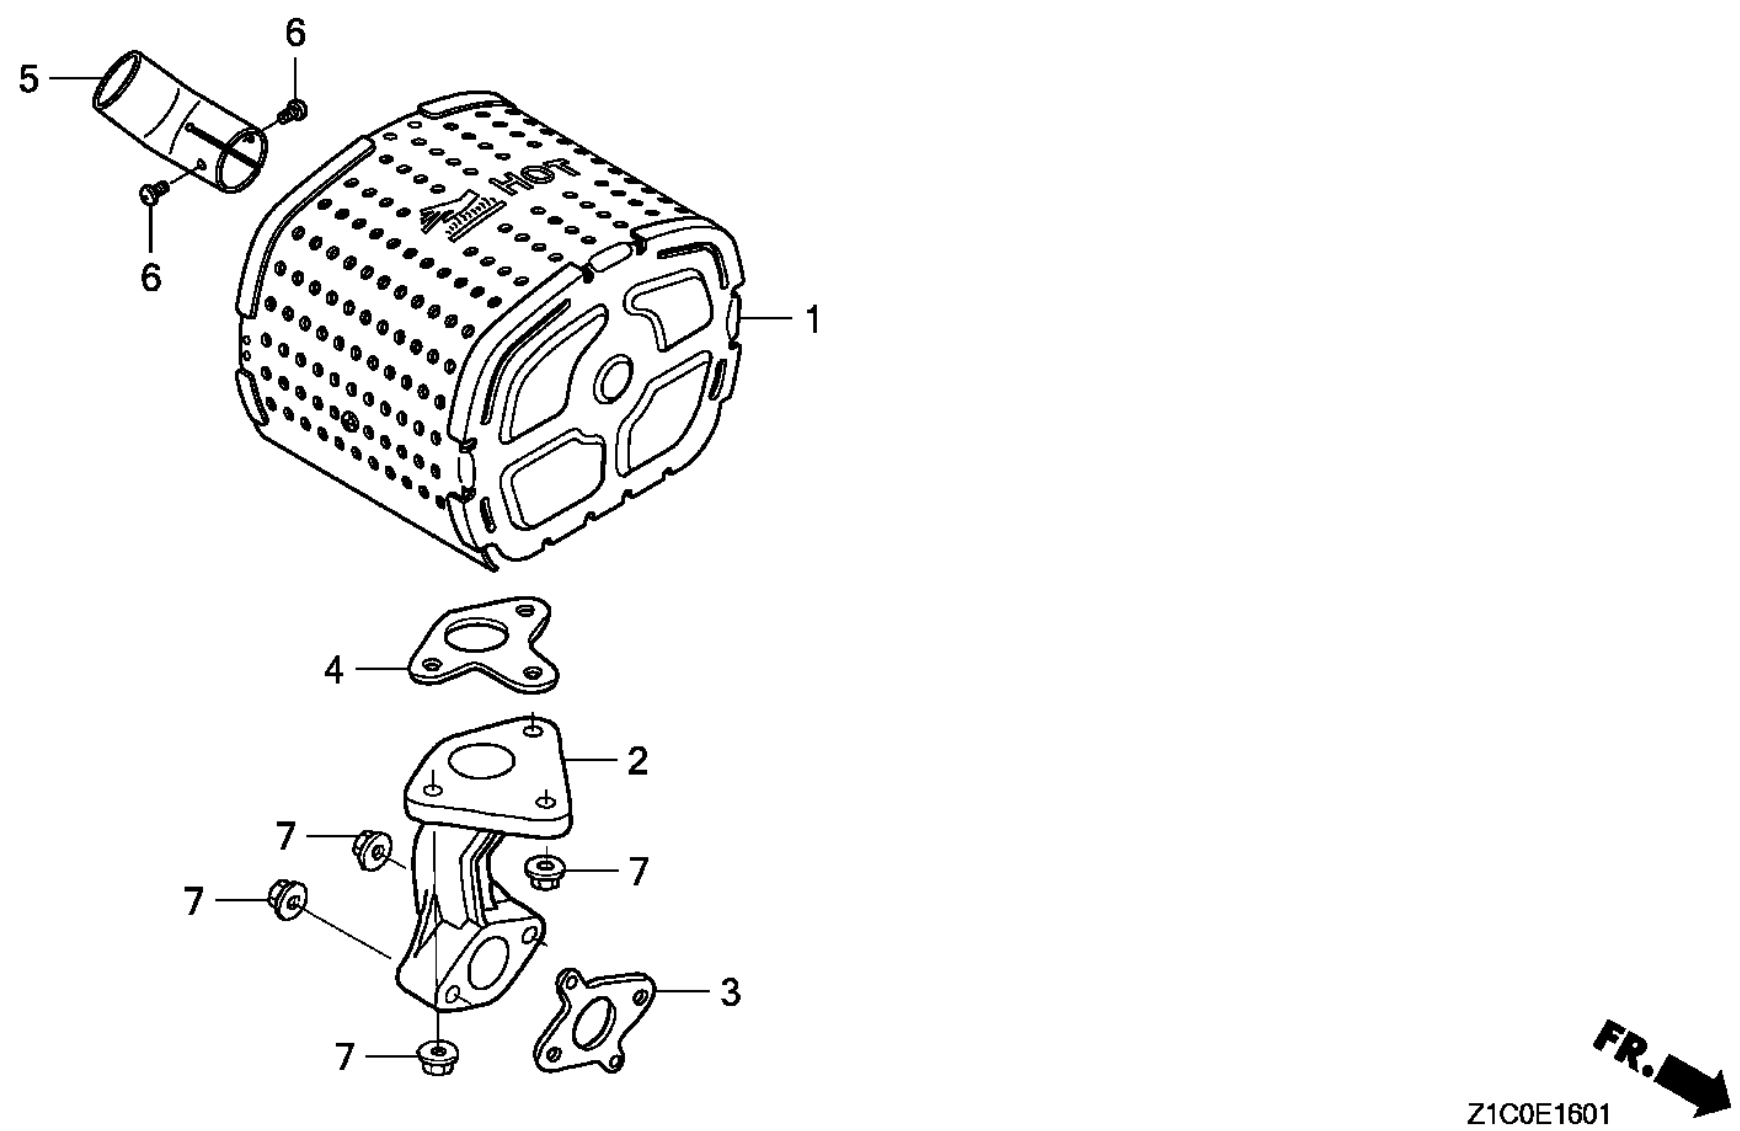

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3131C5	MUFFLER, EXHAUST ·············	0.2
2	3131C9	PIPE, EXHAUST ················	0.2
3	3131B5	GASKET, EXHAUST PIPE ·········	0.2
4	3131B4	GASKET, EXHAUST MUFFLER ······	0.2
5	3131A8	DEFLECTOR, EXHAUST MUFFLER ···	0.1

Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.		Parts catalogue code
1	18310-Z1C-810	MUFFLER COMP. ················	1	--------	--------	LBHB,QBH,QBHS,QBLS,QBS
2	18331-Z1C-800	PIPE, EX. ····················	1	--------	--------	LBHB,QBH,QBHS,QBLS,QBS
3	18333-ZF6-W01	GASKET, EX. PIPE ············	1	--------	--------	LBHB,QBH,QBHS,QBLS,QBS
4	18381-Z1C-801	GASKET, MUFFLER (THAI LEAKLESS)	1	--------	--------	LBHB,QBH,QBHS,QBLS,QBS
5	18431-Z0T-800	DEFLECTOR, MUFFLER ··········	1	--------	--------	LBHB,QBHS,QBLS
6	90055-ZE1-000	SCREW, TAPPING, 4X6 ·········	2	--------	--------	LBHB,QBHS,QBLS
7	94050-08000	NUT, FLANGE, 8MM ············	5	--------	--------	LBHB,QBH,QBHS,QBLS,QBS

FUEL TANK

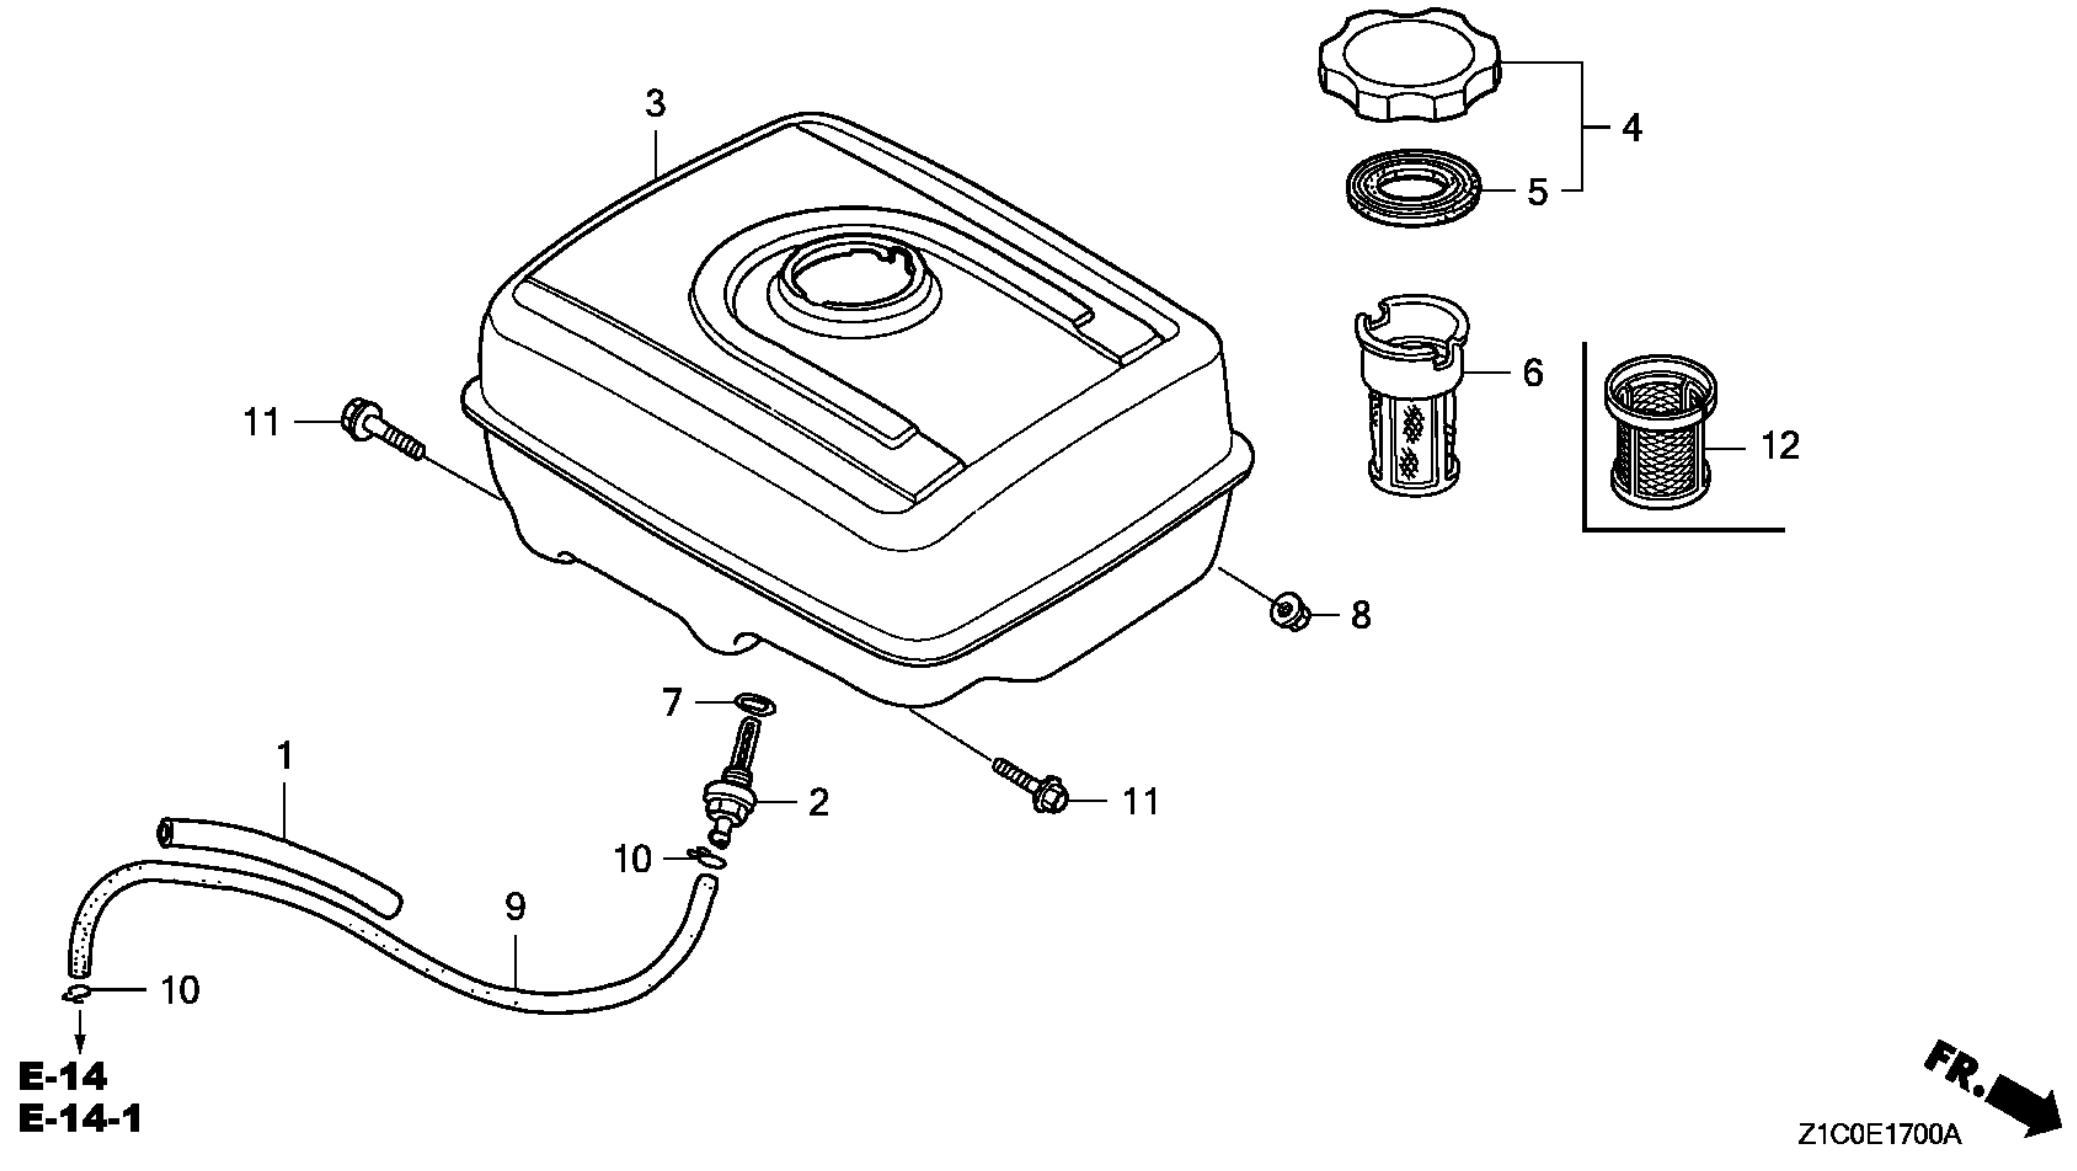


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2		(7)	
	3101H6	JOINT, FUEL STRAINER ----------	0.2
3	3101H7	TANK, FUEL -------------------	0.2
6		(12)	
	3101A6	FILTER, FUEL -----------------	0.1
9	3101F1	TUBE, FUEL TANK -------------	0.2

Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.		Parts catalogue code
1	16854-ZH8-000	RUBBER, SUPPORTER (107MM) ---	1	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26 QBH,QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK QXQ4,QXU,SH,SHE,SN,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VX,VXE,VXE8 VXK,VXU1,VX8
2	16955-ZE1-000	JOINT, FUEL TANK ------------	1	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26 QBH,QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK QXQ4,QXU,SH,SHE,SN,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VX,VXE,VXE8 VXK,VXU1,VX8
3	17510-ZE3-020ZA	TANK COMP., FUEL				
		NH31.........MCKINLEY WHITE	1	--------	--------	LXE8,LXU,PXE8,PXU,QAA2,QAA6,QA2,QA26,QXE8,QXQ4,QXU,SXE8,SXQ4,VXE8,VX8
			1	--------	1463865	LH,LHB5,LHP1,LP,LT,LXE9,PX,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK QXK,SH,SHE,SN,SWE,SWX,SX,SXC,SXE,VSP,VX,VXE,VXK,VXU1
	17510-ZE3-020ZB	*NH1*...................BLACK	1	--------	--------	QAA2,QA2
	17510-ZE3-030ZA	*NH31*.........MCKINLEY WHITE	1	--------	--------	LH2,SWE2,SWX2
			1	1463866	--------	LH,LHB5,LHP1,LP,LT,LXE9,PX,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK QXK,SH,SHE,SN,SWE,SWX,SX,SXC,SXE,VSP,VX,VXE,VXK,VXU1
	17510-Z1C-810ZA	*NH31*.........MCKINLEY WHITE	1	--------	--------	LBHB,QBH,QBHS,QBLS,QBS
4	17620-Z0T-813	CAP COMP., FUEL FILLER (CHROME PLATED)	1	--------	--------	LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VX,VXE,VXE8,VXK,VXU1,VX8
	17620-Z0T-820	....	1	--------	--------	LBHB,QBH,QBHS,QBLS,QBS
5	17631-Z0T-801	PACKING, FUEL FILLER CAP (39X62X3)	1	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26 QBH,QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK QXQ4,QXU,SH,SHE,SN,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VX,VXE,VXE8 VXK,VXU1,VX8
6	17672-ZE2-W01	FILTER, FUEL ---------------	1	--------	--------	LHB5,LT,QAA2,QAA6,QA2,QA26,QHB3,QHB5,QN,QP,QT,QTD,SWX,SWX2,SXC


2

FUEL TANK

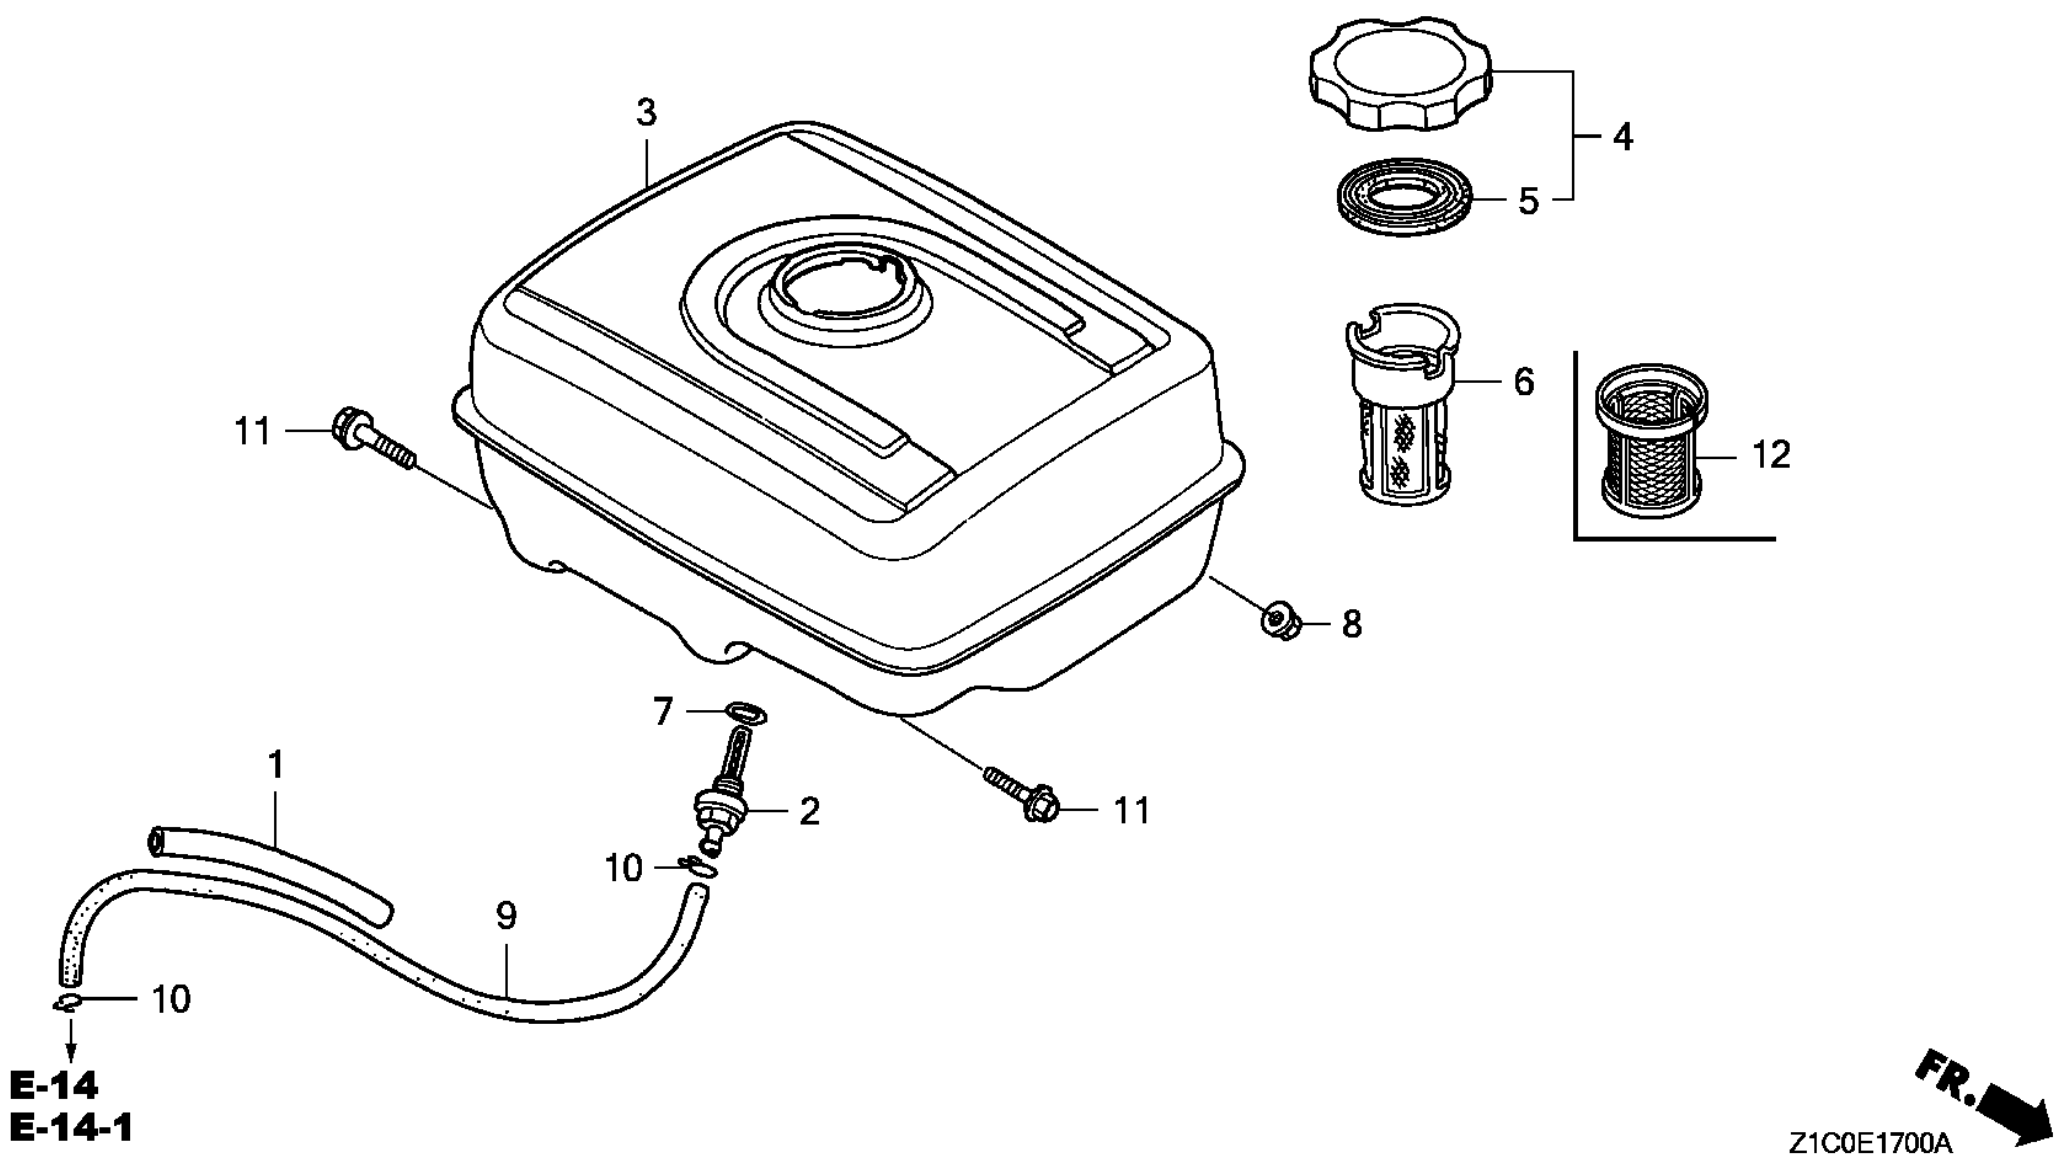

Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.	Parts catalogue code
7	91353-671-004	O-RING, 14MM(NOK)	1	-------- --------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26 QBH,QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK QXQ4,QXU,SH,SHE,SN,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VX,VXE,VXE8 VXK,VXU1,VX8
8	94050-08000	NUT, FLANGE, 8MM	2	-------- --------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26 QBH,QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK QXQ4,QXU,SH,SHE,SN,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VX,VXE,VXE8 VXK,VXU1,VX8
9	95001-45235-40	TUBE, FUEL, 4.5X235 (95001-45001-60M)	1	-------- --------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26 QBH,QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK QXQ4,QXU,SH,SHE,SN,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VX,VXE,VXE8 VXK,VXU1,VX8
10	95002-02080	CLIP, TUBE (B8)	2	-------- --------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26 QBH,QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK QXQ4,QXU,SH,SHE,SN,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VX,VXE,VXE8 VXK,VXU1,VX8
11	95701-08025-00	BOLT, FLANGE, 8X25	2	-------- --------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26 QBH,QBHS,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK QXQ4,QXU,SH,SHE,SN,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VX,VXE,VXE8 VXK,VXU1,VX8
12	17672-Z4H-000	FILTER, FUEL	1	-------- --------	LBHB,QBH,QBHS,QBLS,QBS


FLYWHEEL

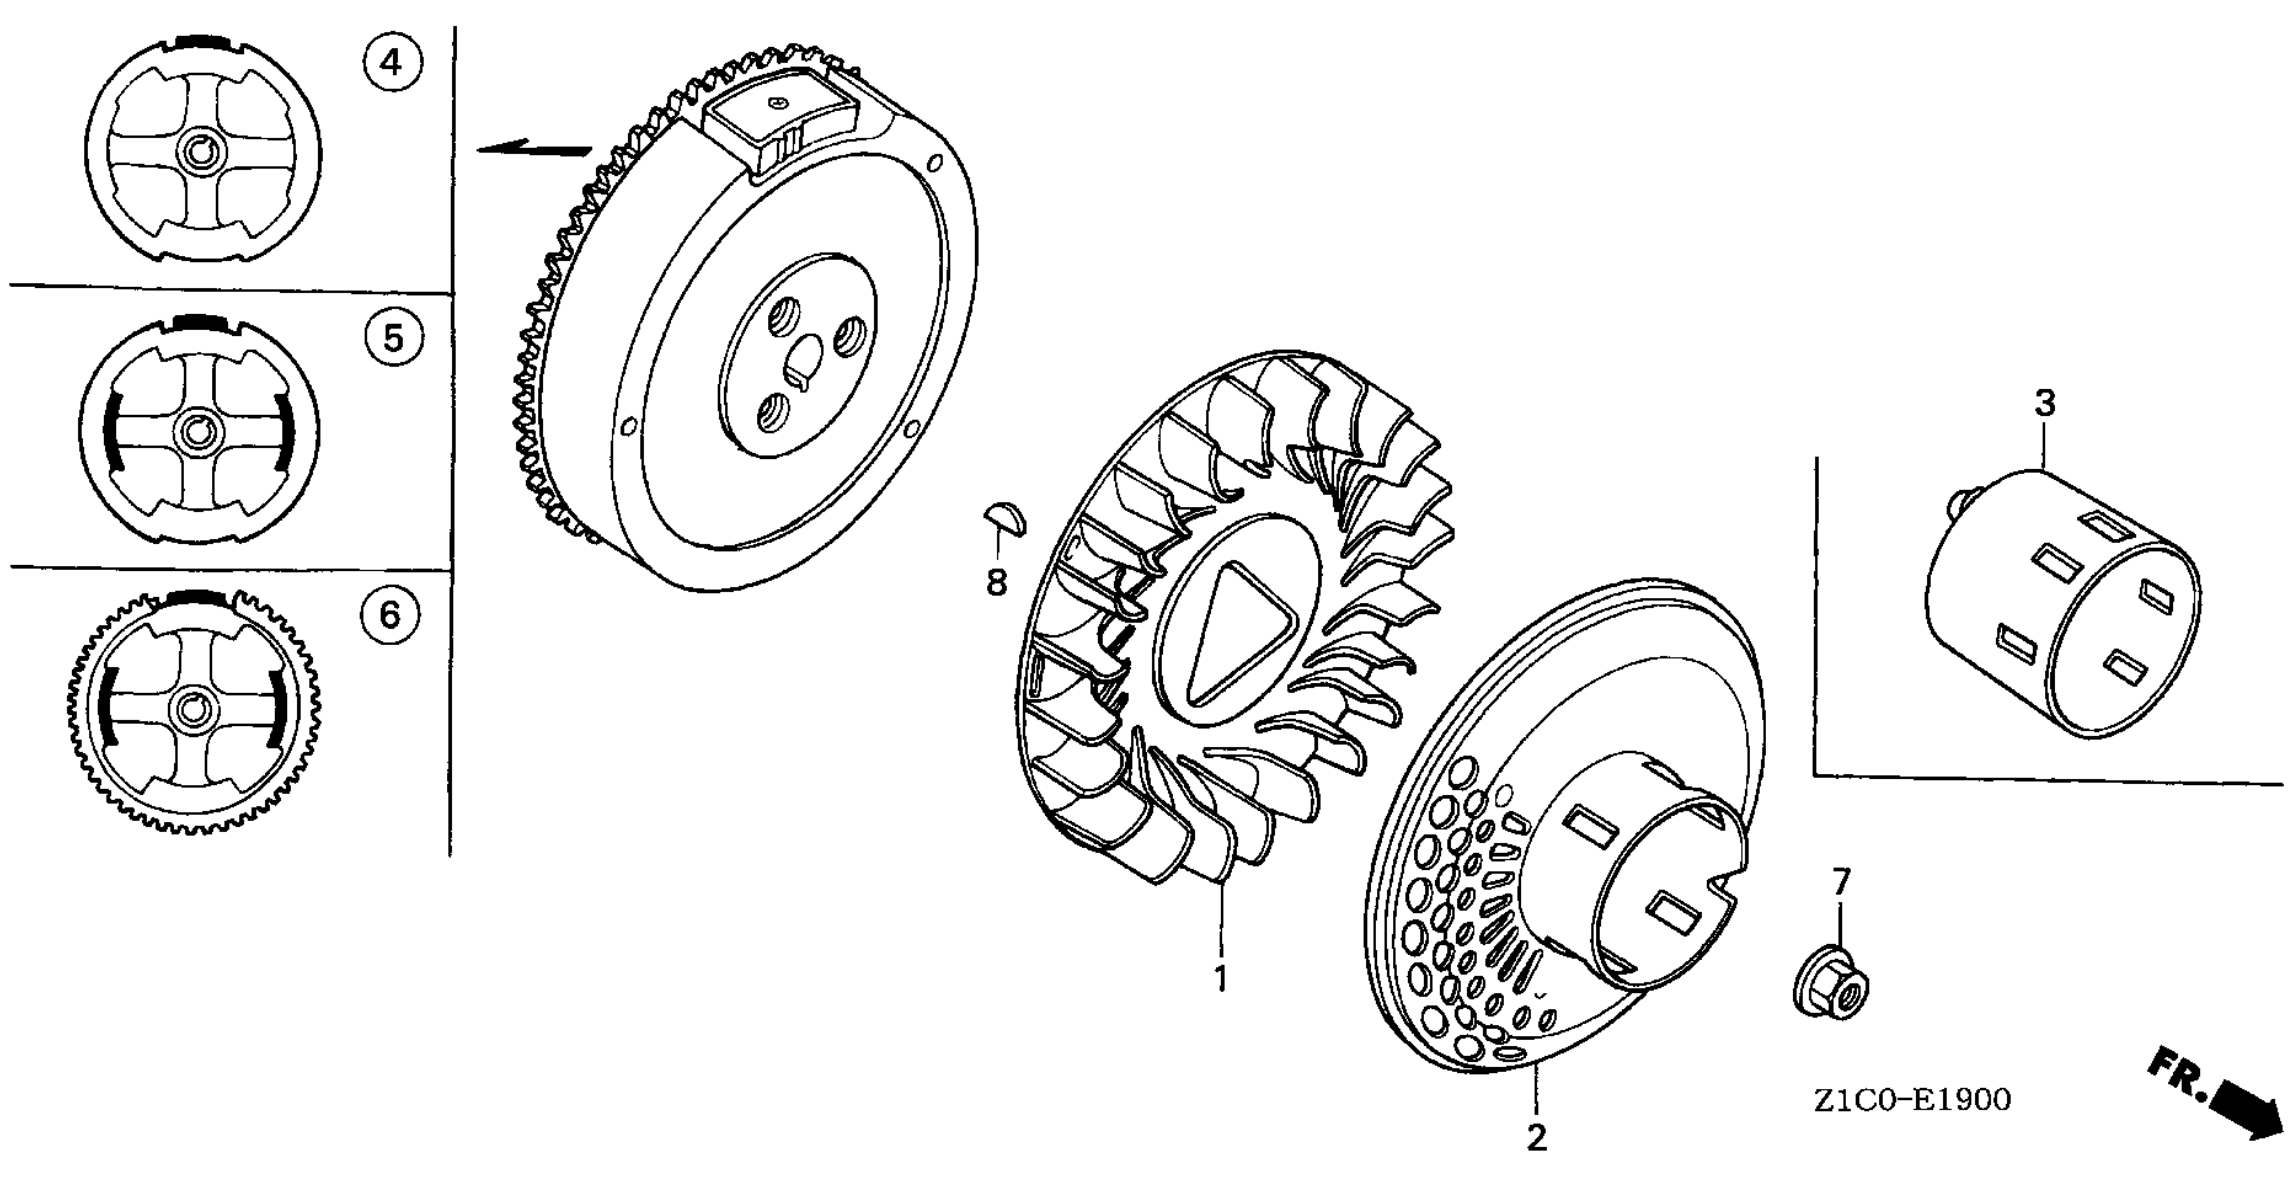

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1141G7	FAN, ENGINE COOLING ··········	0.2
2		(3)	
	1121A9	PULLEY, RECOIL STARTER ·······	0.2
4		(5,6)	
	2161B5	FLYWHEEL ····················	0.3

Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.		Parts catalogue code
1	19511-ZE3-000	FAN, COOLING ················	1			
2	28450-ZE3-W11	PULLEY COMP., STARTER (SCREEN GRID)	1	--------	--------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QA26,QH,QHB3,QHB5,QHP1,QMH QP,QX,QXE,QXEK,QXE8,QXK,QXU,SH,SHE,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,VSP VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
3	28451-ZE3-W01	PULLEY, STARTER ·············	1	--------	--------	LBHB,LP,QAA2,QAA6,QA2,QBH,QBHS,QBLS,QBS,QN,QT,QTD,QXQ4,SN,SXQ4
4	31100-ZE3-701	FLYWHEEL COMP. ··············	1	--------	--------	LH,LHB5,LH2,LXU,PX,PXU,QAA2,QAA6,QA2,QA26,QBLS,QBS,QH,QHB3,QHB5,QHP1,QMH QN,QT,QTD,QX,QXK,QXQ4,QXU,SH,SN,SX,SXC,SXQ4,VSP,VX,VX8
	31100-Z1C-800	····························	1	--------	--------	LBHB,QBH,QBHS
5	31100-ZE3-712	FLYWHEEL COMP. (LAMP) ·······	1	--------	--------	LHP1,LP,LT,QP,SWX,SWX2
6	31100-ZE3-722	FLYWHEEL COMP. (SEL-LAMP) ···	1	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
7	90201-ZE3-V00	NUT, SPECIAL, 16MM ··········	1	--------	--------	LH,LHB5,LHP1,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SWE,SWX SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
	90201-ZE3-790	····························	1	--------	--------	LBHB,LH2,QBH,QBHS,QBLS,QBS,QN,SWE2,SWX2
8	90741-ZE2-000	KEY, SPECIAL WOODRUFF, 25X18	1			

IGNITION COIL

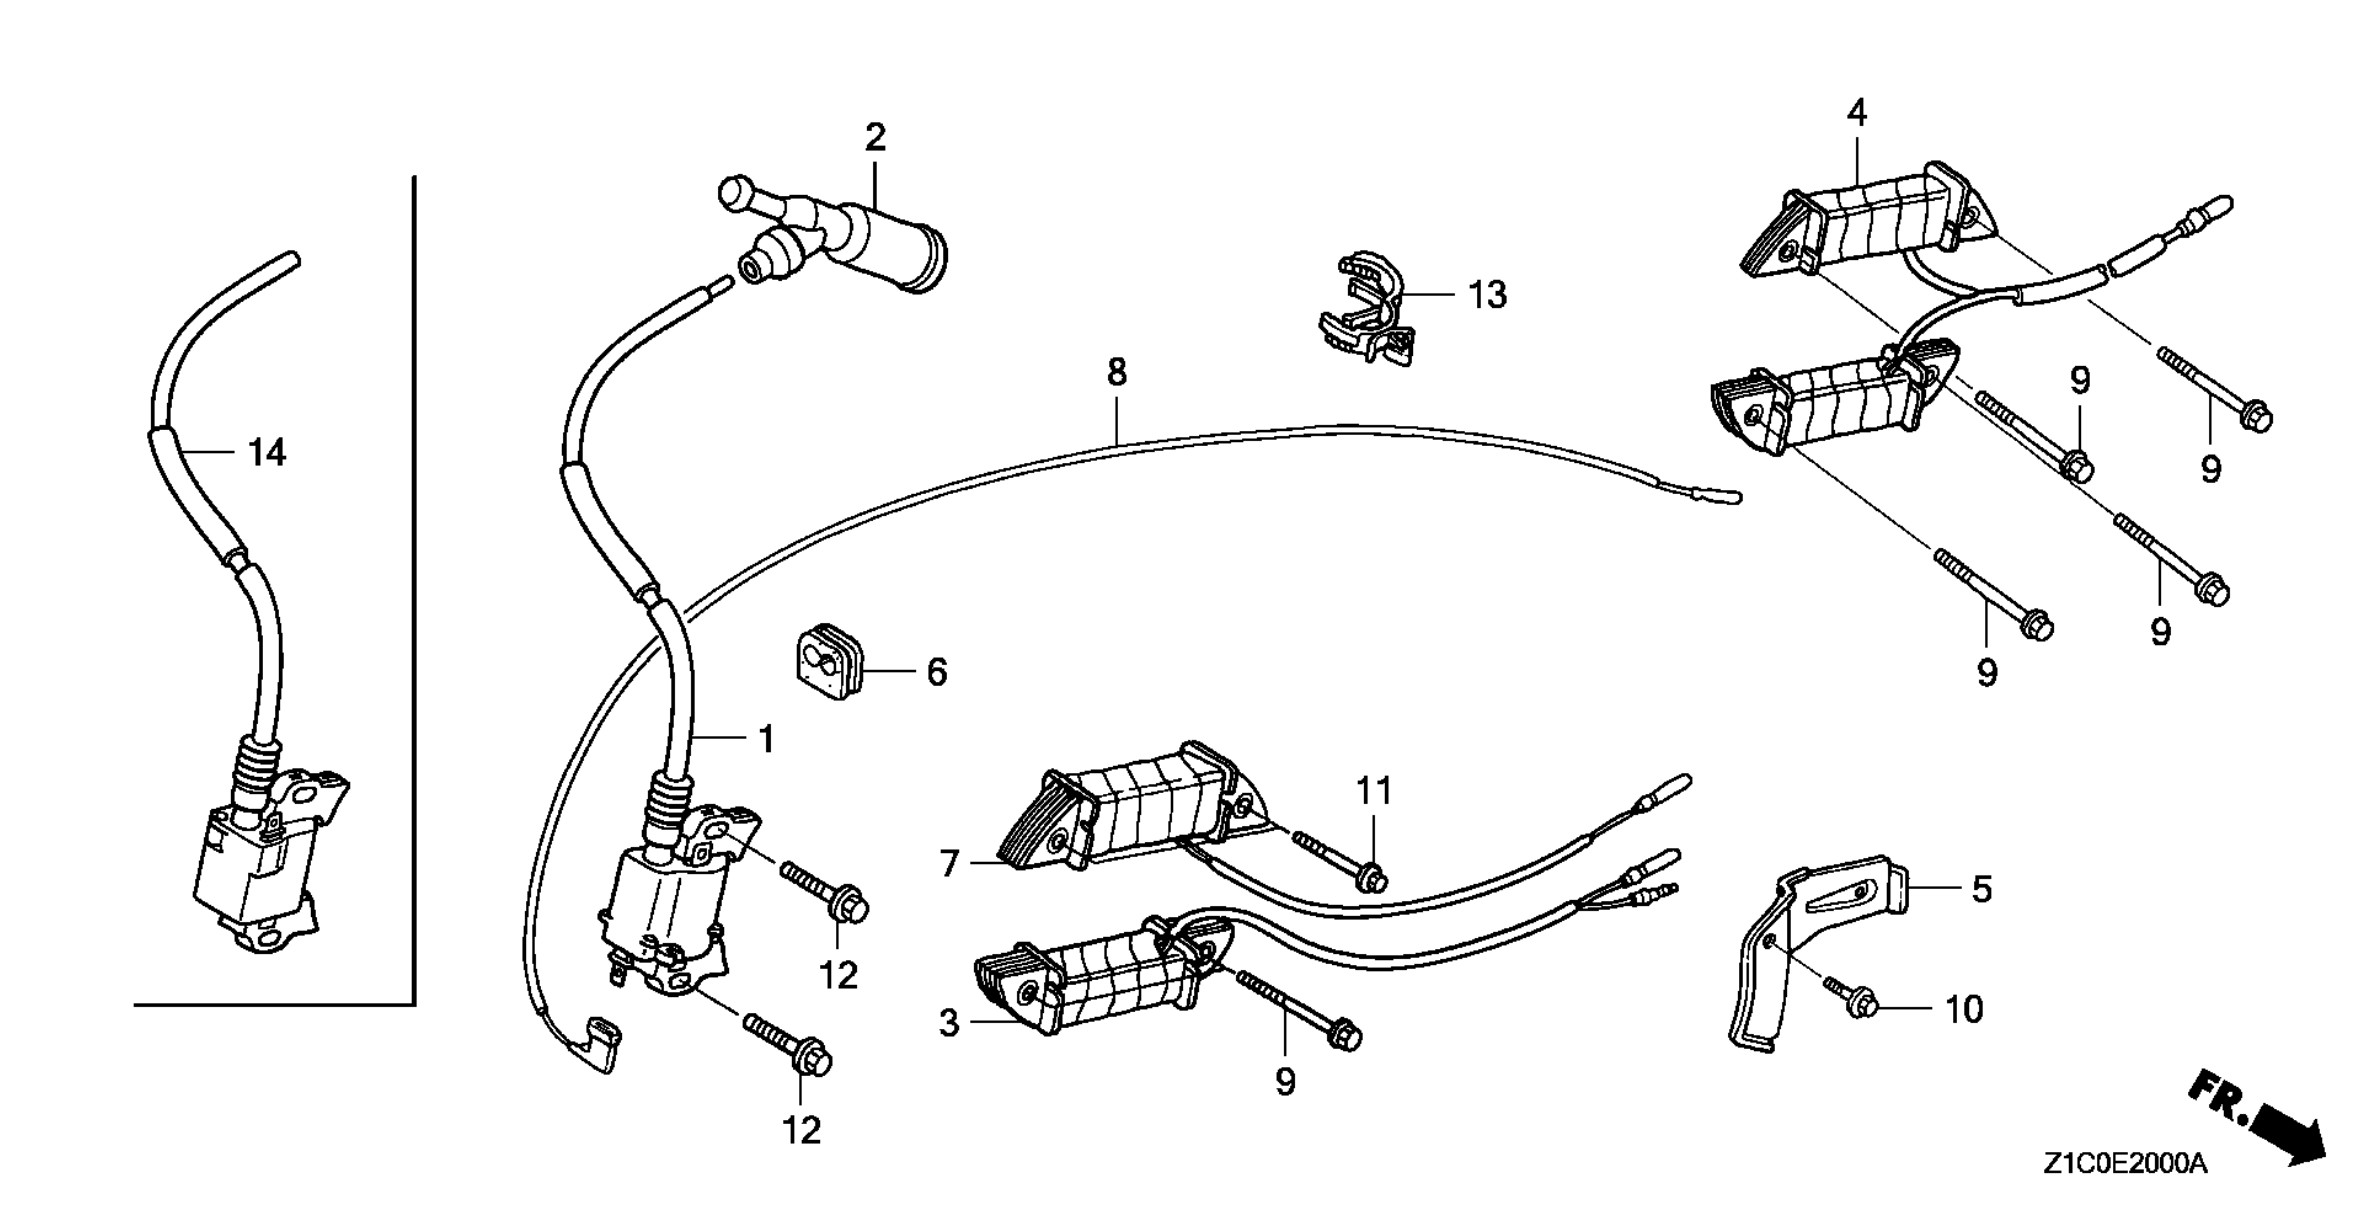


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1		(14)	
	6141A5	COIL, IGNITION(ONE) ----------	0.2
2	6141B8	TERMINAL, HIGH TENSION -------	0.1
4		(3)	
	6141A6	COIL, LAMP -----------------	0.4
7	6131C3	COIL, CHARGE ----------------	0.4
8	6111B3	CORD, STOP SWITCH -----------	0.3

Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.		Parts catalogue code
1	30500-ZF6-W02	COIL ASSY., IGNITION --------	1	--------	1253347	LH,LHB5,LHP1,LP,LT,LXE8,LXU,PX,PXE8,PXU,QAA2,QA2,QA26,QH,QHB3,QHB5,QHP1 QMH,QP,QT,QX,QXE,QXE8,QXQ4,QXU,SH,SHE,SN,SWE,SWX,SX,SXC,SXE,SXE8,SXQ4 VTE5,VX,VXE,VXE8,VXU1,VX8
	30500-Z1C-003	----------------------------	1	--------	--------	QAA6
			1	1253348	--------	LXE8,LXU,PXE8,PXU,QAA2,QA2,QA26,QXE8,QXQ4,QXU,SXE8,SXQ4,VXE8,VX8
	30500-Z1C-013	----------------------------	1	--------	1337116	LXE9,QXEK,QXK,VXK
			1	1253348	1337116	LH,LHB5,LHP1,LP,LT,PX,QH,QHB3,QHB5,QHP1,QMH,QP,QT,QX,QXE,SH,SHE,SN,SWE SWX,SX,SXC,SXE,VTE5,VX,VXE,VXU1
	30500-Z1C-023	----------------------------	1	--------	--------	LH2,QBLS,QBS,QN,QTD,SWE2,SWX2,VSP
			1	1337117	--------	LH,LHB5,LHP1,LP,LT,LXE9,PX,QH,QHB3,QHB5,QHP1,QMH,QP,QT,QX,QXE,QXEK,QXK,SH SHE,SN,SWE,SWX,SX,SXC,SXE,VTE5,VX,VXE,VXK,VXU1
2	30600-ZE1-013	TERMINAL ASSY., HIGH TENSION (NICHIWA Y-EZ)	1	--------	--------	LP,LT,QT,SN
	30700-ZE1-013	CAP ASSY., NOISE SUPPRESSOR (NICHIWA Y-EZ RTFM256)	1	--------	--------	LH,LHB5,LHP1,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QA2,QA26,QH,QHB3,QHB5,QHP1 QMH,QP,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SWE,SWX,SX,SXC,SXE,SXE8,SXQ4 VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
	30700-Z1C-801	TERMINAL ASSY., HIGH TENSION (NGK Y-EZD)	1	--------	--------	LP,LT,QN,QT,QTD,SN
	30700-Z1C-811	CAP ASSY., NOISE SUPPRESSOR (NGK Y-EZD)	1	--------	--------	LH,LHB5,LHP1,LH2,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QP,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SWE,SWE2,SWX,SWX2 SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
	30700-Z1C-821	TERMINAL ASSY., HIGH TENSION (NGK Y-EZD)	1	--------	--------	LBHB,QBH,QBHS,QBLS,QBS
3	31510-ZE1-811	COIL ASSY., LAMP (12V/25W) --	1	--------	--------	LHP1
4	31510-ZE2-811	COIL ASSY., LAMP (12V/50W) --	1	--------	--------	LP,LT,QP,SWX,SWX2
5	31511-ZE3-000	CLAMPER, CORD ---------------	1	--------	--------	LHP1,LP,LT,LXE8,LXE9,PXE8,QP,QXE,QXEK,QXE8,SHE,SWE,SWE2,SWX,SWX2,SXE,SXE8 VTE5,VXE,VXE8,VXK,VXU1


2

IGNITION COIL

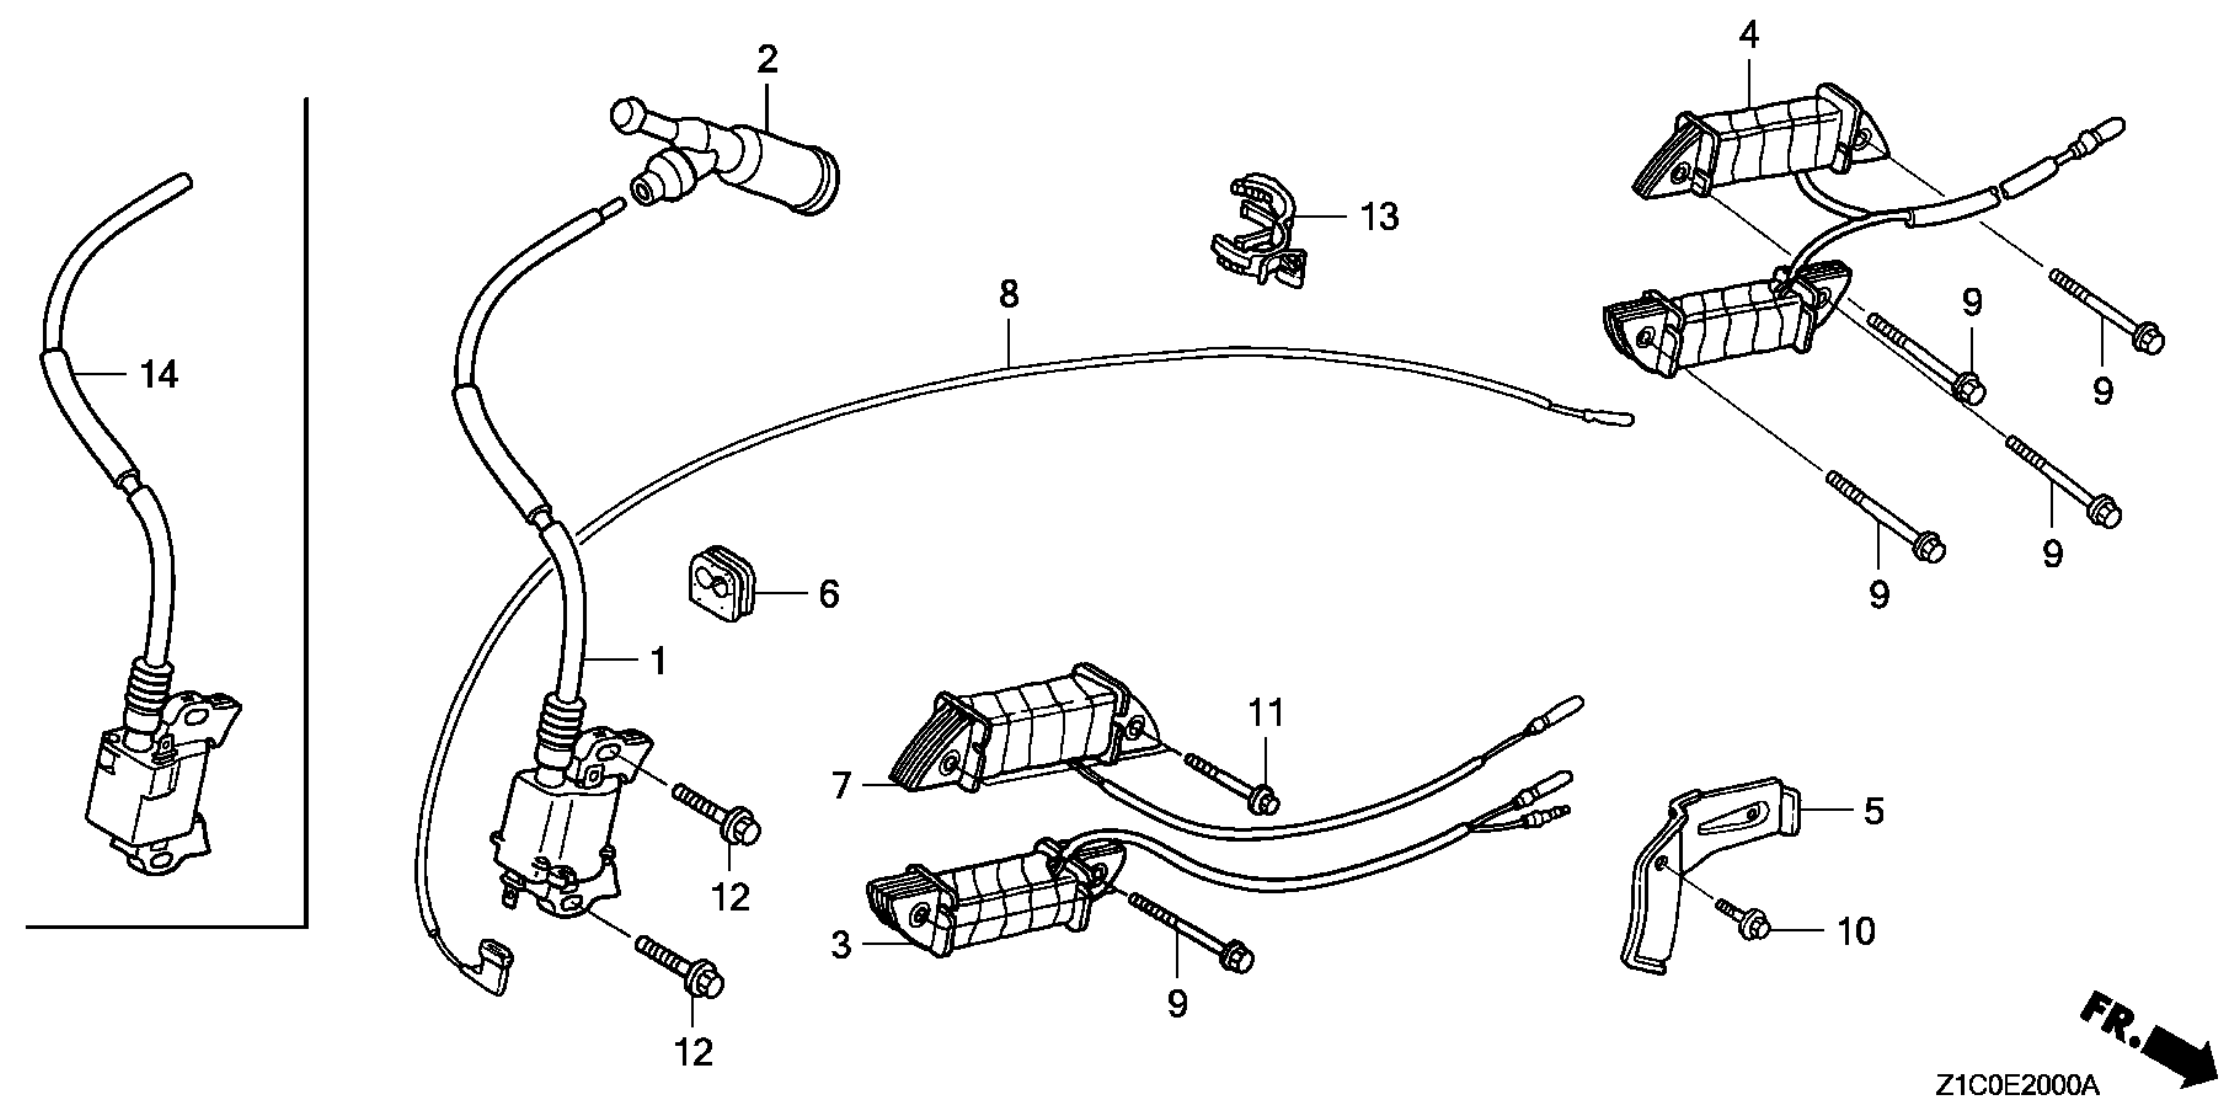

Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.	Parts catalogue code
6	31512-ZE2-000	GROMMET, CORD ················	1		
7	31630-ZE1-003	COIL ASSY., CHARGE (1A) ·····	1	-------- --------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
	31630-ZE1-013	····························	1	-------- --------	SWE2
8	36101-ZE2-701	CORD, STOP SWITCH (430MM) ···	1		
9	90012-888-000	BOLT, FLANGE, 6X40(CT200) ···	2	-------- --------	LHP1
			4	-------- --------	LP,LT,QP,SWX,SWX2
10	90013-883-000	BOLT, FLANGE, 6X12(CT200) ···	1	-------- --------	LHP1,LP,LT,LXE8,LXE9,PXE8,QP,QXE,QXEK,QXE8,SHE,SWE,SWE2,SWX,SWX2,SXE,SXE8 VTE5,VXE,VXE8,VXK,VXU1
11	90014-ZE6-000	BOLT, FLANGE, 6X35(CT200) ···	2	-------- --------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
12	90015-883-000	BOLT, FLANGE, 6X28(CT200) ···	2		
13	90684-ZA0-601	CLIP, HARNESS ···············	1	-------- --------	LBHB,LXU,PX,PXU,QAA2,QAA6,QA2,QA26,QBH,QBHS,QBLS,QBS,QX,QXK,QXQ4,QXU,SWX SWX2,SX,SXC,SXQ4,VSP,VX,VX8
14	30500-Z1C-801	COIL ASSY., IGNITION ········	1	-------- --------	LBHB,QBH,QBHS


STARTER MOTOR

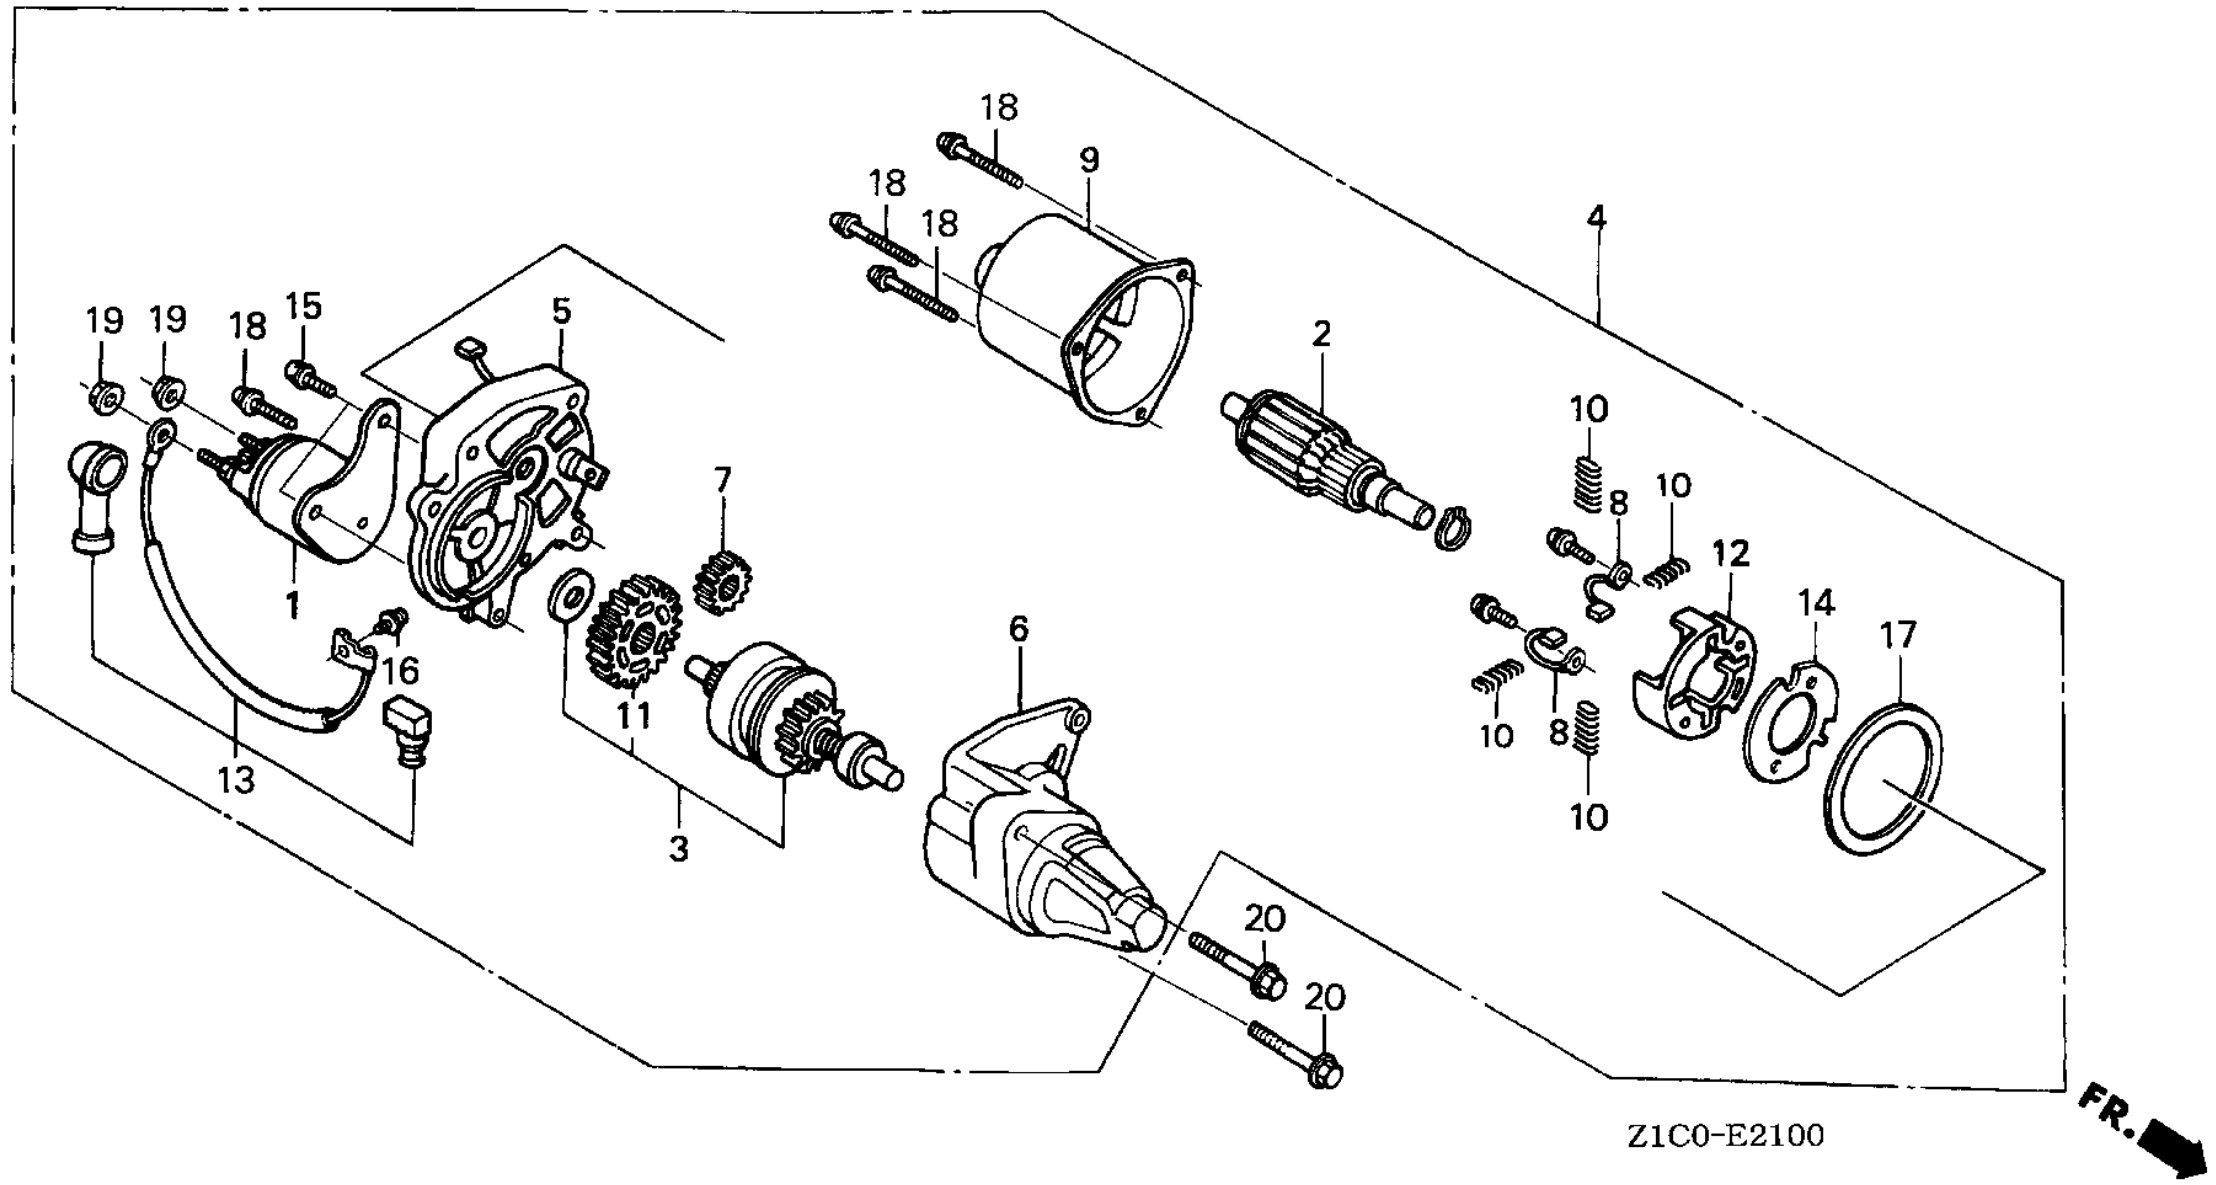

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	6121E5	CONTACTOR, STARTER	0.2
2	6121A0	ARMATURE, STARTER	0.4
3	6121B0	CLUTCH, OVERRUNNING	0.4
4	6121D5	MOTOR, STARTER	0.2
5	6121C3	BRACKET, STARTER :CENTER	0.4
6	6121D2	BRACKET, STARTER :FRONT	0.3
8	6121A9	BRUSH, STARTER	0.4

Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.		Parts catalogue code
1	31204-ZA0-003	CONTACTOR ASSY.	1	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
2	31206-ZE3-003	ARMATURE COMP.	1	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
3	31207-ZE3-003	CLUTCH COMP., OVERRUNNING ---	1	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
4	31210-ZE3-013	MOTOR UNIT, STARTER	1	--------	--------	LXE8,PXE8,QXE8,SXE8,VXE8
			1	--------	1446390	LXE9,QXE,QXEK,SHE,SWE,SXE,VTE5,VXE,VXK,VXU1
	31210-ZE3-023	....	1	--------	--------	SWE2
			1	1446391	--------	LXE9,QXE,QXEK,SHE,SWE,SXE,VTE5,VXE,VXK,VXU1
5	31211-ZE2-003	BRACKET, CENTER	1	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
6	31212-ZE3-003	BRACKET, FR.	1	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
7	31213-ZE2-003	GEAR, DRIVE PINION	1	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
8	31215-ZE2-003	BRUSH	2	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
9	31218-ZE3-003	YOKE COMP.	1	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
10	31219-ZE2-003	SPRING, BRUSH RETURN	4	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
11	31222-ZE3-791	GEAR, REDUCTION	1	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
12	31231-ZE2-003	HOLDER, BRUSH	1	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
13	31232-ZE3-003	WIRE, WATER COVER	1	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
14	31233-ZE2-003	INSULATOR	1	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
15	90007-ZE2-003	BOLT-WASHER, 5X14	2	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
16	90110-ZE2-003	SCREW-WASHER, 4X6	1	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
17	91601-ZE2-003	PACKING	1	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
18	93892-05032-18	SCREW-WASHER, 5X32	4	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
19	94070-06080	NUT-WASHER, 6MM	2	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
20	95701-08035-08	BOLT, FLANGE, 8X35	2	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1


CONTROL(1)

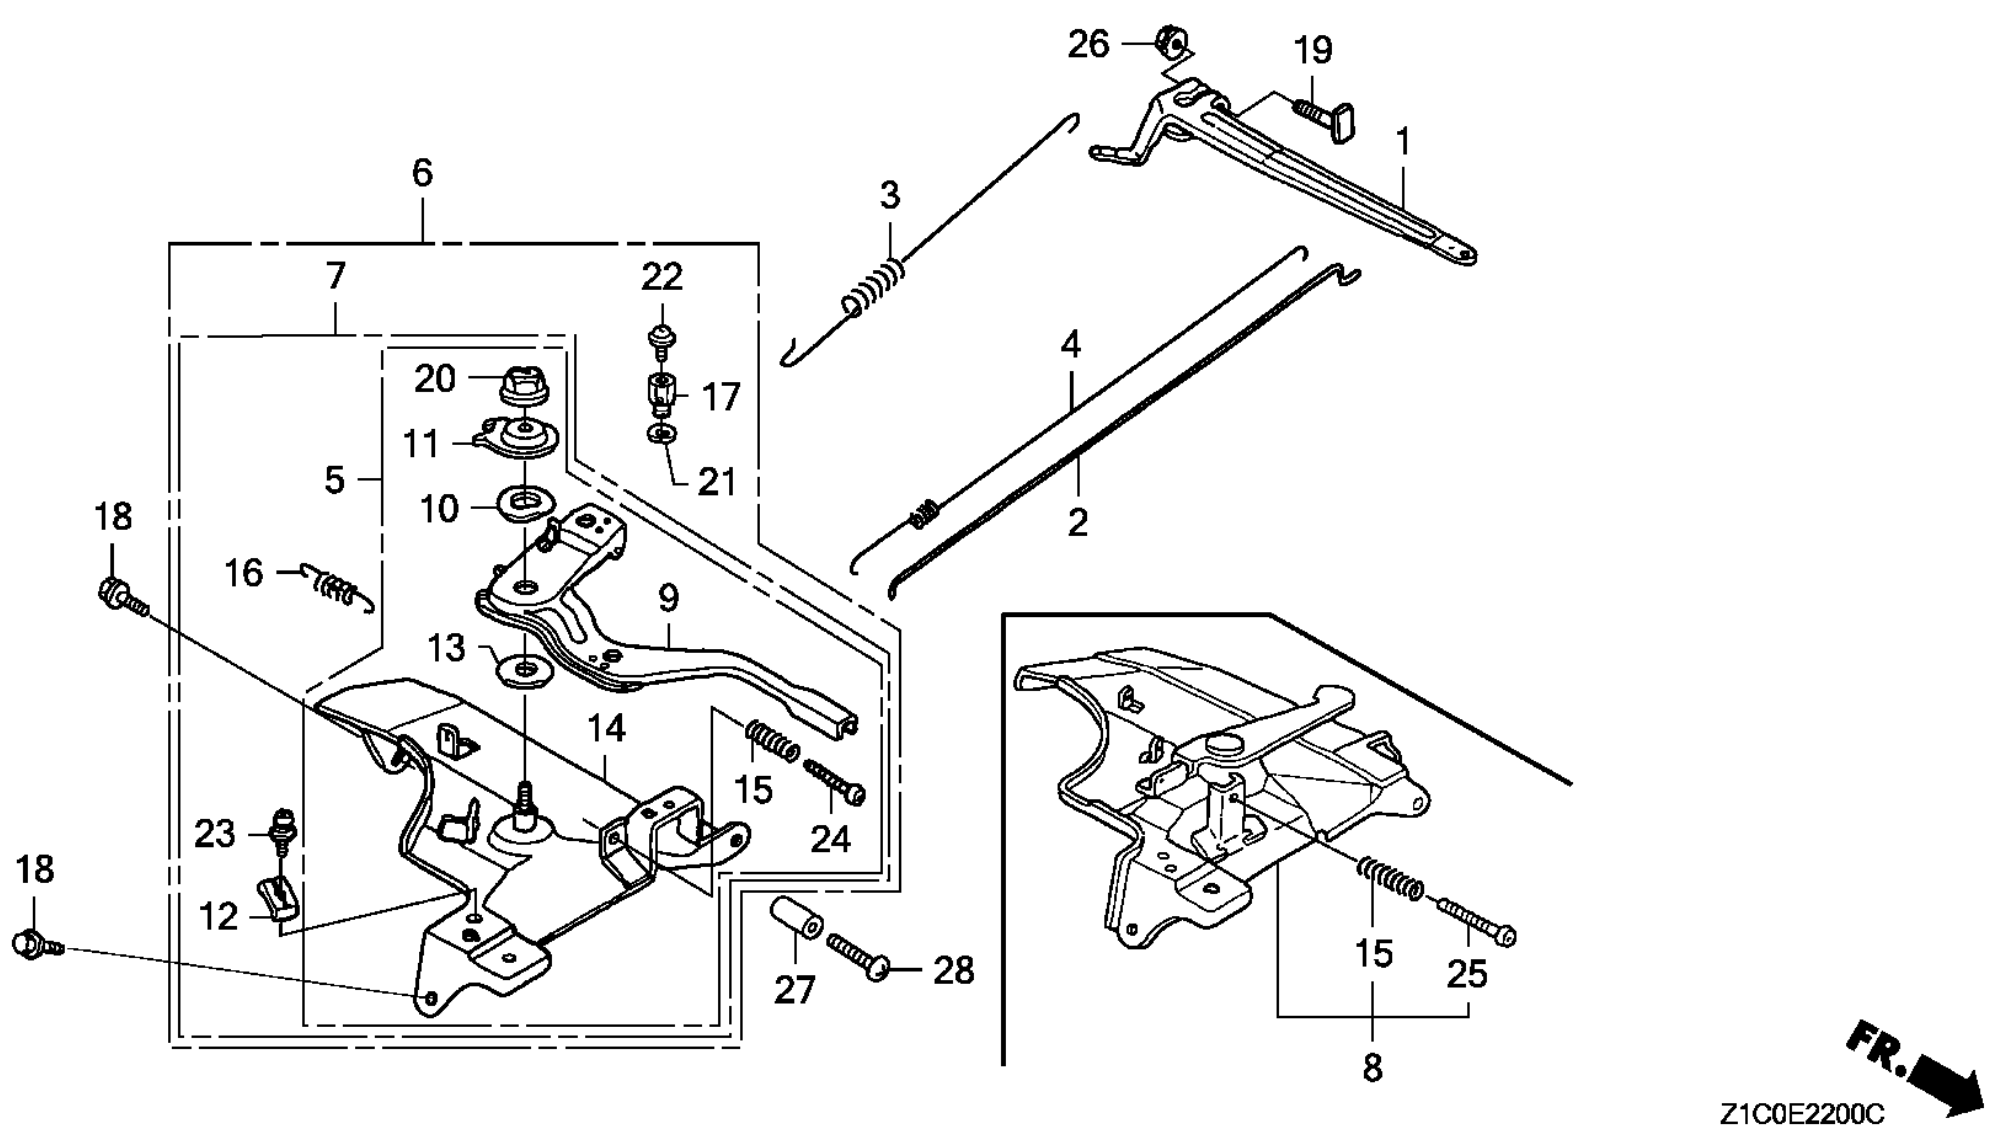

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1161A0	ARM, GOVERNOR	0.2
2	1161B1	ROD, GOVERNOR	0.3
3	1161C5	SPRING, GOVERNOR	0.2
4	1161C2	SPRING, THROTTLE RETURN	0.3
6	1161A5	CONTROL, THROTTLE/GOVERNOR	0.2
9	1161A8	LEVER, CONTROL	0.3
14	1161A2	BASE, CONTROL	0.3

Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.		Parts catalogue code
1	16551-ZE3-000	ARM, GOVERNOR	1	--------	--------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SWE SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
	16551-Z1C-800		1	--------	--------	QBLS,QBS
2	16555-ZE3-000	ROD, GOVERNOR	1	--------	--------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBLS,QBS QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE SN,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1 VX8
3	16561-ZE3-000	SPRING, GOVERNOR	1	--------	--------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SWE SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VTE5
	16561-ZF6-T21		1	--------	--------	VSP,VXE8,VXK,VXU1,VX8
	16561-ZF6-W31		1	--------	1363842	VX,VXE
	16561-ZF6-W32		1	1363843	--------	VX,VXE
	16561-Z1C-800		1	--------	--------	QBLS,QBS
4	16562-ZE3-000	SPRING, THROTTLE RETURN	1	--------	--------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBLS,QBS QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE SN,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1 VX8
5	16570-ZE3-W00	CONTROL ASSY. (STD.)	1	--------	--------	SN,VTE5,VX,VXE
6	16570-ZE3-W10	CONTROL ASSY. (REMOTE)	1	--------	--------	LT,QTD
	16500-Z1C-800	CONTROL ASSY. (LONG-TAILED BOAT)	1	--------	--------	QBLS,QBS
7	16570-ZE3-W20	CONTROL ASSY. (REMOTE)	1	--------	--------	LH,LHB5,LHP1,LH2,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QN,QP,QT,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SWE,SWE2,SWX SWX2,SX,SXC,SXE,SXE8,SXQ4
8	16570-ZE3-721	CONTROL ASSY.	1	--------	--------	VSP,VXE8,VXK,VXU1,VX8

CONTROL(1)

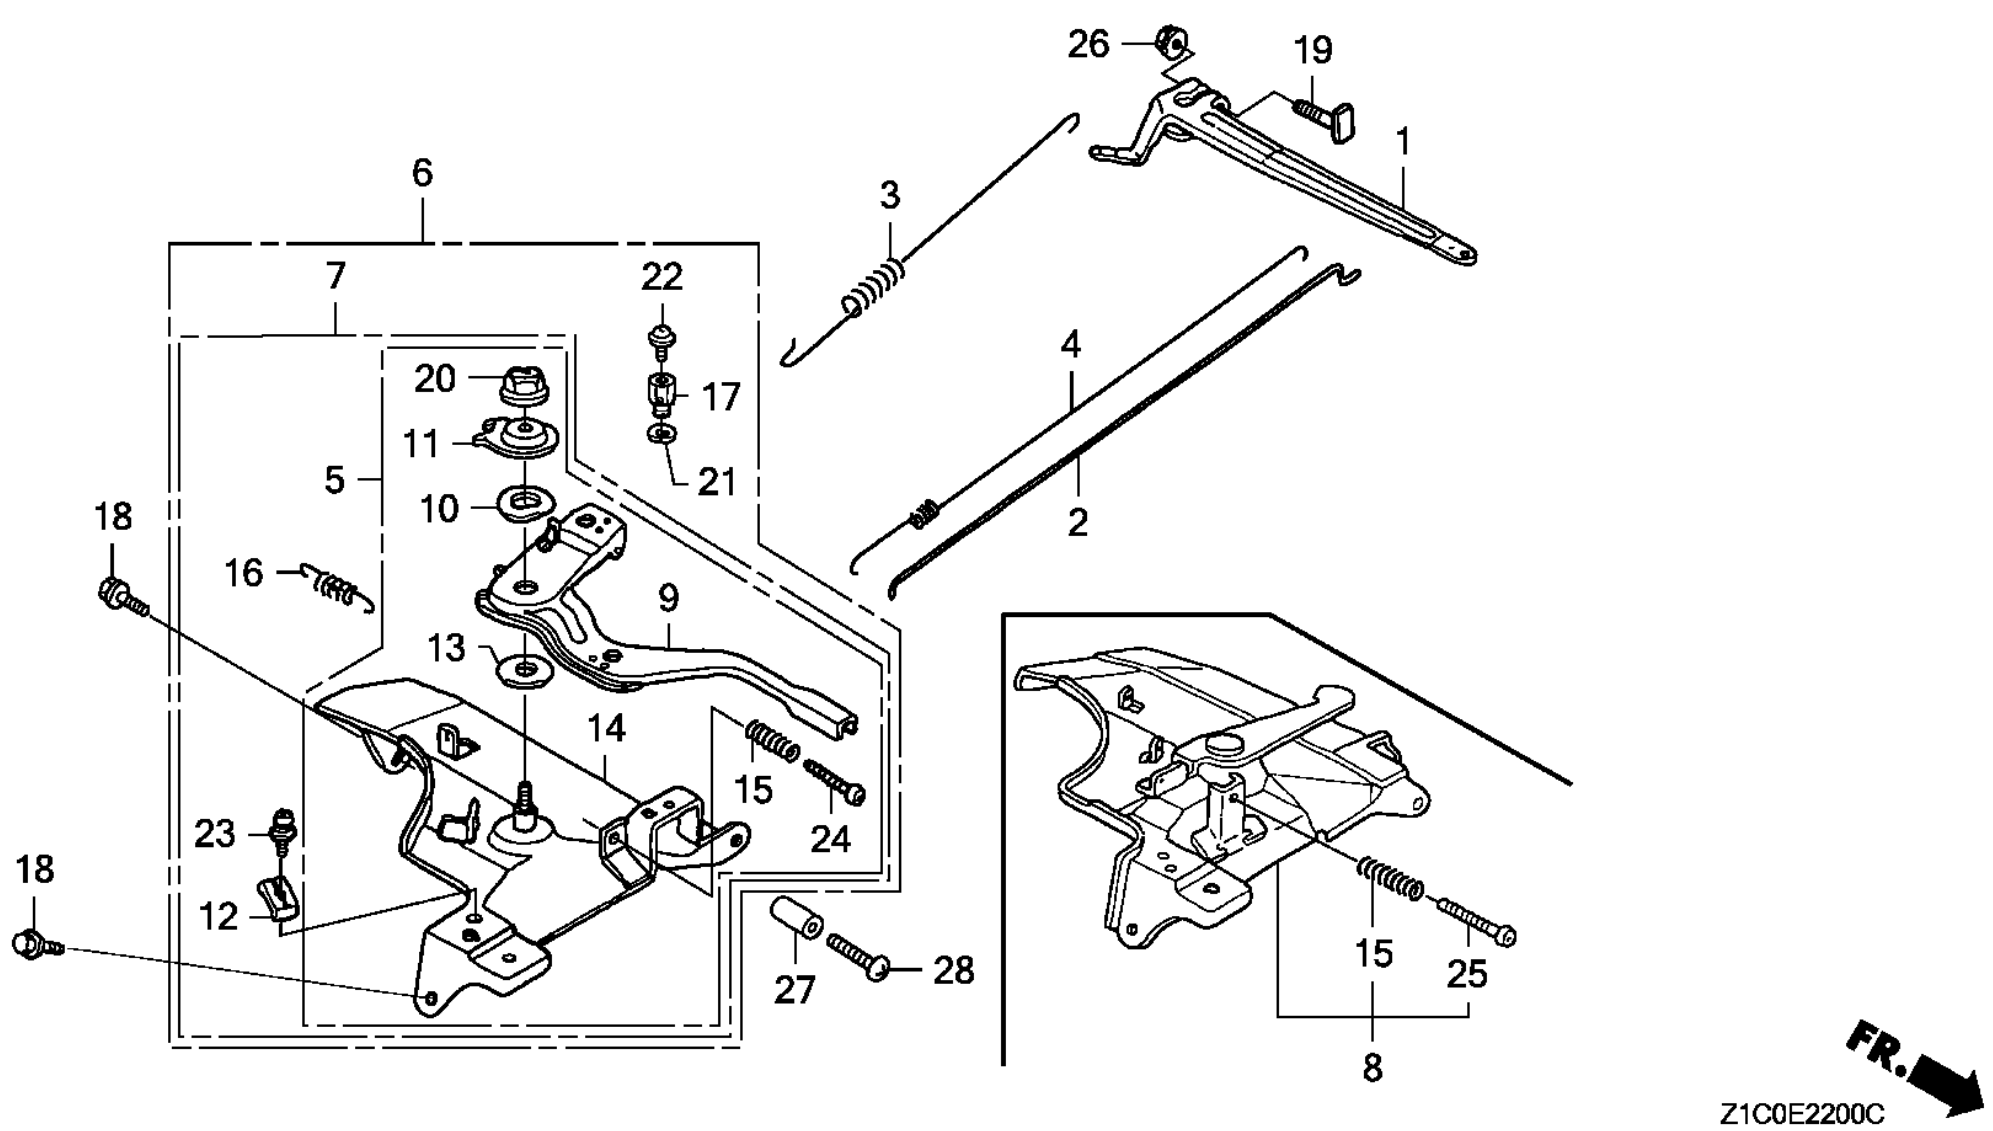


Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.	Parts catalogue code
9	16571-ZE3-W00	LEVER, CONTROL ···············	1	-------- --------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SWE SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VTE5,VX,VXE
	16571-Z1C-800	·····························	1	-------- --------	QBLS,QBS
10	16574-ZE1-000	SPRING, LEVER ···············	1	-------- --------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBLS,QBS QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE SN,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VTE5,VX,VXE
11	16575-ZE2-W00	WASHER, CONTROL LEVER ·······	1	-------- --------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SWE SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VTE5,VX,VXE
	16575-Z1C-810	·····························	1	-------- --------	QBLS,QBS
12	16576-891-000	HOLDER, CABLE ···············	1	-------- --------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBLS,QBS QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4
13	16578-ZE1-000	SPACER, CONTROL LEVER ·······	1	-------- --------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBLS,QBS QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE SN,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VTE5,VX,VXE
14	16581-ZE3-W00	BASE COMP., CONTROL (###) ···	1	-------- --------	LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VTE5,VX,VXE
	16580-Z1C-800	BASE COMP., CONTROL ·········	1	-------- --------	QBLS,QBS
15	16584-883-300	SPRING, CONTROL ADJUSTING ···	1	-------- --------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBLS,QBS QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE SN,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1 VX8

CONTROL(1)

Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.	Parts catalogue code
16	16592-883-310	SPRING, CABLE RETURN --------	1	-------- --------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SWE,SWE2 SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4
	16592-Z1C-810	----------------------------	1	-------- --------	QBLS,QBS
17	16594-883-010	HOLDER, WIRE ----------------	1	-------- --------	LT,QBLS,QBS,QTD
18	90013-883-000	BOLT, FLANGE, 6X12(CT200) ---	2	-------- --------	LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1,VX8
	90013-Z0T-810	----------------------------	2	-------- --------	QBLS,QBS
19	90015-ZE5-010	BOLT, GOVERNOR ARM ----------	1	-------- --------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBLS,QBS QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE SN,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1 VX8
20	90114-SA0-000	NUT, SELF-LOCK, 6MM --------	1	-------- --------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBLS,QBS QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE SN,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VTE5,VX,VXE
21	90605-230-000	CIRCLIP, 5MM ----------------	1	-------- --------	LT,QTD
	94540-05018	E-RING, 5MM -----------------	1	-------- --------	QBLS,QBS
22	93500-04006-0H	SCREW, PAN, 4X6 ------------	1	-------- --------	LT,QBLS,QBS,QTD
23	93500-05016-0A	SCREW, PAN, 5X16 -----------	1	-------- --------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBLS,QBS QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4
24	93500-05032-0A	SCREW, PAN, 5X32 -----------	1	-------- --------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3 QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE,SN,SWE SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VTE5,VX,VXE
	93500-05025-0H	SCREW, PAN, 5X25 -----------	1	-------- --------	QBLS,QBS
25	93500-05045-0A	SCREW, PAN, 5X45 -----------	1	-------- --------	VSP,VXE8,VXK,VXU1,VX8
26	94050-06000	NUT, FLANGE, 6MM -----------	1	-------- --------	LH,LHB5,LHP1,LH2,LT,LXE8,LXE9,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QBLS,QBS QH,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,QX,QXE,QXEK,QXE8,QXK,QXQ4,QXU,SH,SHE SN,SWE,SWE2,SWX,SWX2,SX,SXC,SXE,SXE8,SXQ4,VSP,VTE5,VX,VXE,VXE8,VXK,VXU1 VX8
27	16599-ZG1-M10	COLLAR, STOPPER ------------	(1)	-------- --------	QXQ4,SXQ4
28	90016-ZG9-N30	SCREW, RECESSED, 5X25 -------	(1)	-------- --------	QXQ4,SXQ4

2


CONTROL(2)

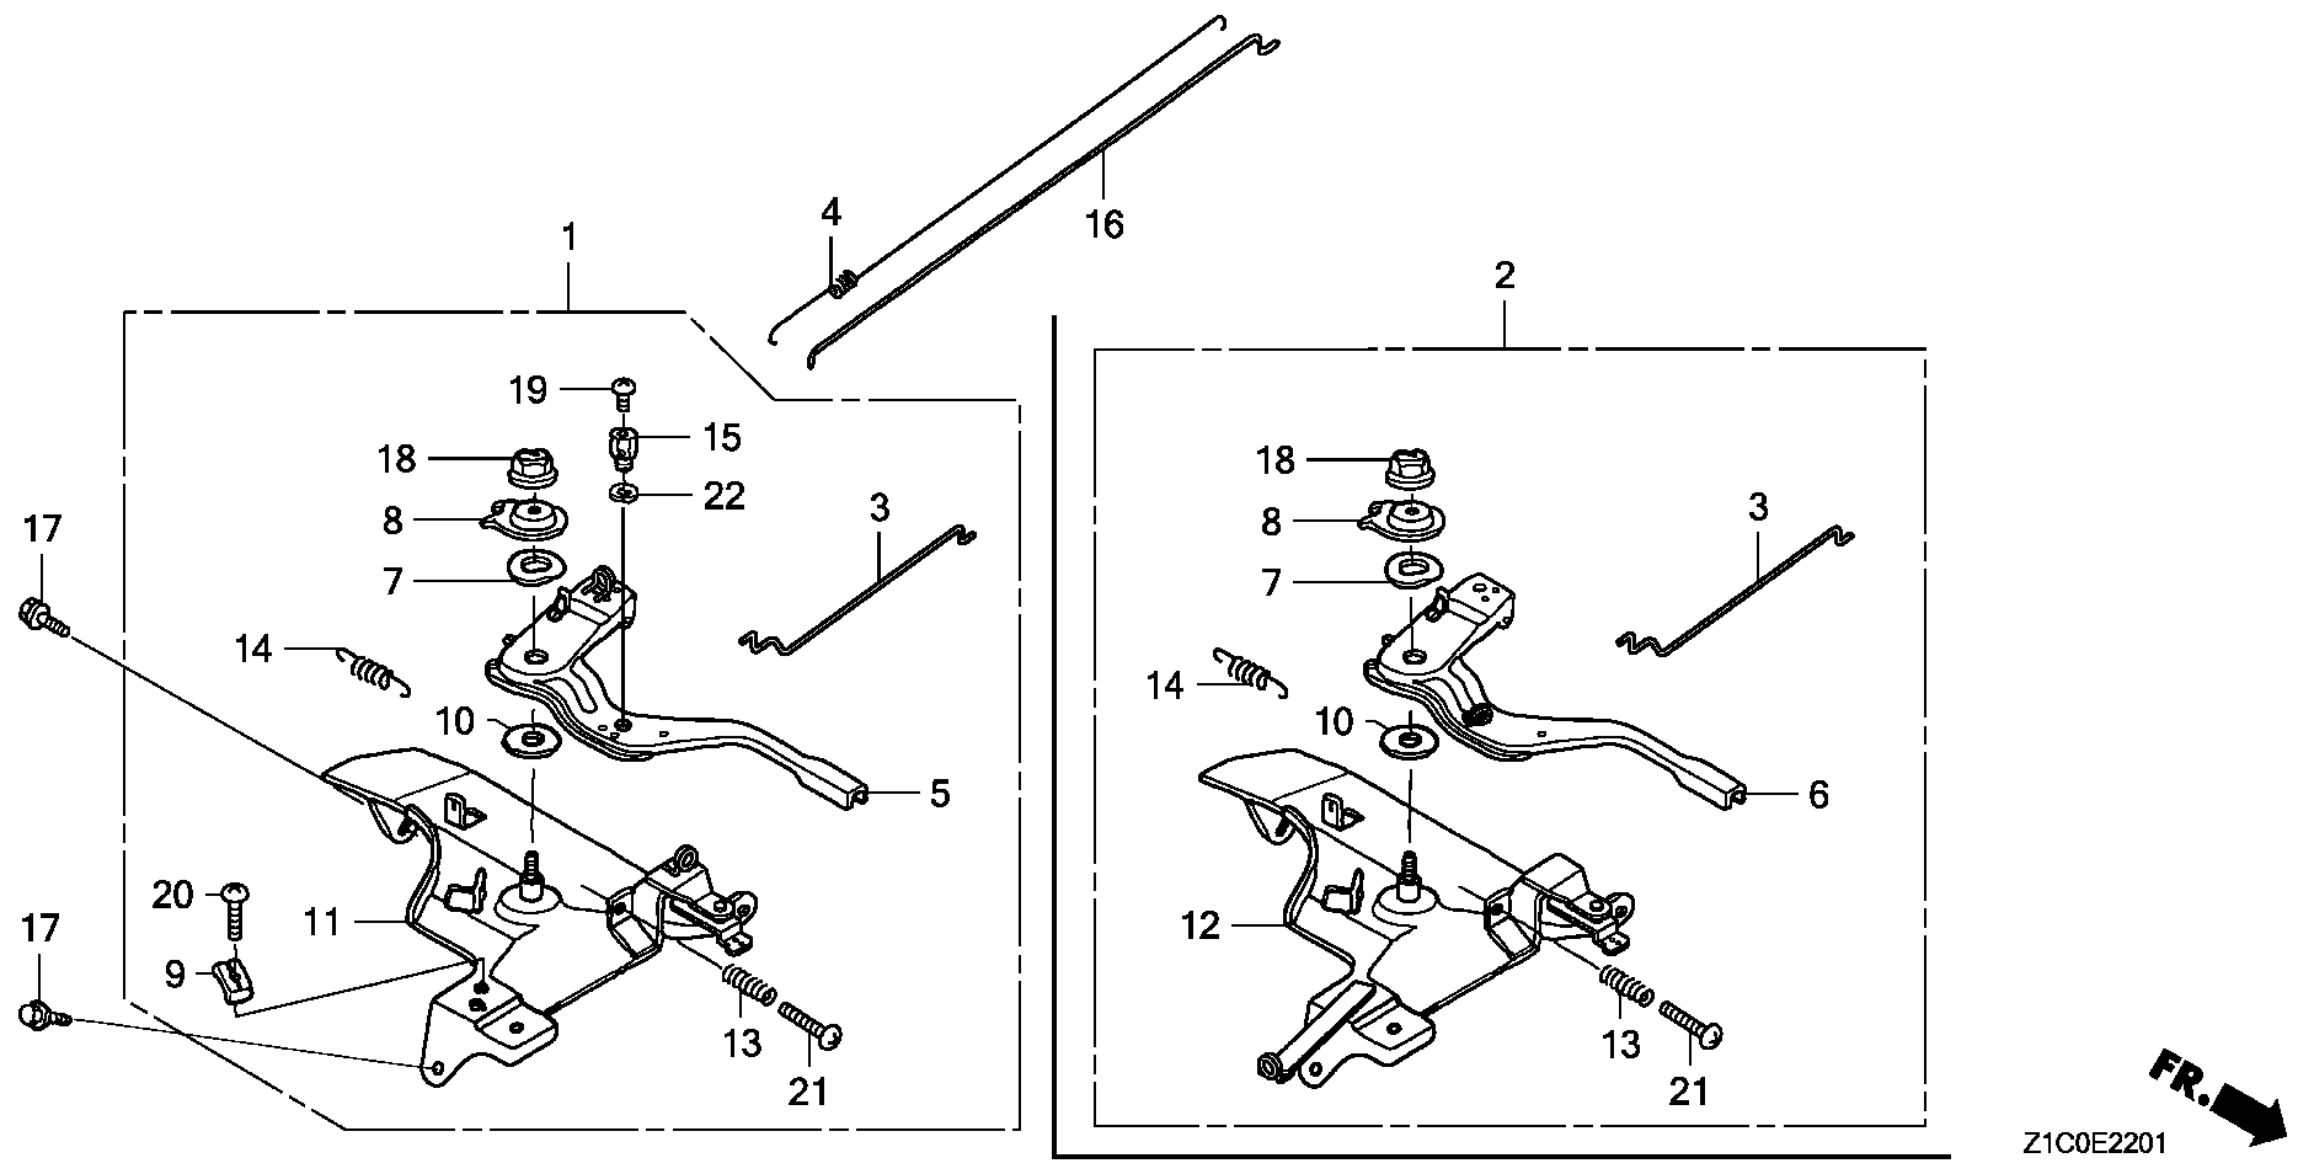

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1161A5	CONTROL, THROTTLE/GOVERNOR	0.2
4	1161C2	SPRING, THROTTLE RETURN	0.3
5	1161A8	(6) LEVER, CONTROL	0.3
11	1161A2	(12) BASE, CONTROL	0.3
16	8101R4	ROD, THROTTLE	0.3

Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.	Parts catalogue code
1	16500-Z1C-810	CONTROL ASSY. (LONG-TAILED BOAT)	1	-------- --------	QBH,QBHS
2	16500-Z1C-820	CONTROL ASSY. (BANKA)	1	-------- --------	LBHB
3	16556-Z1C-810	ROD, CONTROL	1	-------- --------	LBHB,QBH,QBHS
4	16562-Z1C-810	SPRING, THROTTLE RETURN	1	-------- --------	LBHB,QBH,QBHS
5	16570-Z1C-810	LEVER COMP., CONTROL	1	-------- --------	QBH,QBHS
6	16570-Z1C-820	LEVER COMP., CONTROL	1	-------- --------	LBHB
7	16574-ZE1-000	SPRING, LEVER	1	-------- --------	LBHB,QBH,QBHS
8	16575-Z1C-810	WASHER, CONTROL LEVER	1	-------- --------	LBHB,QBH,QBHS
9	16576-891-000	HOLDER, CABLE	1	-------- --------	QBH,QBHS
10	16578-ZE1-000	SPACER, CONTROL LEVER	1	-------- --------	LBHB,QBH,QBHS
11	16580-Z1C-810	BASE COMP., CONTROL	1	-------- --------	QBH,QBHS
12	16580-Z1C-820	BASE COMP., CONTROL	1	-------- --------	LBHB
13	16584-883-300	SPRING, CONTROL ADJUSTING	1	-------- --------	LBHB,QBH,QBHS
14	16592-Z1C-810	SPRING, CABLE RETURN	1	-------- --------	LBHB,QBH,QBHS
15	16594-883-010	HOLDER, WIRE	1	-------- --------	QBH,QBHS
16	17841-Z1C-810	ROD, THROTTLE	1	-------- --------	LBHB,QBH,QBHS
17	90013-Z0T-810	BOLT, FLANGE, 6X12(CT200)	2	-------- --------	LBHB,QBH,QBHS
18	90114-SA0-000	NUT, SELF-LOCK, 6MM	1	-------- --------	LBHB,QBH,QBHS
19	93500-04006-0H	SCREW, PAN, 4X6	1	-------- --------	QBH,QBHS
20	93500-05016-0A	SCREW, PAN, 5X16	1	-------- --------	QBH,QBHS
21	93500-05025-0H	SCREW, PAN, 5X25	1	-------- --------	LBHB,QBH,QBHS
22	94540-05018	E-RING, 5MM	1	-------- --------	QBH,QBHS


CONTROL BOX

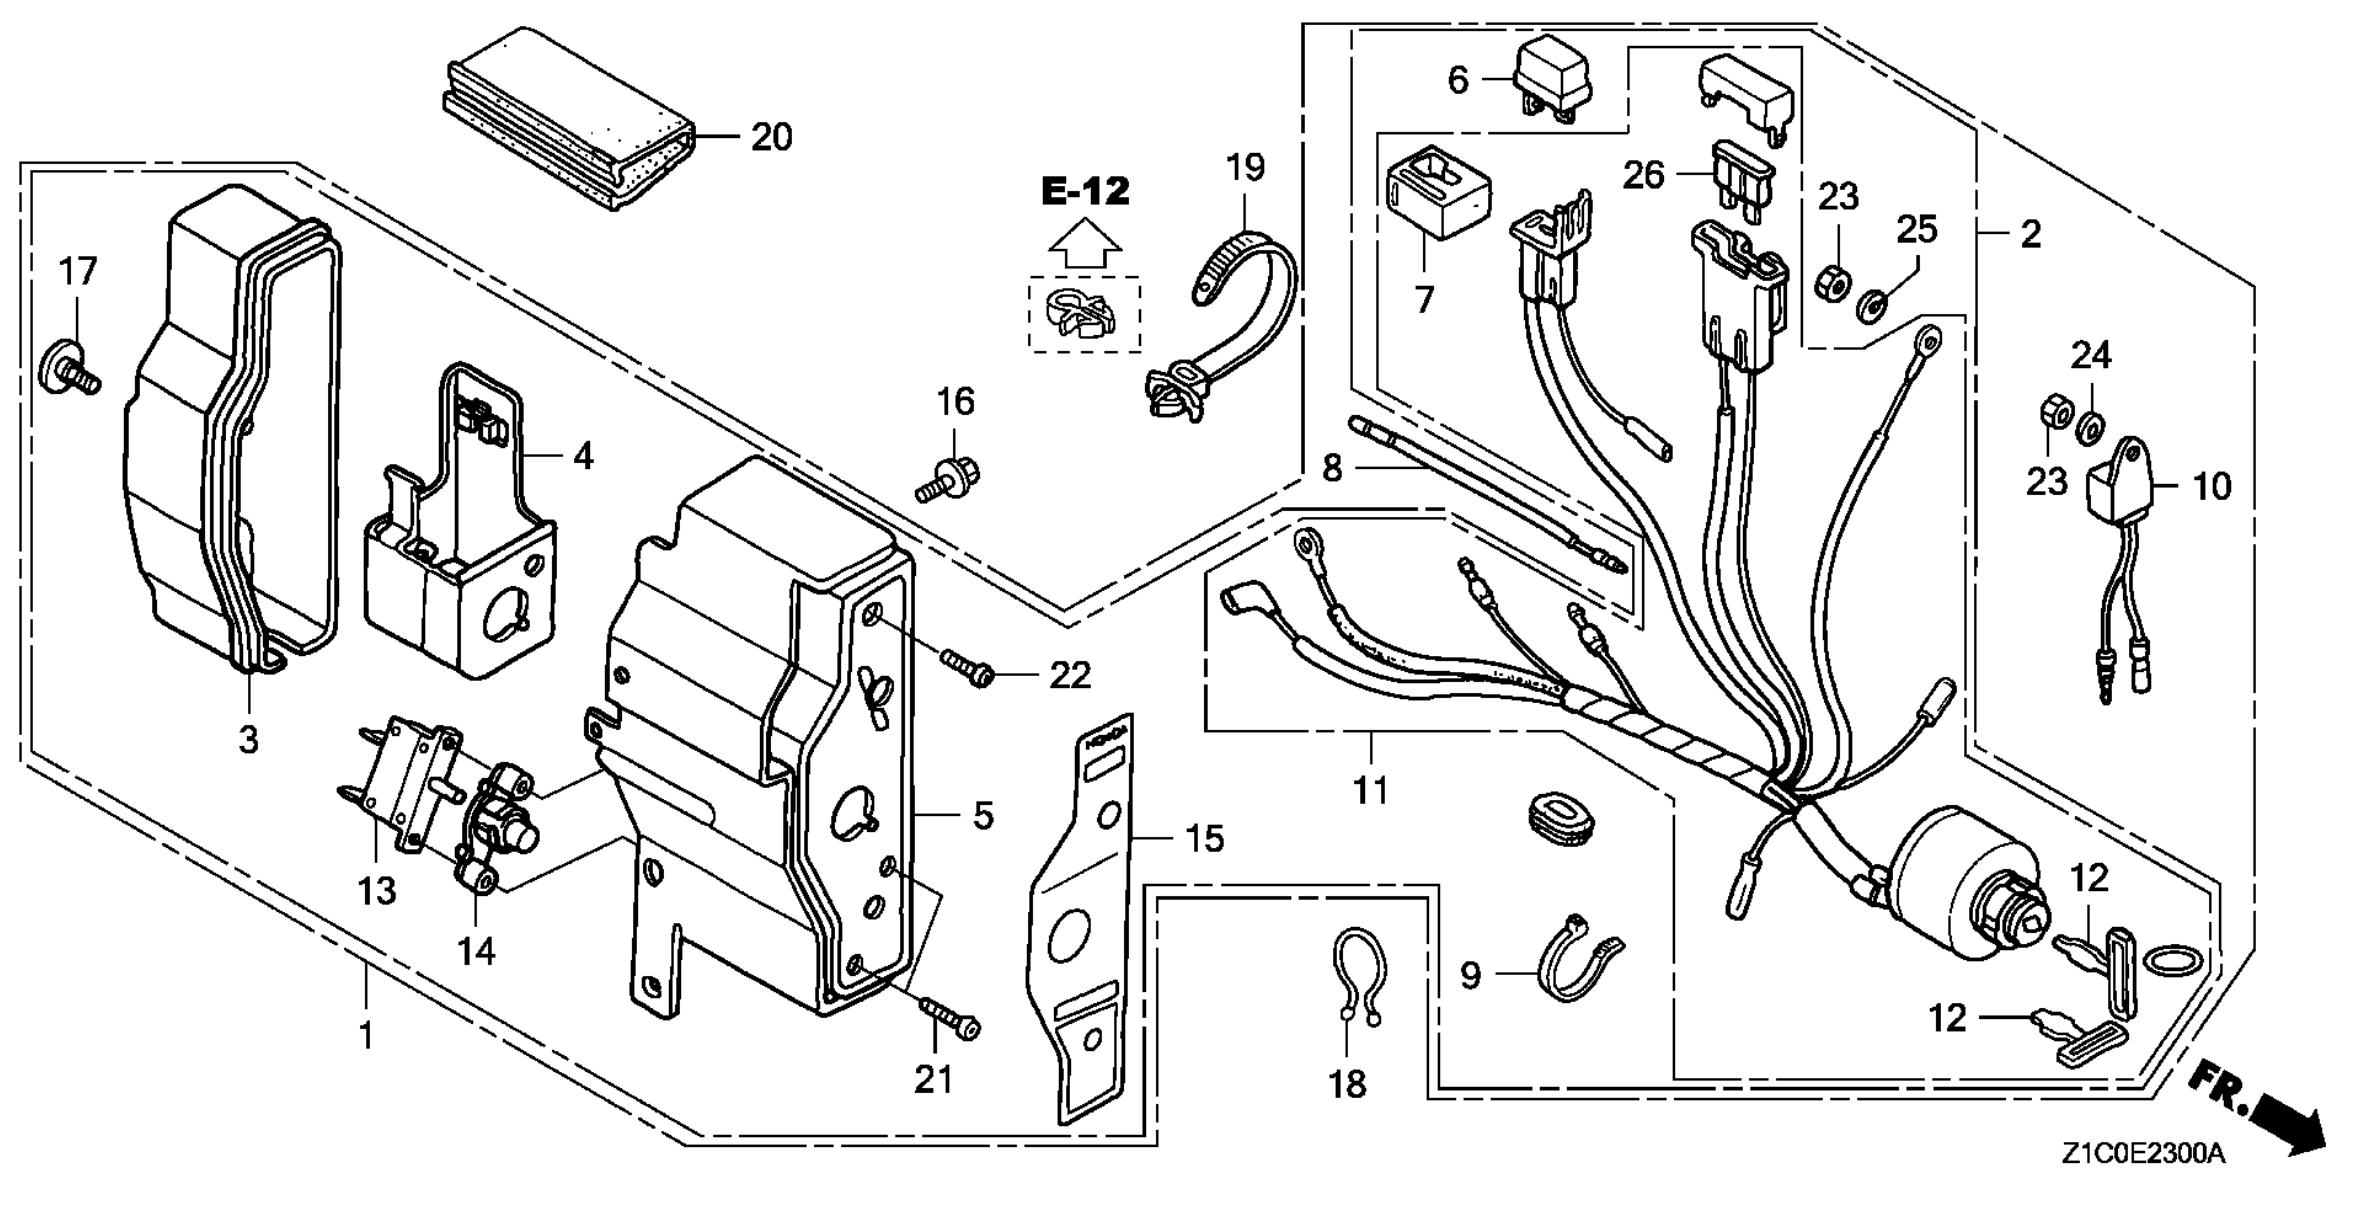

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1		(2)	
	6221N7	BOX, ENGINE CONTROL ----------	0.1
5	6221P7	PANEL, ENGINE CONTROL --------	0.2
6	6131B8	RECTIFIER, SILICON -----------	0.2
10	6151K4	ALERT UNIT, ENGINE CONTROL OIL	0.2
11	6151E1	SWITCH, COMBINATION ----------	0.2
13	6221D4	PROTECTOR, CIRCUIT -----------	0.2
26	8121A7	FUSE, BLADE ------------------	0.1


Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.		Parts catalogue code
1	31610-ZE3-W13ZE	BOX ASSY., CONTROL *R280*..............POWER RED	1	--------	--------	LXE8,PXE8,QXE,QXEK,QXE8,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
	31610-Z5T-801ZA	BOX ASSY., CONTROL (EXP-ALERT) *R280*..............POWER RED	1	--------	1395131	LXE9
	31610-Z5T-802ZA	*R280*..............POWER RED	1	1395132	--------	LXE9
2	31610-ZE3-812ZD	BOX ASSY., CONTROL *R280*..............POWER RED	1	--------	--------	SHE,SWE,SWE2
3	31612-ZE2-003	CASE, CONTROL ---------------	1	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
4	31614-ZE2-003	BRACKET, CASE MOUNTING ------	1	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
5	31615-ZE3-003ZE	PANEL COMP., CONTROL *R280*..............POWER RED	1	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
6	31700-124-008	RECTIFIER ASSY., SILICON (SHINDENGEN)	1	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
7	32127-738-700	SUSPENSION, COUPLER ---------	1	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
8	32197-ZE1-003	SUB HARNESS -----------------	1	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
9	32902-892-003	BAND ------------------------	1	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
10	34150-ZH7-003	ALERT UNIT, OIL -------------	1	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
11	35100-ZE2-023	SWITCH ASSY., COMBINATION ---	1	--------	--------	LXE8,PXE8,QXE8,SXE8,VXE8
			1	--------	1395131	LXE9,QXE,QXEK,SHE,SWE,SXE,VTE5,VXE,VXK,VXU1
	35100-ZE2-033	---------------------------	1	--------	--------	SWE2
			1	1395132	--------	LXE9,QXE,QXEK,SHE,SWE,SXE,VTE5,VXE,VXK,VXU1
12	35111-880-013	KEY COMP. ------------------	2	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
13	38240-VA3-900	PROTECTOR, CIRCUIT (1.0A) ---	1	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
14	38250-ZA8-701	LENS ASSY., PROTECTOR -------	1	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
15	87529-ZE2-812	MARK, CONTROL BOX (EXP) -----	1	--------	--------	LXE8,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
	87529-Z4T-840	MARK, CONTROL BOX (EXTERNAL)	1	--------	--------	LXE9

CONTROL BOX

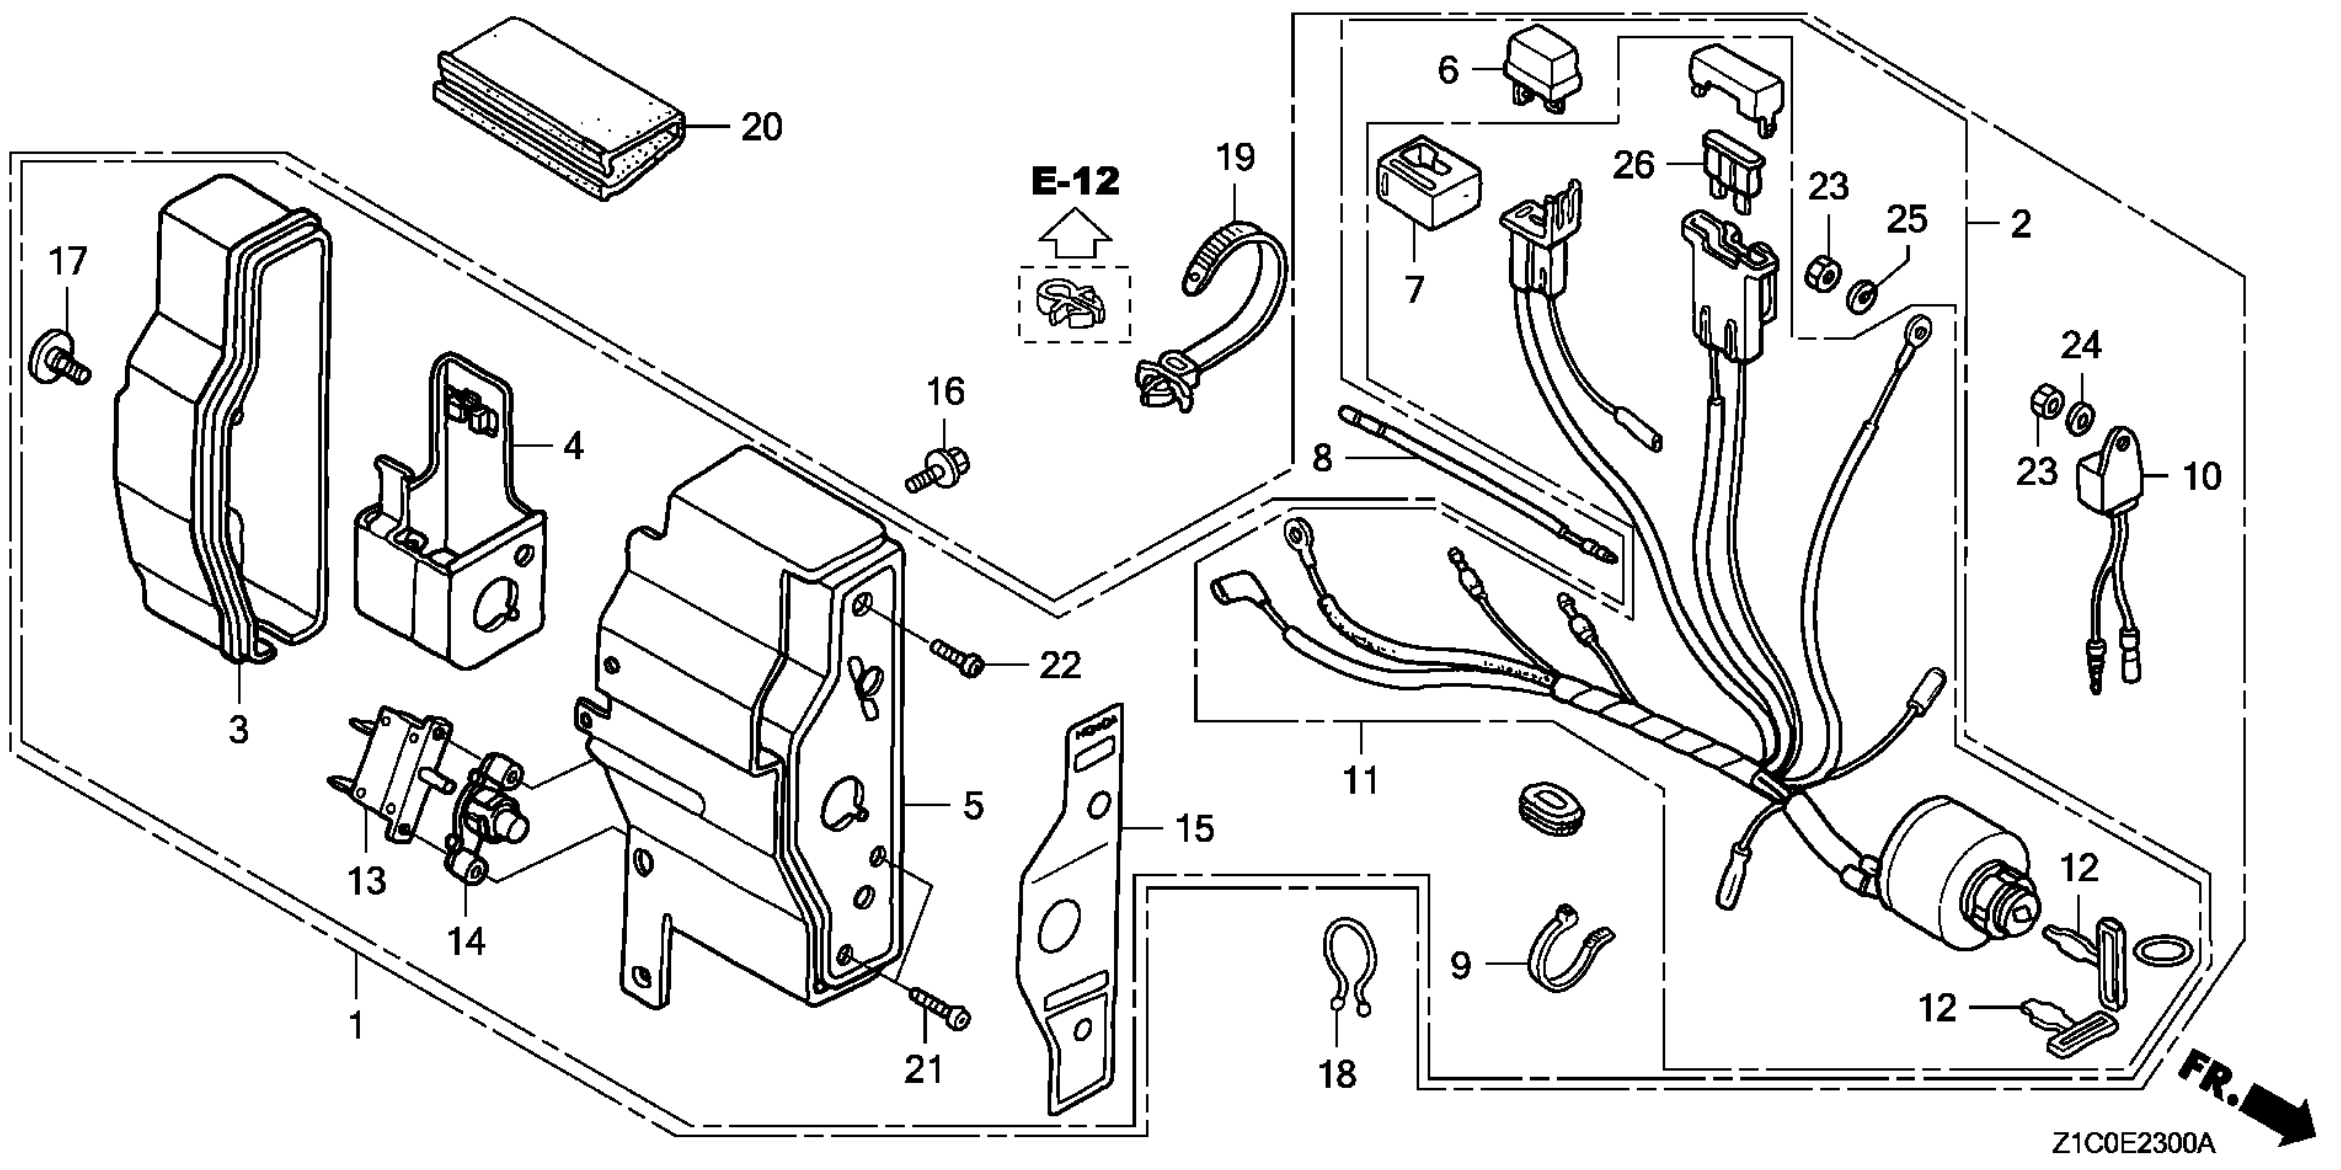

Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.		Parts catalogue code
16	90013-883-000	BOLT, FLANGE, 6X12(CT200) ---	2	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
17	90380-MA6-010	SCREW, SPECIAL, 6X12 --------	1	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
18	90630-751-000	CLIP, PURSE LOCK ------------	1	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
19	90672-SA0-003	STRAP, CABLE, 118MM(BLACK) --	1	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
20	91406-ZE2-003	TUBE, FASTENER, 30MM --------	1	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
21	93500-03012-0H	SCREW, PAN, 3X12 ------------	2	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
22	93500-04012-0H	SCREW, PAN, 4X12 ------------	1	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
23	94001-04390-0S	NUT, HEX., 4MM --------------	1	--------	--------	SHE,SWE,SWE2
			2	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
24	94101-04800	WASHER, PLAIN, 4MM ----------	1	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
25	94111-04800	WASHER, SPRING, 4MM ---------	1	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1
26	98200-30500	FUSE, BLADE (5A) ------------	1	--------	--------	LXE8,LXE9,PXE8,QXE,QXEK,QXE8,SHE,SWE,SWE2,SXE,SXE8,VTE5,VXE,VXE8,VXK,VXU1

REDUCTION

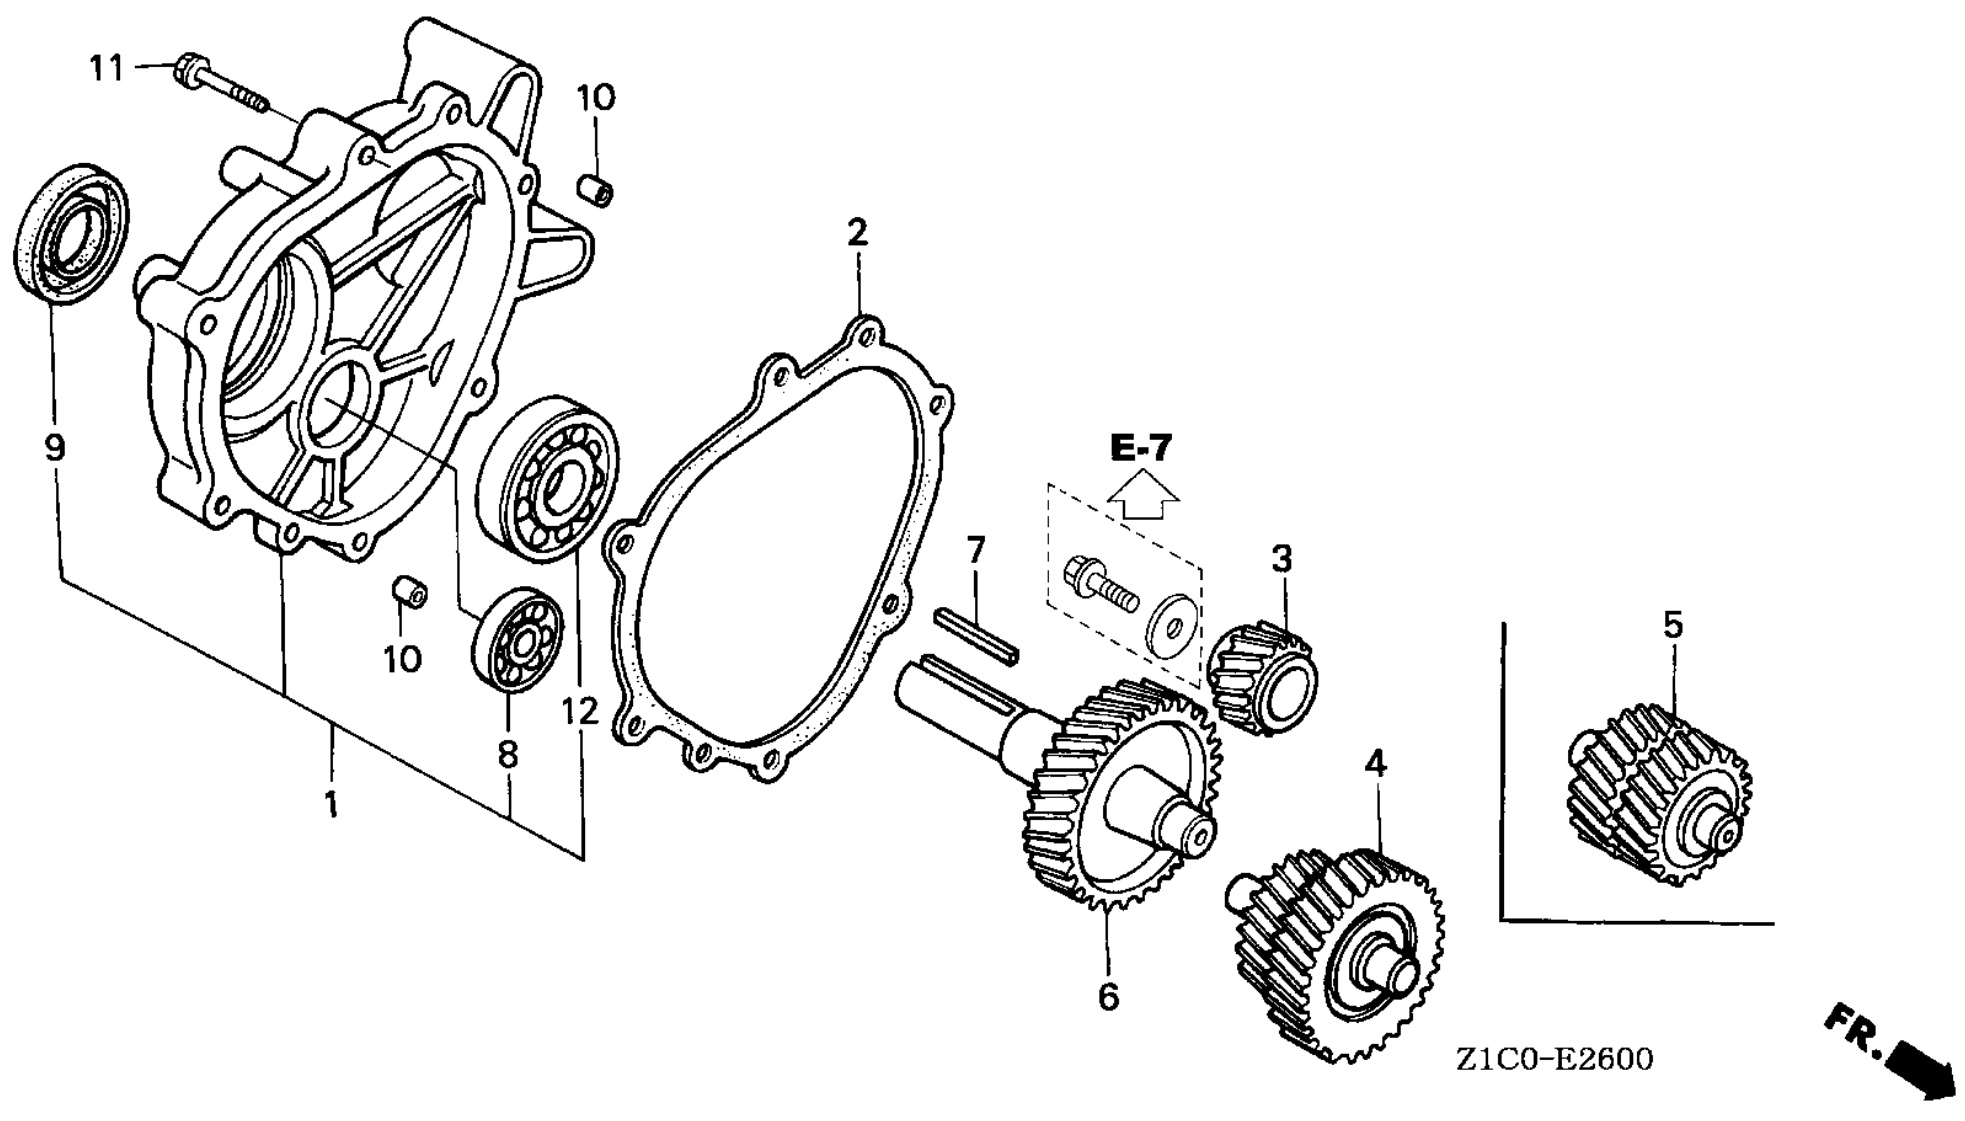


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	2141L1	COVER, REDUCTION GEAR CASE ---	0.2
2	2141Q0	PACKING, REDUCTION CASE ------	0.2
3	2141L2	GEAR, PRIMARY DRIVE ----------	0.2
4		(5)	
	2091A2	COUNTERSHAFT -----------------	0.2
6	2141H4	SHAFT, POWER TAKE OFF --------	0.2
8	2101B0	BEARING, COUNTERSHAFT --------	0.3
9	2141F2	OIL SEAL, POWER TAKE OFF SHAFT	0.3
12	2141A8	BEARING, POWER TAKE OFF SHAFT	0.3

Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.		Parts catalogue code
1	11500-ZE3-611	COVER ASSY., GEAR CASE ------	1	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LP,LXE8,LXE9,LXU
	11500-ZK3-800	----------------------------	1	--------	--------	LT
2	11521-ZE2-800	PACKING, CHAIN CASE COVER ---	1	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU
3	22103-ZE3-W00	GEAR, PRIMARY DRIVE (BANKA) (27T)	1	--------	--------	LBHB,LHP1,LP
	22103-ZE3-610	GEAR, PRIMARY DRIVE (22T) ---	1	--------	--------	LH,LHB5,LH2,LT,LXE8,LXE9,LXU
4	23220-ZE3-610	COUNTERSHAFT COMP. (21T/27T)	1	--------	--------	LH,LHB5,LH2,LT,LXE8,LXE9,LXU
5	23222-ZE3-W00	GEAR, COUNTER (BANKA)(21T) --	1	--------	--------	LBHB,LHP1,LP
6	23710-ZE3-610	SHAFT, P.T.O. (33T) ---------	1	--------	--------	LBHB,LH,LHB5,LH2,LP,LXE8,LXE9,LXU
	23710-ZF6-Y30	SHAFT, P.T.O. (HPI)(33T) ----	1	--------	--------	LHP1
	23710-ZK3-800	SHAFT, P.T.O. (33T) ---------	1	--------	--------	LT
7	90745-ZK2-800	KEY, 6.3X6.3X33 -------------	1	--------	--------	LT
8	91009-KJ1-003	BEARING, RADIAL BALL, 6202 (NTN)	1	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU
9	91201-890-003	OIL SEAL, 30X46X8 -----------	1	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU
10	94301-08140	DOWEL PIN, 8X14 -------------	2	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU
11	95701-08040-00	BOLT, FLANGE, 8X40 ----------	6	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU
12	96100-62060-00	BEARING, RADIAL BALL, 6206 --	1	--------	--------	LBHB,LH,LHB5,LHP1,LH2,LP,LT,LXE8,LXE9,LXU

E-28 LABEL(1)

F14

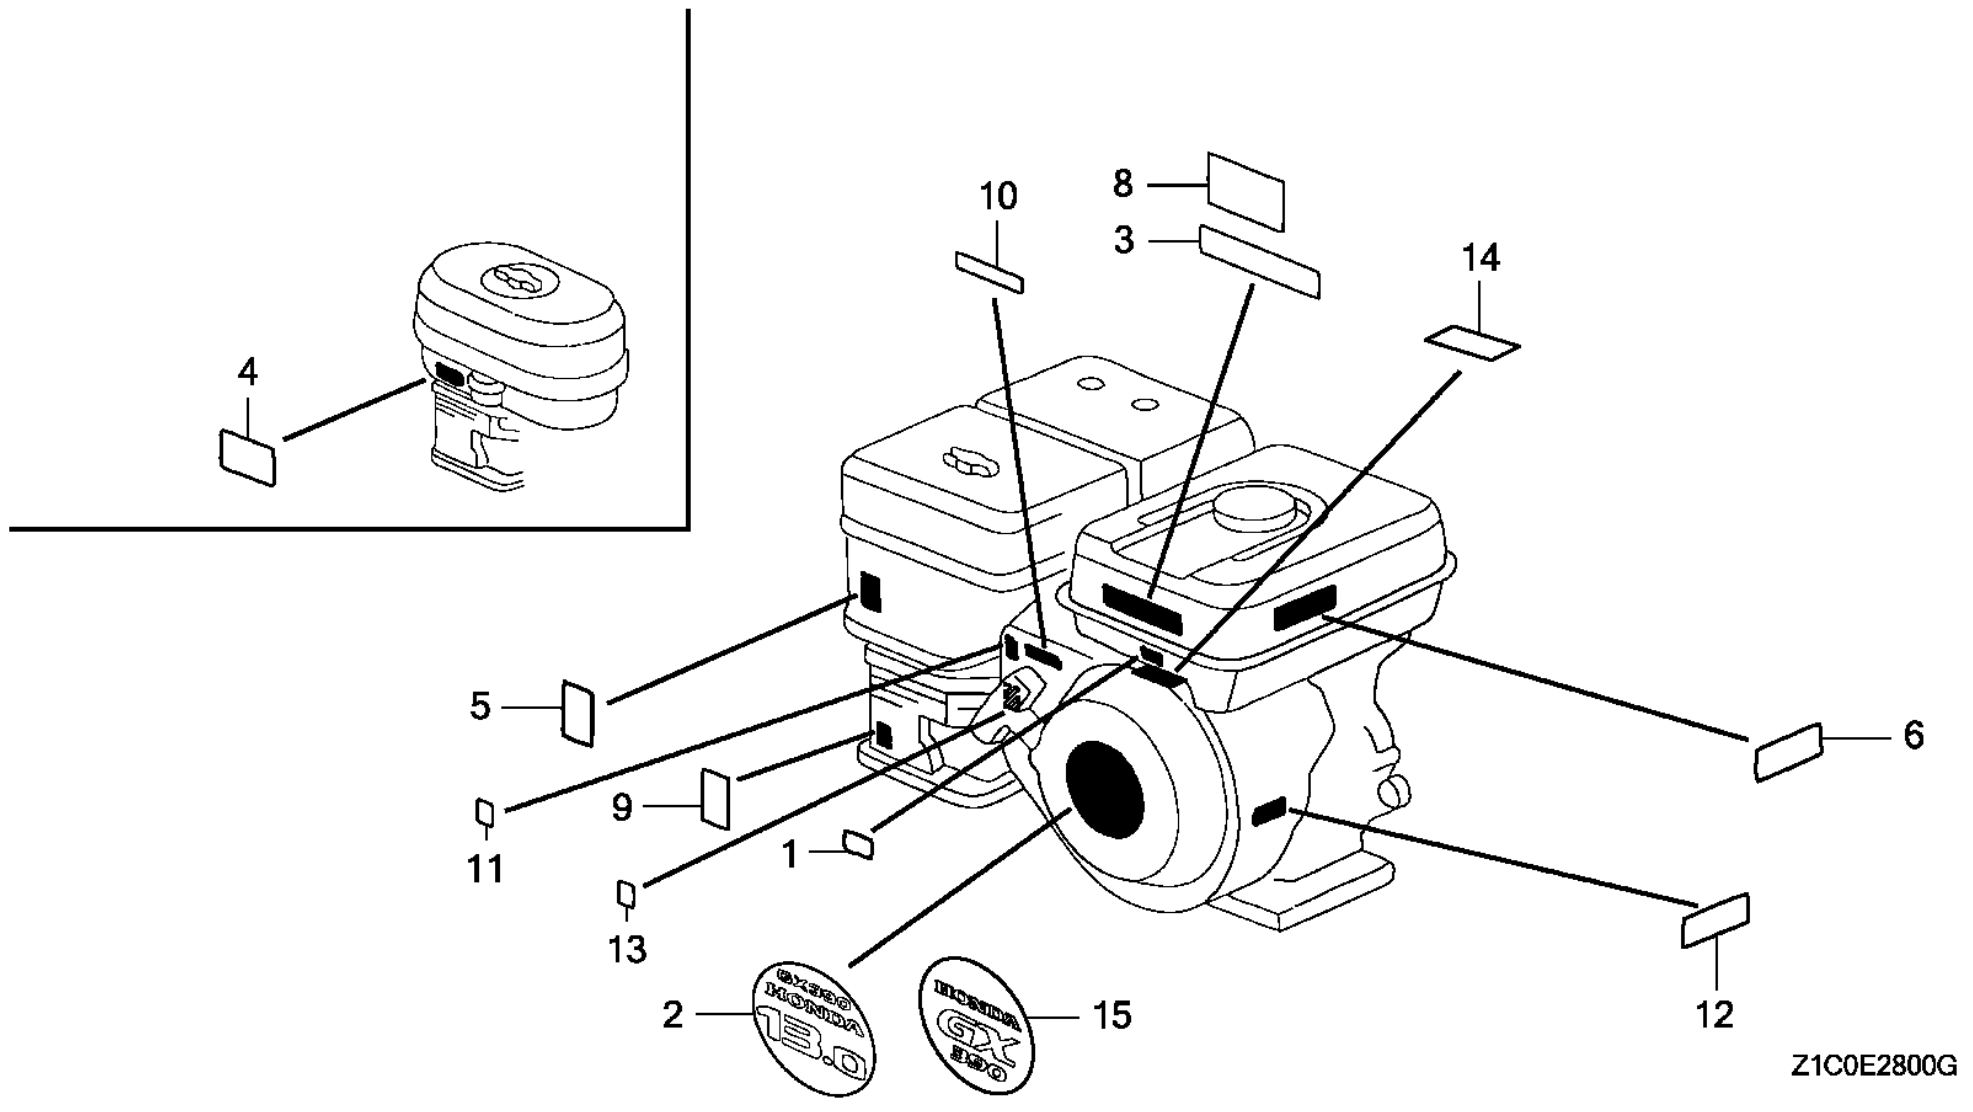


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
		NO INFORMATION ---------------	

2


Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.		Parts catalogue code
1	87135-ZE2-020	LABEL, E-SPEC (15.5X27.5) ---	1	--------	--------	LH,LHB5,LHP1,LP,LT,LXE8,LXU,PX,PXE8,PXU,QH,QHB3,QHB5,QHP1,QMH,QP,QT,QX QXE,QXE8,QXQ4,QXU,SH,SHE,SN,SWE,SWX,SX,SXC,SXE,SXE8,SXQ4,VX,VXE,VXE8,VXU1 VX8
2	87521-ZF6-W03	EMBLEM (GX390 HONDA 13.0) ---	1	--------	--------	LXE8,LXU,PXE8,PXU,QAA2,QAA6,QA2,QA26,QXE8,QXQ4,QXU,SXE8,SXQ4,VXE8,VX8
			1	--------	1363842	LH,LHB5,LT,LXE9,PX,QH,QHB3,QHB5,QHP1,QMH,QP,QT,QTD,QX,QXE,QXEK,QXK,SH,SHE SN,SWE,SWX,SX,SXC,SXE,VSP,VTE5,VX,VXE,VXK,VXU1
3	87522-Z0T-800	LABEL, CAUTION --------------	1	--------	--------	LH,LHB5,LHP1,LP,LXE8,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3,QHB5,QHP1 QMH,QN,QP,QX,QXE,QXE8,QXU,SH,SHE,SN,SWE,SWX,SX,SXC,SXE,SXE8,VX,VXE,VXE8 VXU1,VX8
	87522-Z0T-810	LABEL, CAUTION (THAI) -------	1	--------	--------	LT,QT,QTD
	87516-Z0S-800	MARK, OPERATOR CAUTION ------	1	--------	--------	LXE9,QXEK,QXK,VXK
4	87524-Z0T-800	MARK, AIR CLEANER CAUTION (OIL BATH)	1	--------	--------	LT,QP,QT,QTD,SWX
	87524-Z0S-800	---------------------------	1	--------	1473299	LH2,SWE2,SWX2
	87524-Z0S-801	---------------------------	1	1473300	--------	SWE2,SWX2
5	87528-ZE2-810	MARK, CHOKE (ORANGE) --------	1	--------	--------	LH,LHB5,LHP1,LXE8,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QH,QHB3,QHB5,QHP1 QMH,QP,QX,QXE,QXEK,QXE8,QXK,QXU,SH,SHE,SN,SWE,SWX,SX,SXC,SXE,SXE8,VTE5,VX VXE,VXE8,VXK,VXU1,VX8
	87528-Z0T-800	MARK, CHOKE (THAI) ----------	1	--------	--------	LT,QT,QTD
	87528-ZH7-000	MARK, CHOKE (GRAY) ----------	1	--------	--------	LXE9
6	87532-ZH8-810	MARK, OIL ALERT (ENGLISH) ---	1	--------	--------	LXE8,LXU,PX,PXE8,PXU,QAA2,QAA6,QA2,QA26,QX,QXE,QXEK,QXE8,QXK,QXU,SWX,SWX2 SX,SXC,SXE,SXE8,VX,VXE,VXE8,VXK,VXU1,VX8
	87532-ZB4-H50	MARK, OIL ALERT (FRENCH) ----	1	--------	--------	QA26
8	87516-Z0T-800	MARK, OPERATOR CAUTION ------	1	--------	--------	QXQ4,SXQ4,VSP
9	87528-ZE2-810	MARK, CHOKE (ORANGE) --------	1	--------	--------	LH2,QN,SWE2,SWX2
	87528-ZF6-W40	MARK, CHOKE (BLACK) ---------	1	--------	--------	QXQ4,SXQ4
	87528-ZH7-000	MARK, CHOKE (GRAY) ----------	1	--------	--------	VSP
10	87532-ZH8-W40	MARK, THROTTLE INDICATION ---	1	--------	--------	QXQ4,SXQ4

LABEL(1)

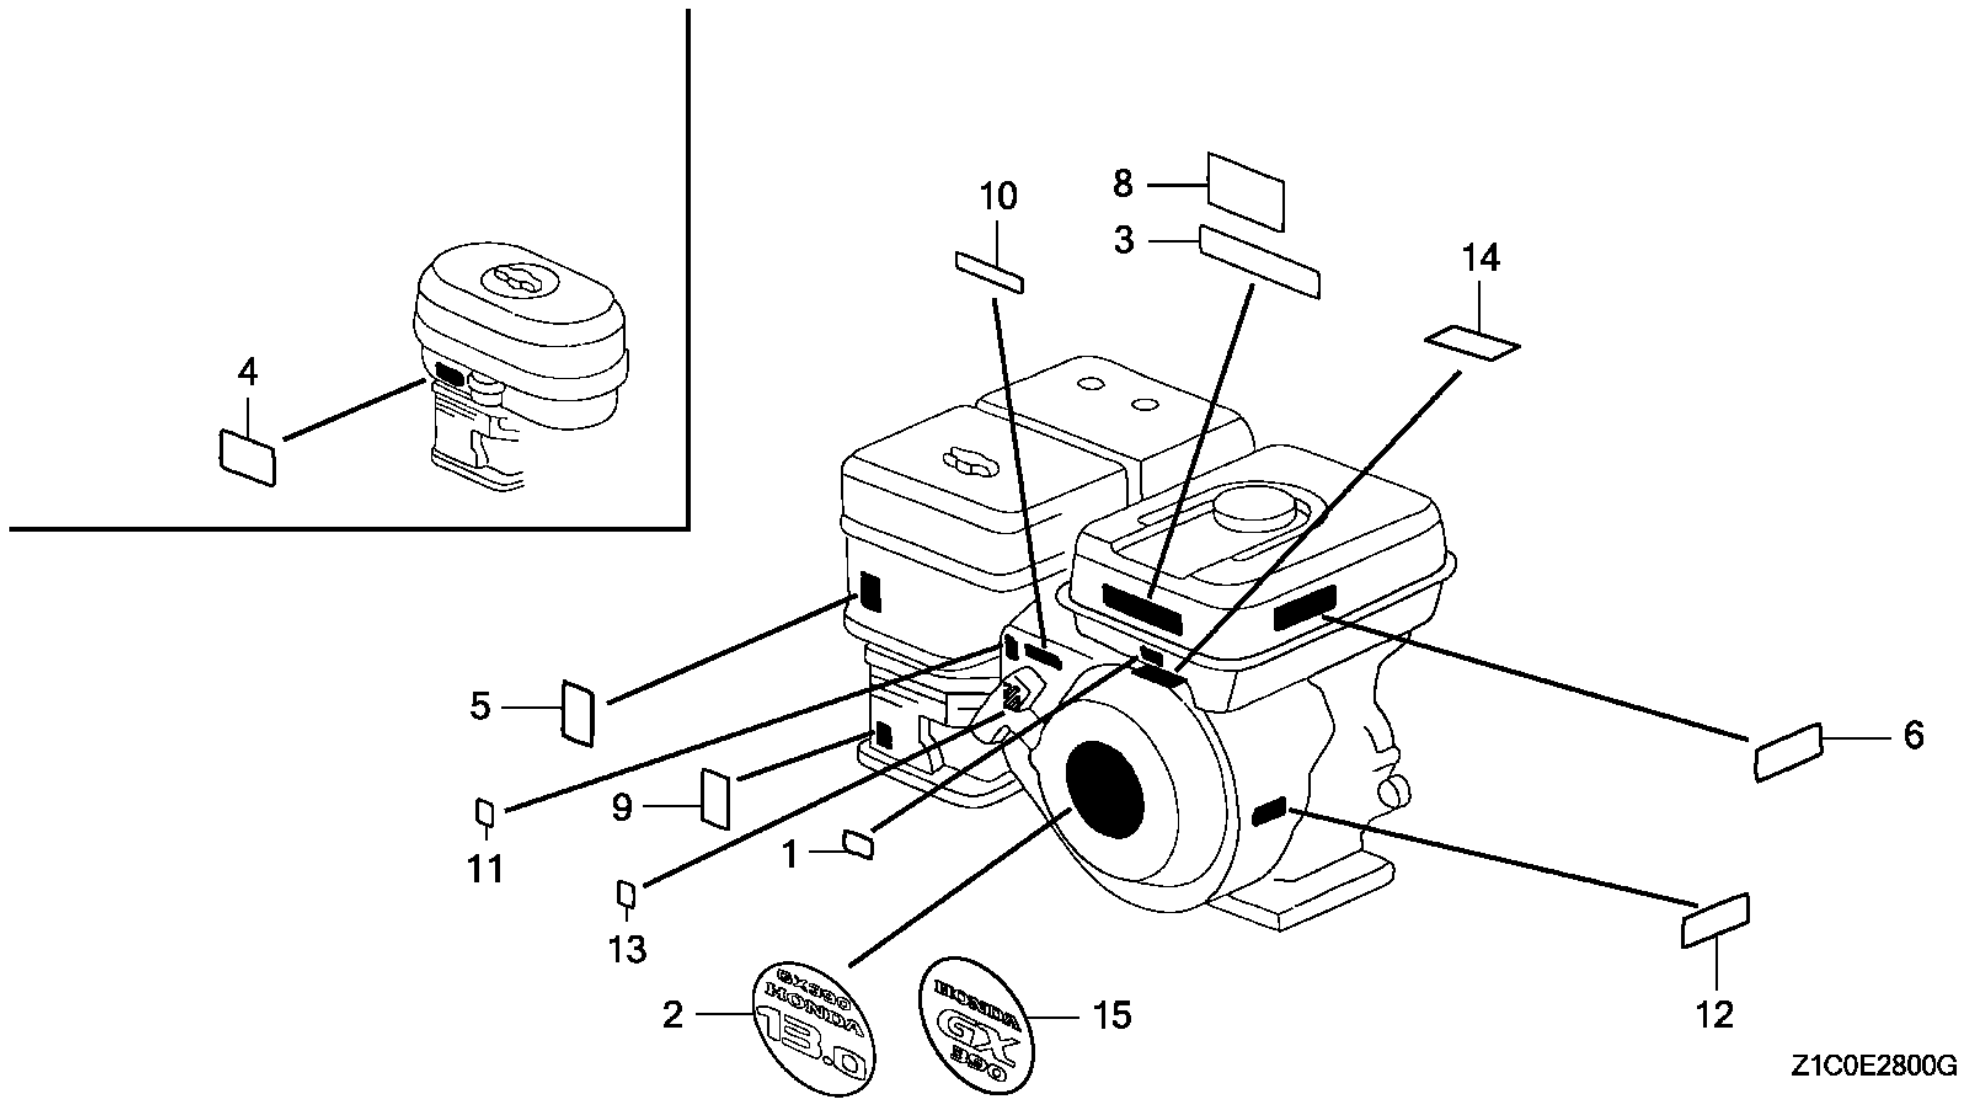

Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.		Parts catalogue code
10)	87532-ZH7-000	MARK, THROTTLE INDICATION ---	1	--------	--------	LXE9
11	87135-ZE2-020	LABEL, E-SPEC (15.5X27.5) ---	1	--------	--------	VTE5
12	87532-ZH8-810	MARK, OIL ALERT (ENGLISH) ---	1	--------	--------	VTE5
13	87114-ZH7-000	LABEL, WARNING (NOT CERTIFIED FOR SALE)	1	--------	--------	LH2,LXE9,QN,QTD,QXEK,QXK,SWE2,SWX2,VXK
	87114-ZH7-840	....	1	--------	--------	VSP
14	87516-Z0S-810	MARK, OPERATOR CAUTION ------	1	--------	--------	LH2,SWE2,SWX2
15	87521-ZF6-W04	EMBLEM (HONDA GX390) --------	1	--------	--------	LH2,QN,SWE2,SWX2
			1	1363843	--------	LH,LHB5,LT,LXE9,PX,QH,QHB3,QHB5,QHP1,QMH,QP,QT,QTD,QX,QXE,QXEK,QXK,SH,SHE SN,SWE,SWX,SX,SXC,SXE,VSP,VTE5,VX,VXE,VXK,VXU1


E-28-1 LABEL(2)

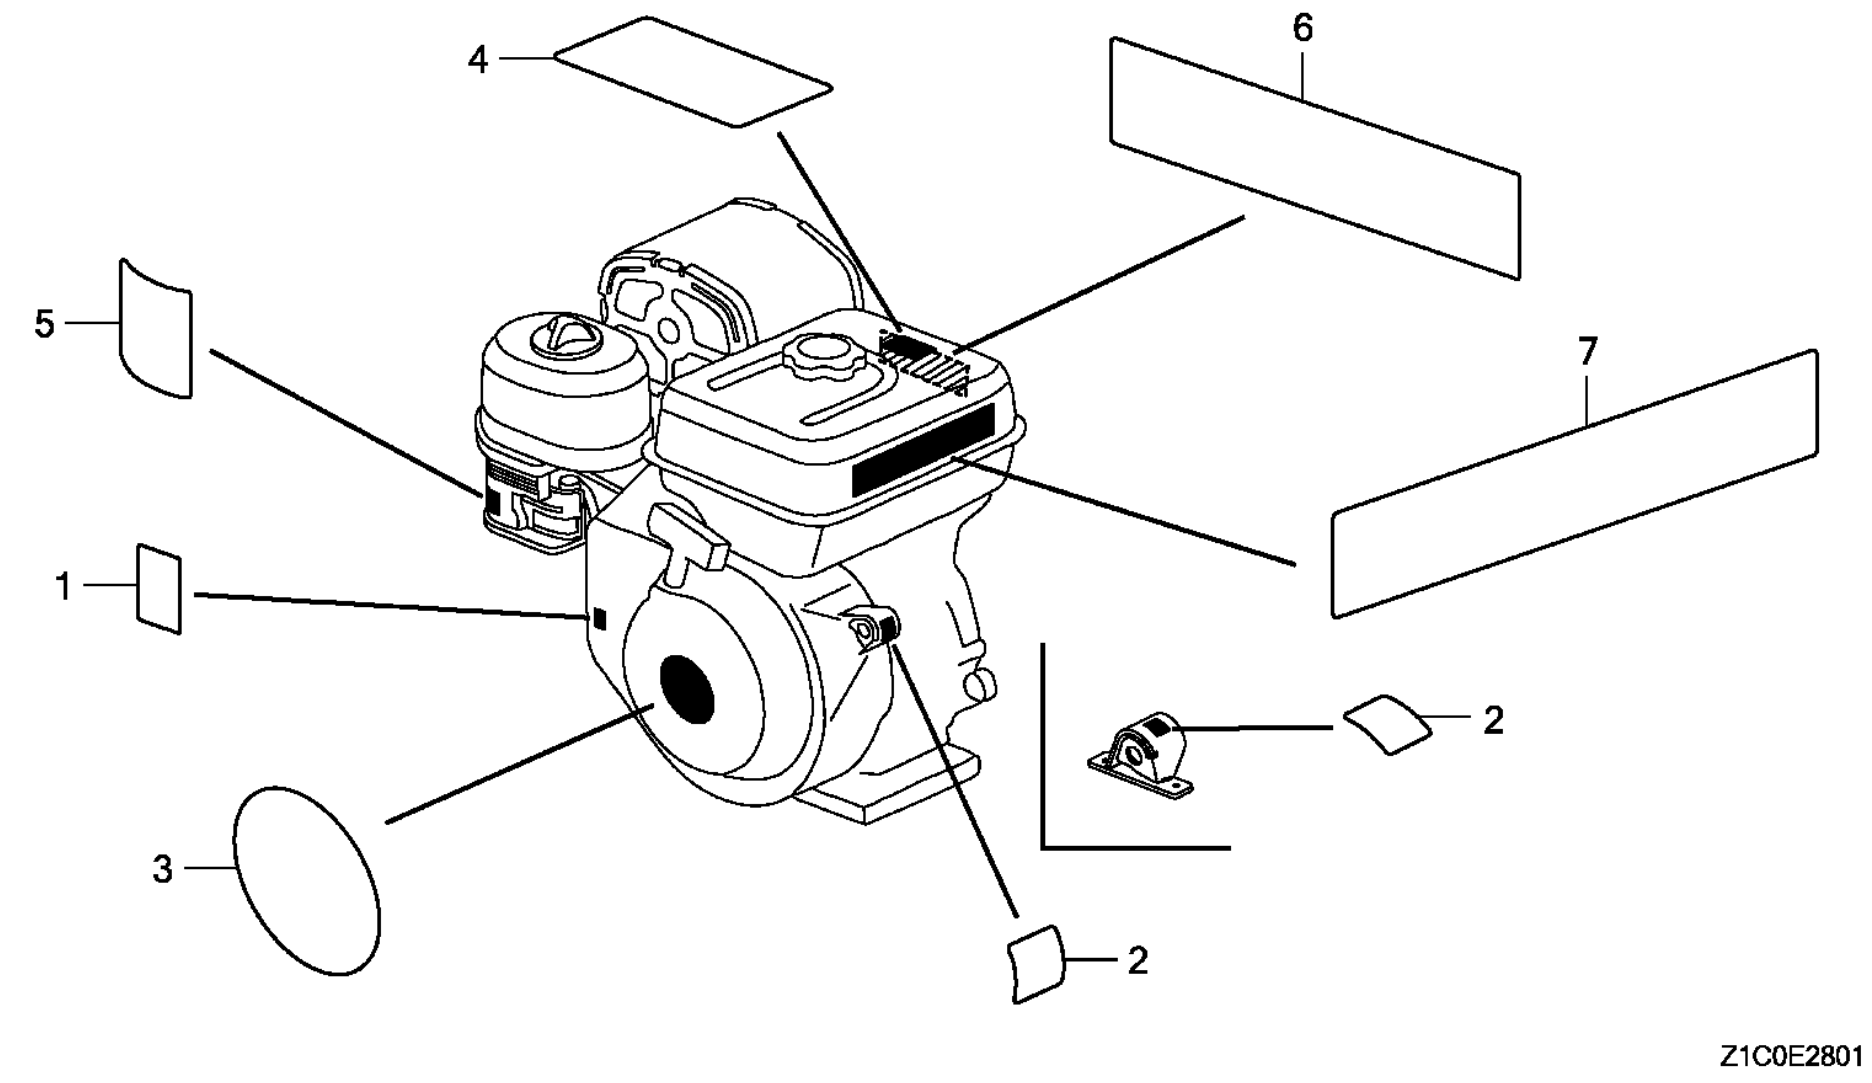

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
		NO INFORMATION	

Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.	Parts catalogue code
1	87114-ZH7-000	LABEL, WARNING (NOT CERTIFIED FOR SALE)	1	-------- --------	LBHB,QBH,QBHS,QBLS,QBS
2	87124-Z0T-800	MARK, STOP SWITCH	1	-------- --------	LBHB,QBH,QBHS,QBLS,QBS
3	87521-Z1C-810	EMBLEM	1	-------- --------	QBLS,QBS
	87521-Z1C-820	....	1	-------- --------	LBHB,QBH,QBHS
4	87522-Z0T-820	LABEL, CAUTION	1	-------- --------	LBHB,QBH,QBHS,QBLS,QBS
5	87528-ZE2-810	MARK, CHOKE (ORANGE)	1	-------- --------	LBHB,QBH,QBHS,QBLS,QBS
6	87531-Z0T-800	MARK, HONDA	1	-------- --------	LBHB,QBH,QBHS,QBLS,QBS
7	87602-Z0T-800	MARK, SALES POINT	1	-------- --------	LBHB,QBH,QBHS


TOOL

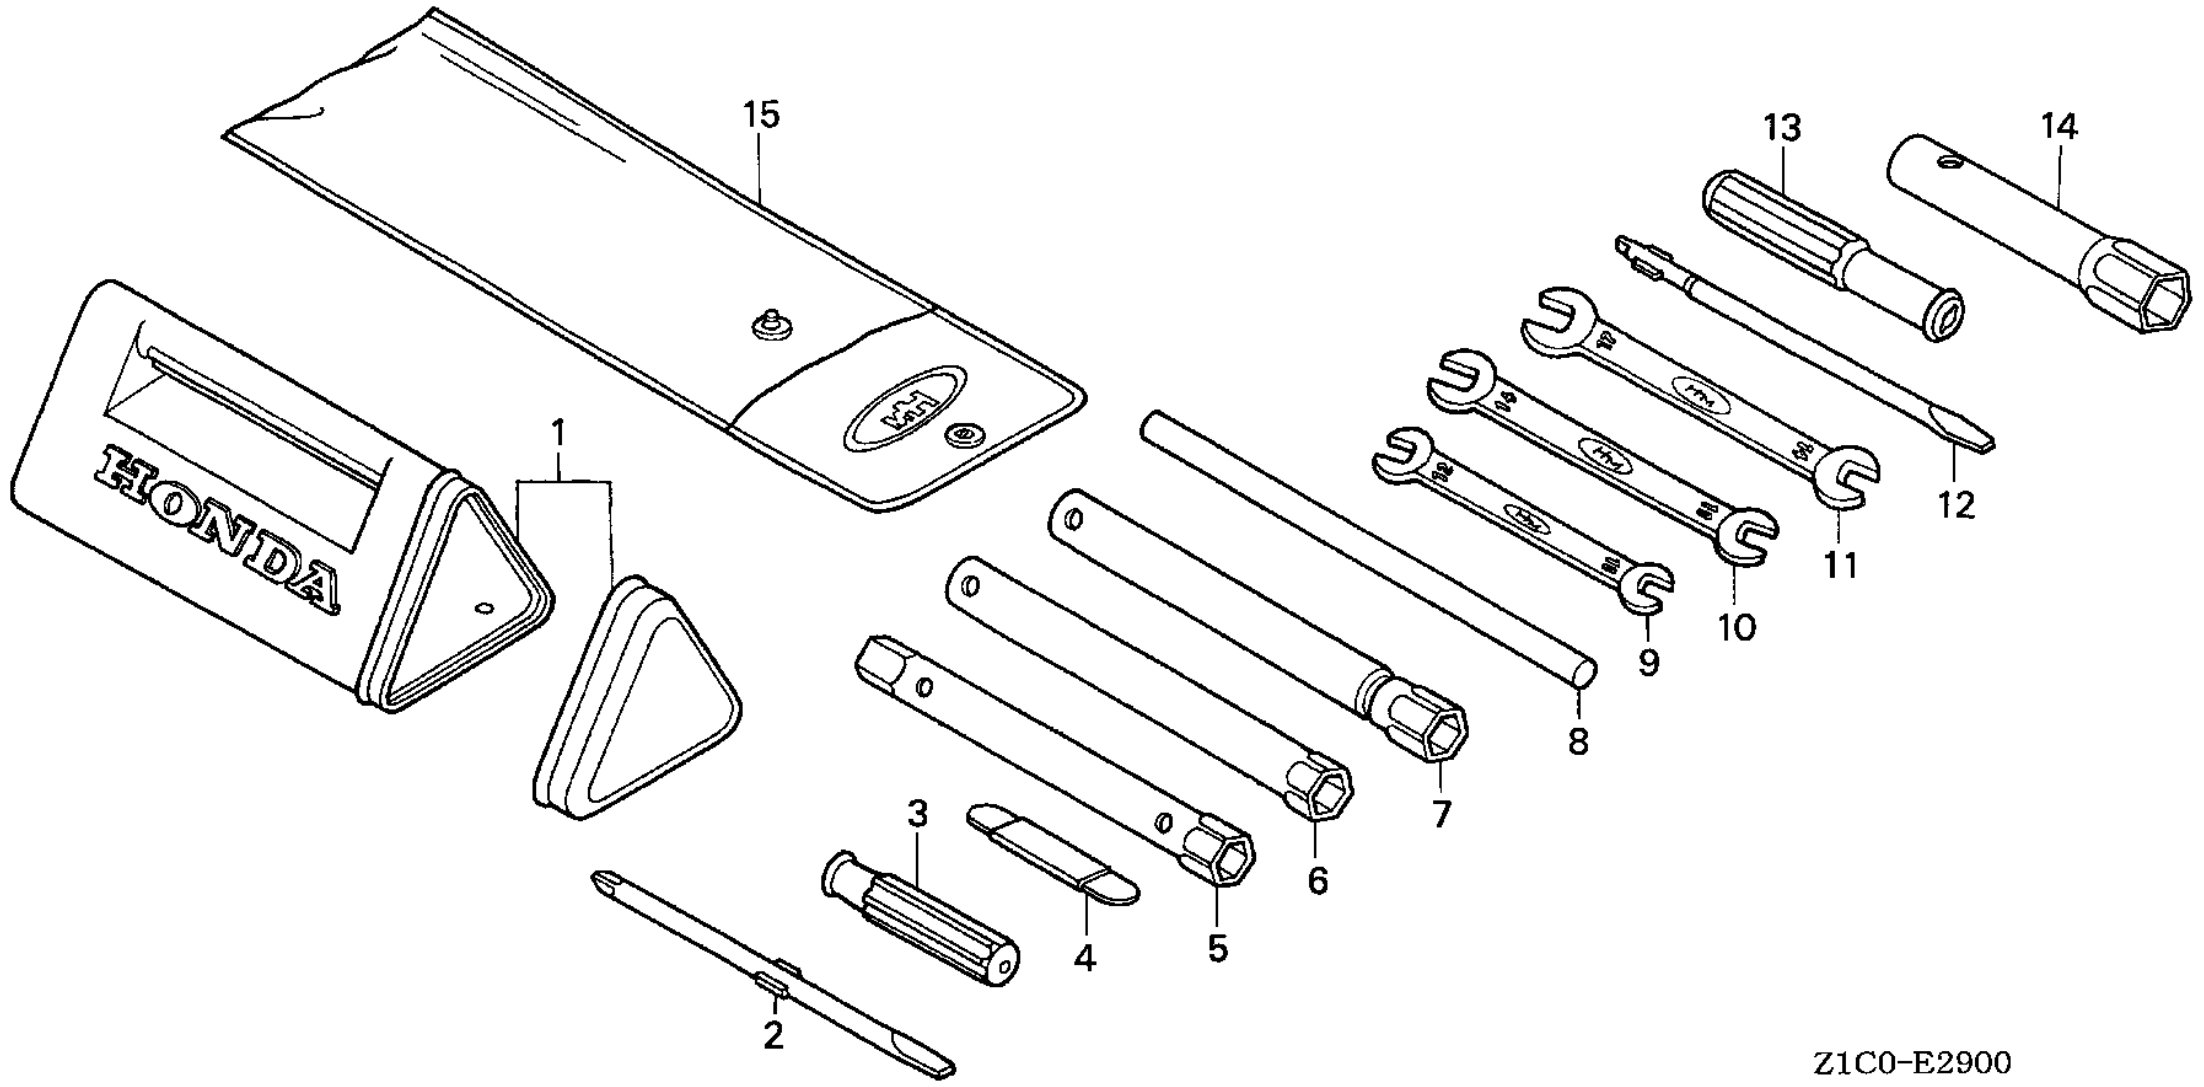

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
		NO INFORMATION ···············	

Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.		Parts catalogue code
1	83501-ZF1-000	BOX, TOOL ····················	1	--------	--------	LBHB,LT,QBH,QBHS,QBLS,QBS,QHB3,QN,QT,QTD,SWX,SWX2
2	89102-538-000	DRIVER, SCREW (NO.2 + -) ····	1	--------	--------	LBHB,LT,QBH,QBHS,QBLS,QBS,QHB3,QN,QT,QTD,SWX,SWX2
3	89103-538-000	GRIP ························	1	--------	--------	LBHB,LT,QBH,QBHS,QBLS,QBS,QHB3,QN,QT,QTD,SWX,SWX2
4	89210-ZF1-000	GAUGE ASSY., THICKNESS ······	1	--------	--------	LBHB,LT,QBH,QBHS,QBLS,QBS,QHB3,QN,QT,QTD,SWX,SWX2
5	89216-ZF1-000	WRENCH, BOX ·················	1	--------	--------	LBHB,LT,QBH,QBHS,QBLS,QBS,QHB3,QN,QT,QTD,SWX,SWX2
6	89216-Z0T-800	WRENCH, SPARK PLUG ··········	1	--------	--------	LBHB,LHP1,LT,QAA2,QAA6,QA2,QA26,QBH,QBHS,QBLS,QBS,QHB3,QHP1,QMH,QN,QP,QT QTD,SWX,SWX2
			(1)	--------	--------	LP
7	89218-ZE1-000	WRENCH COMP., SPARK PLUG ····	1	--------	--------	SN
8	89219-805-000	HANDLE, BOX WRENCH ··········	1	--------	--------	LBHB,LHP1,LT,QBH,QBHS,QBLS,QBS,QHB3,QHP1,QMH,QN,QP,QT,QTD,SN,SWX,SWX2
	99005-01000	BAR A, HANDLE ···············	1	--------	--------	LHB5,QHB5
9	99001-10120	SPANNER, 10X12 ··············	1	--------	--------	LBHB,LHB5,LHP1,LT,QBH,QBHS,QBLS,QBS,QHB3,QHB5,QHP1,QMH,QN,QP,QT,QTD,SWX SWX2
10	99001-10140	SPANNER, 10X14 ··············	1	--------	--------	LBHB,LT,QBH,QBHS,QBLS,QBS,QHB3,QN,QT,QTD,SWX,SWX2
11	99001-14170	SPANNER, 14X17 ··············	1	--------	--------	LHP1,QHP1,QMH,QP
12	99003-30000	DRIVER MINUS SCREW 3,(NO.2) ·	1	--------	--------	LHB5,QHB5
13	99003-50000	GRIP, SCREW DRIVER ··········	1	--------	--------	LHB5,QHB5
14	99004-21003	WRENCH, BOX (P21) ···········	1	--------	--------	LHB5,QHB5
15	99008-02000	BAG, TOOL, 200MM ············	1	--------	--------	LHB5,QHB5
	99008-02300	BAG, TOOL, 230MM ············	1	--------	--------	LBHB,LHP1,LT,QBH,QBHS,QBLS,QBS,QHB3,QHP1,QMH,QN,QP,QT,QTD,SN,SWX,SWX2

OTHER PARTS

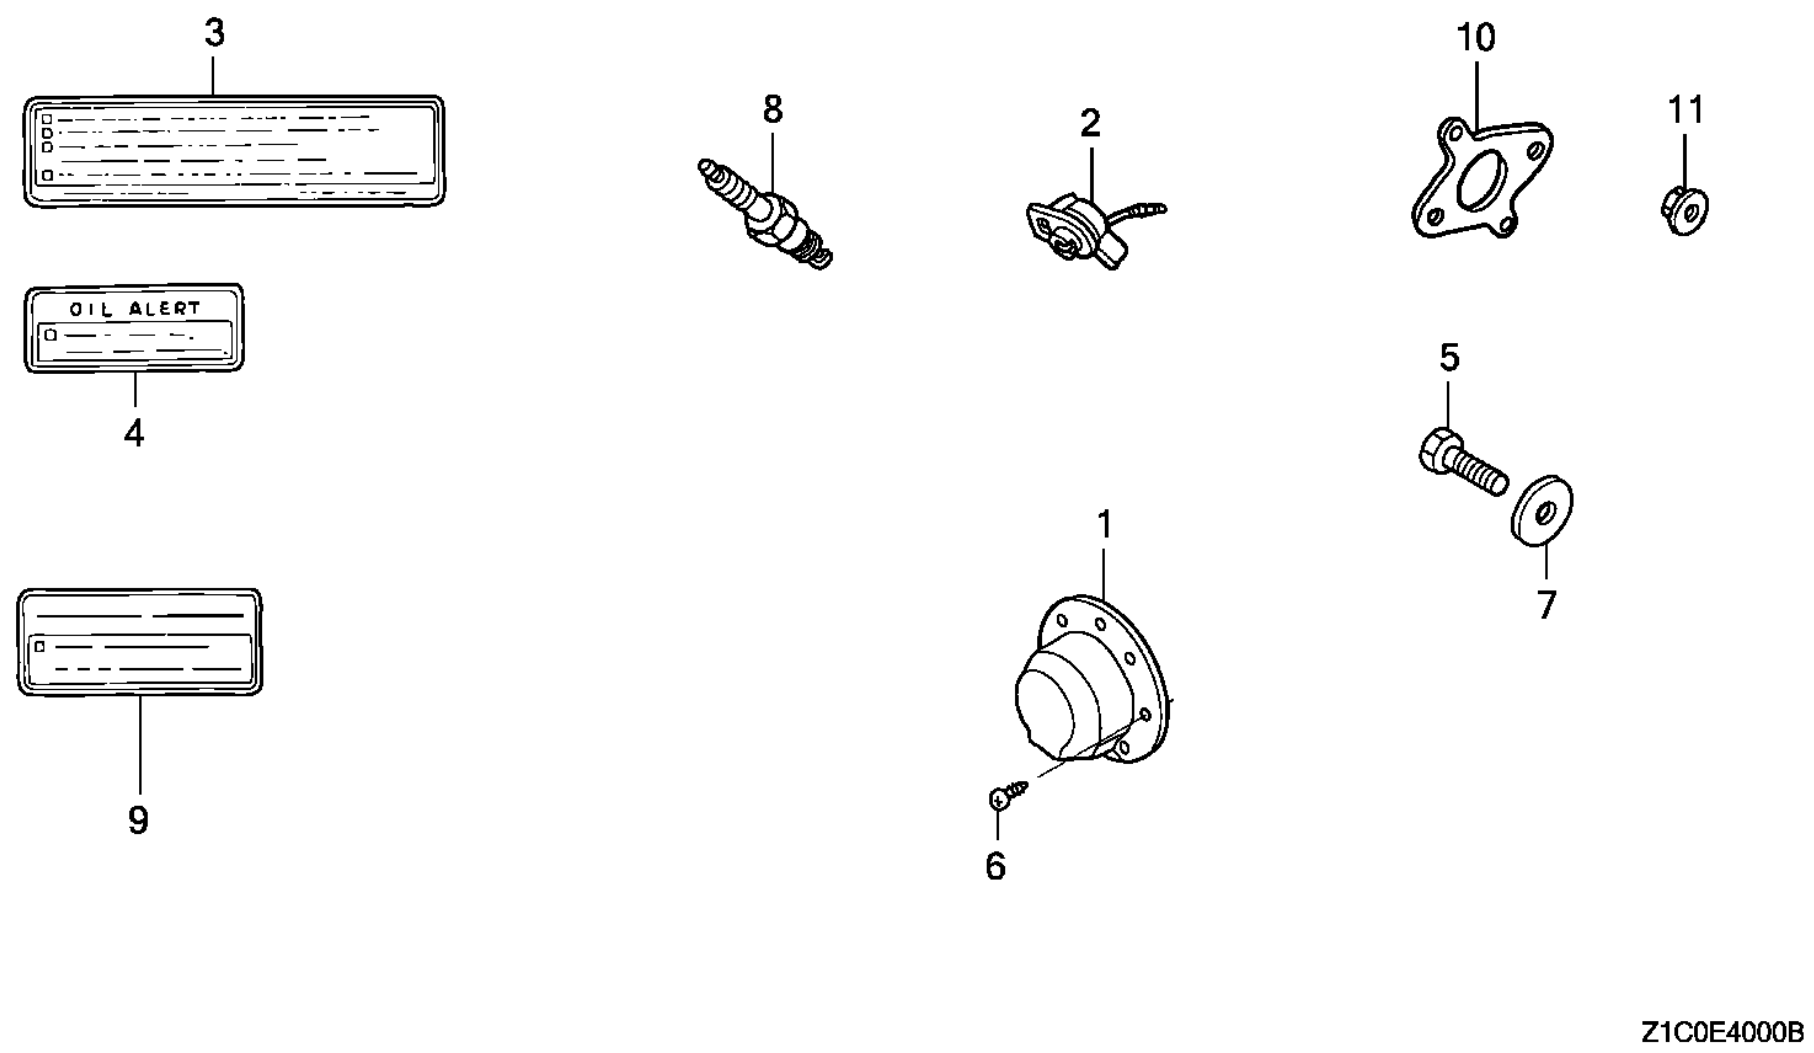

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
		NO INFORMATION ················	

Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.		Parts catalogue code
1	18331-ZE3-810	CAP, MUFFLER ·················	1	--------	1443262	LHP1,QHP1
	18331-ZE3-811	····························	1	1443263	--------	LHP1,QHP1
2	35120-Z0D-V81	SWITCH ASSY., ENGINE STOP ···	1	--------	--------	LP
3	87522-Z0T-800	LABEL, CAUTION ··············	1	--------	--------	VTE5
4	87532-ZH8-810	MARK, OIL ALERT (ENGLISH) ···	1	--------	--------	VTE5
5	90003-ZE3-600	BOLT, HEX., 3/8-24UNF(25MM) ·	1	--------	--------	LT
6	90055-ZE1-000	SCREW, TAPPING, 4X6 ·········	3	--------	--------	LHP1,QHP1
7	90471-ZE3-000	WASHER, 10.5X40X4 ···········	1	--------	--------	LT
8	98079-56876	PLUG, SPARK (BPR6ES) ········	1	--------	--------	LHB5,QHB3,QHB5,SWX,SWX2
9	87532-ZB4-H50	MARK, OIL ALERT (FRENCH) ····	1	--------	--------	QAA6
10	18333-ZF6-W01	GASKET, EX. PIPE ············	1	--------	--------	QTD
11	94050-08000	NUT, FLANGE, 8MM ············	2	--------	--------	QTD

PART NO. INDEX

PART NO. INDEX

PART NO. INDEX

H 3

3

PART NAME INDEX

I 1

PART NAME INDEX

PART NAME INDEX

HONDA

The Power of Dreams

Published by Honda Motor Co., Ltd.
Printed in Japan
E.Y A 90.2008.11

February 15, 2009

HONDA POWER PRODUCTS

PARTS CATALOGUE NEWS

Honda Motor Co., Ltd. Service Division

PARTS CATALOGUE - CORRECTED

Printed in Japan

CODE NO.	13Z1C402
PARTS CATALOGUE NEWS	GX390T1
NEWS NO.	001

(THAILAND-KD)

Block No.	Ref. No.	Note	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.	Parts catalogue code
E-12	4	E	36100-ZF6-P81	*PARTS NO. DELETION			
		E	36100-ZF6-P82	*PARTS NO. DELETION			
	8	D	36100-ZF6-P81	SWITCH ASSY., ENGINE STOP	1	------- -------	LXU, PX, PXU, QAA2, QAA6, QA2, QA26, QX, QXK, QXQ4, QXU, SWX, SX, SXC SXQ4, VSP, VX, VX8
		T	36100-ZF6-P82	....	1	------- -------	QAPW, SWX2

NOTE A:PART NO.CHANGE D:NEWLY PROVIDED E:PART NO.DELETION K:REQUIRED NO.CORRECTION L:APPLICATION SERIAL NO.CORRECTION
T:APPLICATION CORRECTION Z:REMARKS CHANGE

February 07, 2009

HONDA POWER PRODUCTS

PARTS CATALOGUE NEWS

Honda Motor Co., Ltd. Service Division

Printed in Japan

CODE NO.	13Z1C402
PARTS CATALOGUE NEWS	GX390T1
NEWS NO.	002

(THAILAND-KD)

GX390T1-ES2,ES3,QAPW,QBE1,QHB1,VMQ3,VMT2,VMT3,VSB4, VSB5,VS4 and VS6 types sales information

NOTE: This Parts Catalogue News explains only the parts of the different model that are produced to conform to addition of the GX390T1-ES2,ES3,QAPW,QBE1,QHB1,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4 and VS6 types. As for the parts not listed on this Parts Catalogue News, use the parts of the GX390T1-QXK and VXK types.

・Models, parts catalogue codes and applicable serial numbers

Model	Type		Parts catalogue type	Applicable engine serial No.	Applicable carburetor identification No.
GX390T1	VXK	Base type	VXK	GCAET-1000001~	BE85M A
	ES2	Additional type	ES2		BE87K A
	ES3		ES3		
	VMQ3		VMQ3		BE87L A
	VMT2		VMT2		
	VMT3		VMT3		
	VSB4		VSB4		
	VSB5		VSB5		
	VS4		VS4		BE87K A
	VS6		VS6		
	QXK	Base type	QXK		BE85K A
	QAPW	Additional type	QAPW		BE85Z A
	QBE1		QBE1		BE85N A
	QHB1		QHB1		

BOOKNo.:13Z1C402

・Features of each type


		Base type	Additional type								
Specifications	Model	GX390T1									
	Type	VXK	ES2	ES3	VMQ3	VMT2	VMT3	VSB4	VSB5	VS4	VS6
Crankshaft	30mmØ Spline										
	25.4mmØ Spline										
	25.4mmØ Straight										
	25mmØ Straight										
	5/16" Tapered	●			●			●	●	●	●
	M10 Tapered		●	●		●	●				
Air cleaner	Silent	●									
	Oil bath										
	Boat										
	Standard										
	Generator		●	●	●	●	●	●	●	●	●
Muffler		●	●	●	●	●	●	●	●	●	●
Muffler cover											
Spark arrester											
Fuel tank		●									
Oil alert		●	●	●	●	●	●	●	●	●	●
Starter motor		●				●	●		●		●
Control box		●				●	●				
Reduction											

Specifications		Model: GX390T1 — Type: Base type QXK	Additional type QAPW	Additional type QBE1	Additional type QHB1
Crankshaft	30mmØ Spline				
	25.4mmØ Spline				
	25.4mmØ Straight	●	●	●	●
	25mmØ Straight				
	5/16" Tapered				
	M10 Tapered				
Air cleaner	Silent	●			
	Oil bath			●	●
	Boat				
	Standard		●		
	Generator				
Muffler		●	●	●	●
Muffler cover					(●)
Spark arrester			(●)	(●)	(●)
Fuel tank		●	●	●	●
Oil alert		●	●		
Starter motor				●	
Control box				●	
Reduction					

BOOKNo.:13Z1C402

Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX 390 T1	Base Part No.	Parts catalogue code

E-2 CYLINDER HEAD

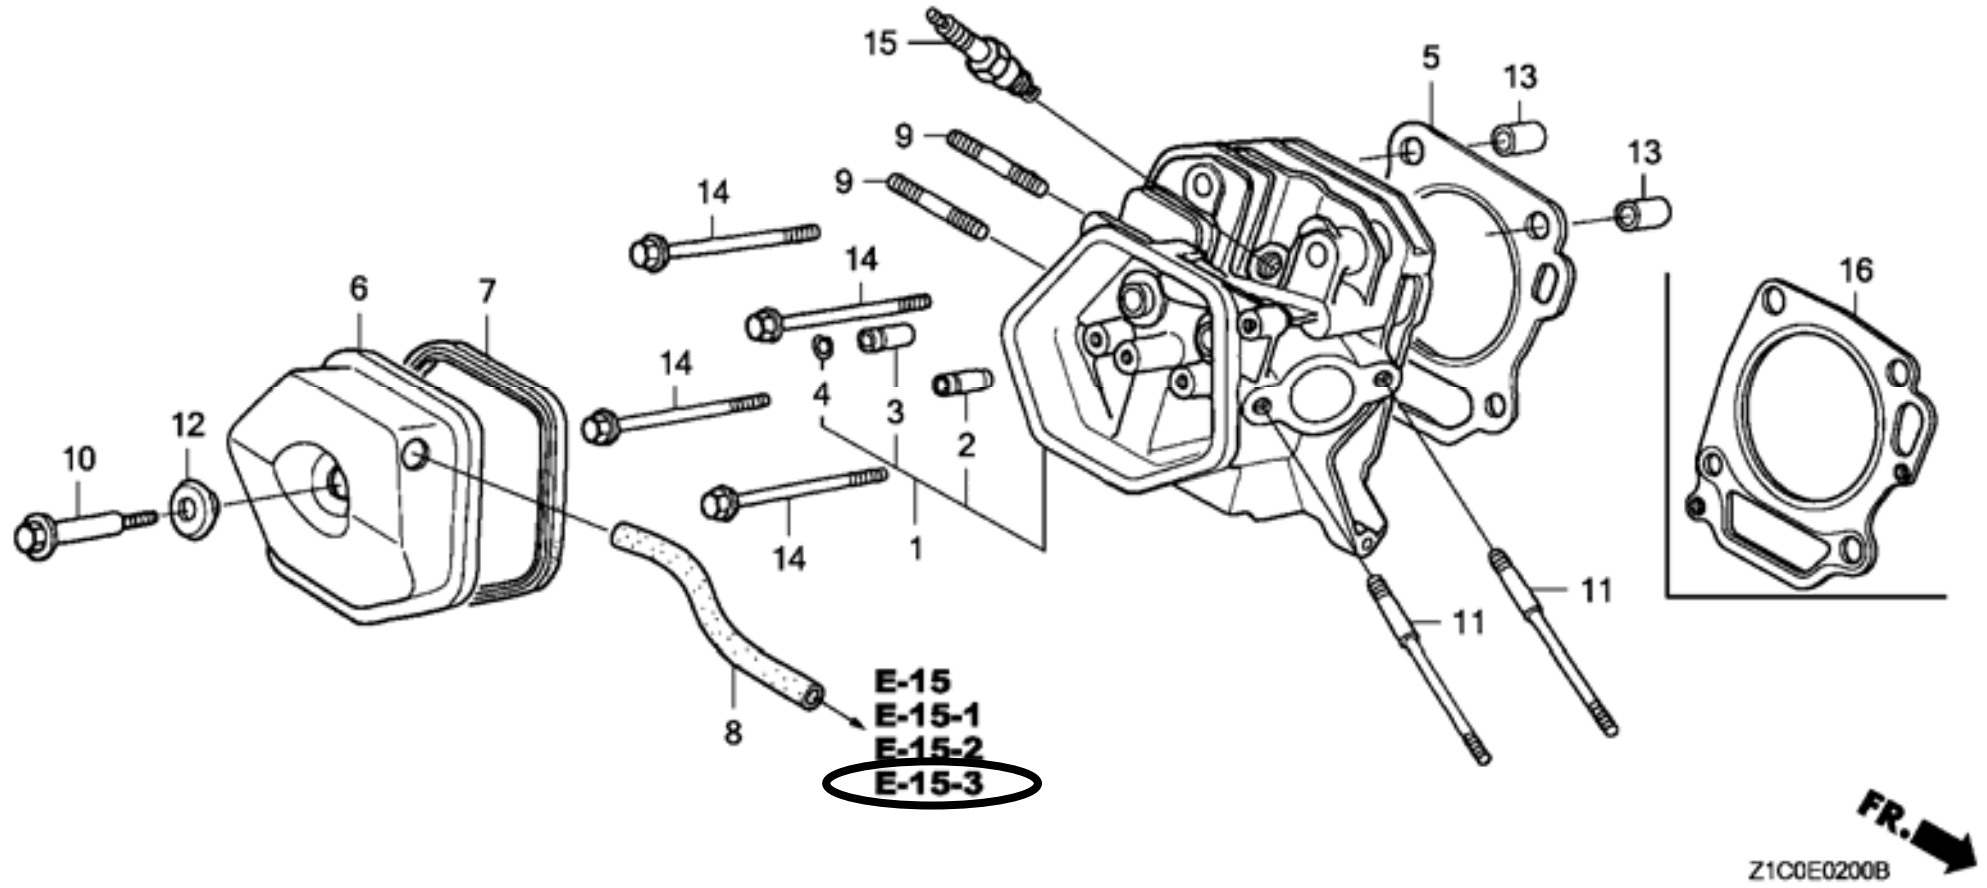


Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX 390 T1	Base Part No.	Parts catalogue code
E-2	5	12251-Z1C-801	GASKET, CYLINDER HEAD (THAI LEAKLESS)	1	12251-ZF6-W00	
	8		TUBE, 11X105(95005-11001-30M)	0	95005-11105-30	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	11	90042-ZE3-700	BOLT, STUD, 8X106	2	90042-ZE8-000	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	15	98079-55841	PLUG, SPARK (BP5ES)(NGK)	1	98079-55876	VSB4,VSB5
		98079-55854	PLUG, SPARK (W16EP-U)(DENSO) .	1	98079-56876	VSB4,VSB5
		98079-55855	PLUG, SPARK (W16EPR-U)(DENSO)	1	98079-56876	ES2,ES3,VMQ3,VMT2,VMT3,VS4,VS6
		98079-55876	PLUG, SPARK (BPR5ES)	1	98079-55876	ES2,ES3,VMQ3,VMT2,VMT3,VS4,VS6

Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX 390 T1	Base Part No.	Parts catalogue code

E-3 CYLINDER BARREL

Ref. No.	LON	(Relative ref. Number) Description	FRT
17	6111E5	SUB HARNESS, OIL LEVEL SWITCH	0.1

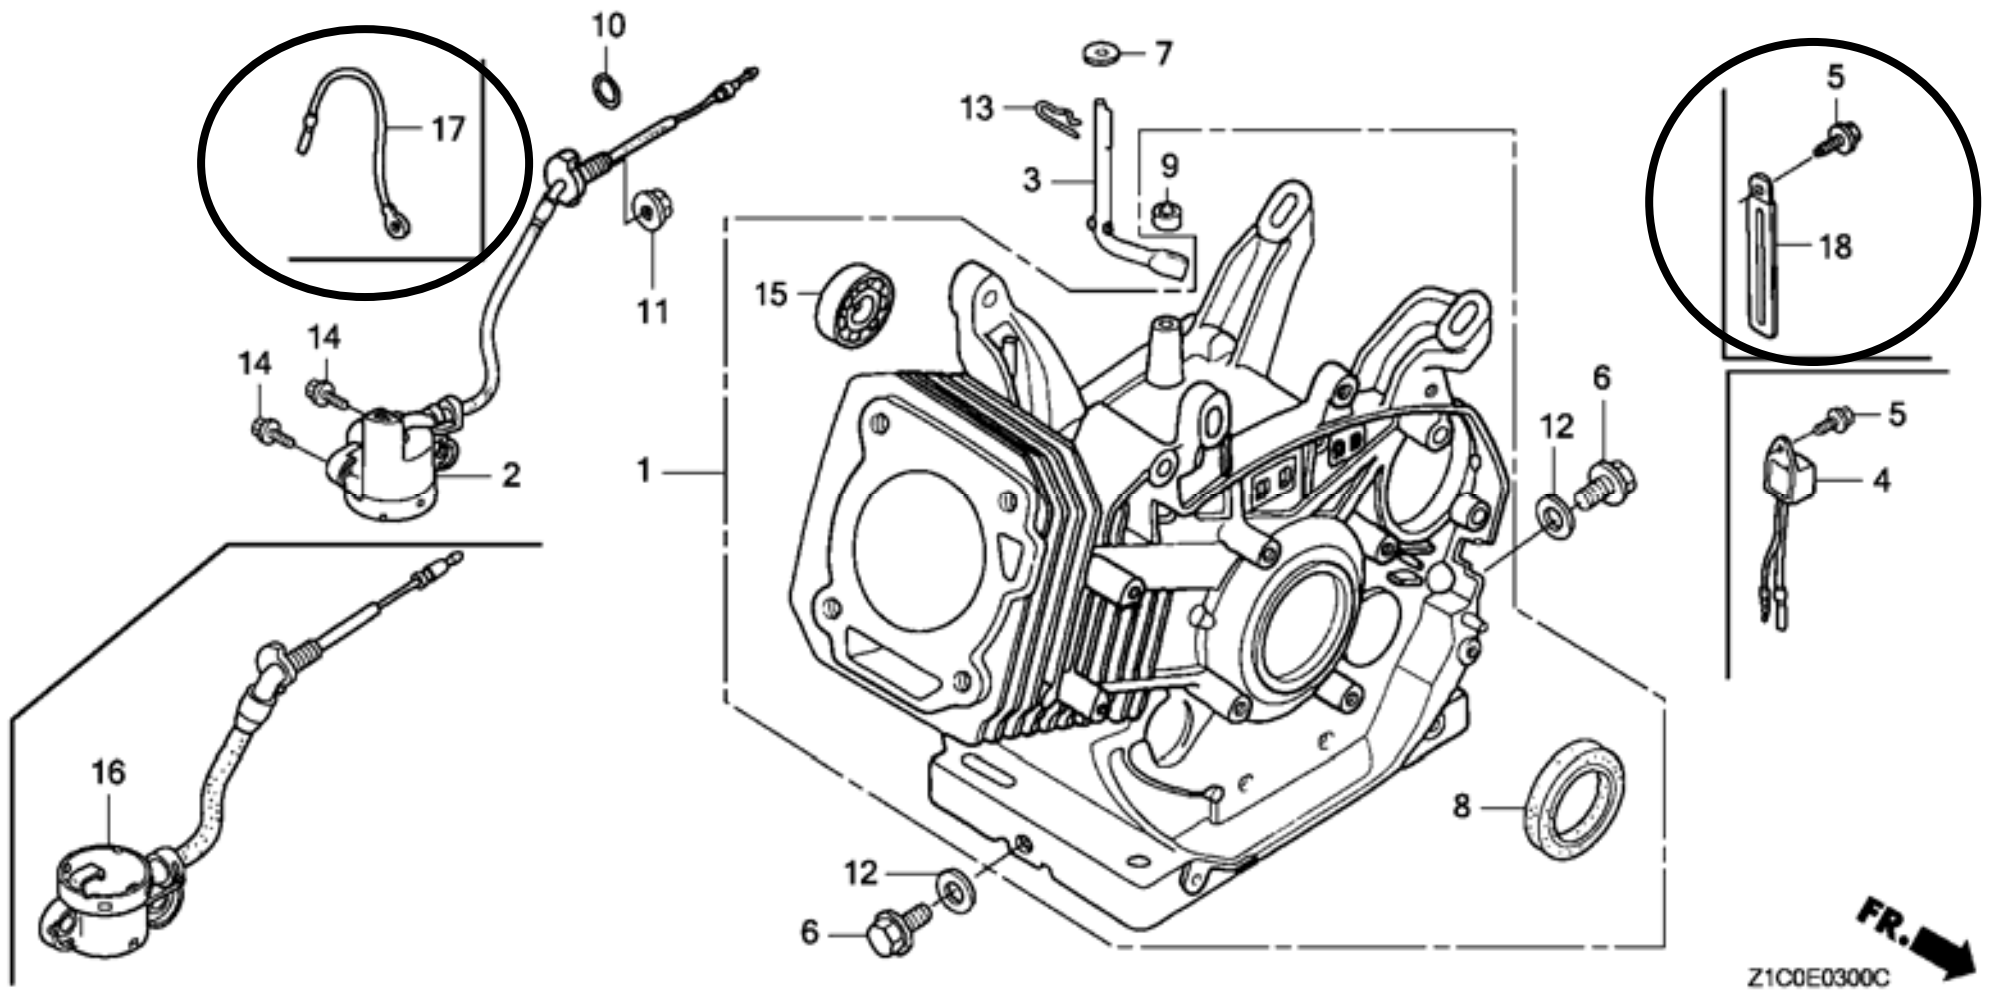

Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX 390 T1	Base Part No.	Parts catalogue code
E-3	1	12000-Z1C-406	BARREL ASSY., CYLINDER	1	12000-Z1C-407	QHB1
		12000-Z1C-407	....	1	12000-Z1C-405	ES2, ES3, VMQ3, VSB4, VS4
		12000-Z1C-408	....	1	12000-Z1C-407	QBE1
	2	15510-ZE2-053	SWITCH ASSY., OIL LEVEL	1		VMT2, VMT3
	4		ALERT UNIT, OIL	0	34150-ZH7-003	QBE1, QHB1
		34150-ZH7-013	....	1		ES2, ES3, VMQ3, VSB4, VSB5, VS4, VS6
		34150-ZH7-013	....	1	34150-ZH7-003	QAPW
	5		BOLT, FLANGE, 6X12(CT200)	0	90013-883-000	QBE1, QHB1
		90013-883-000	....	1		ES2, ES3, VMQ3, VSB4, VS4
				2		VSB5, VS6
	10		O-RING, 14MM(NOK)	0	91353-671-004	QBE1, QHB1
	11		NUT, FLANGE, 10MM	0	94050-10000	QBE1, QHB1


BOOKNo.:13Z1C402

Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX 390 T1	Base Part No.	Parts catalogue code
	14		BOLT, FLANGE, 6X12	0	95701-06012-00	QBE1,QHB1
	16		SWITCH ASSY., OIL LEVEL	0	35480-ZF6-003	QBE1,QHB1,VMT2,VMT3
	17	31161-ZE2-000	CORD, EARTH	1		ES2,ES3,VSB4,VSB5,VS4,VS6
	18	91406-166-000	CLIP, WIRE	1		VSB5,VS6
E-6	1		COVER ASSY., CRANKCASE	0	11300-Z1C-600	ES2,ES3,VMT2,VMT3
		11300-Z8W-800	COVER ASSY., CRANKCASE (S-TYPE)	1	11300-Z1C-600	VS4,VS6
	2		PACKING, CASE COVER	0	11381-ZE3-801	ES2,ES3,VMT2,VMT3
	3		CAP ASSY., OIL FILLER	0	15600-Z0T-820	ES2,ES3,VMT2,VMT3
	4		CAP ASSY., OIL FILLER	0	15600-Z1C-000	ES2,ES3,VMT2,VMT3
	5		PACKING, OIL FILLER CAP	0	15625-Z0T-800	ES2,ES3,VMT2,VMT3
	6		GOVERNOR ASSY.	0	16510-ZE3-000	ES2,ES3,VMT2,VMT3
	7		SLIDER, GOVERNOR	0	16531-Z0A-000	ES2,ES3,VMT2,VMT3
	8		CLIP, GOVERNOR HOLDER	0	90602-ZE1-000	ES2,ES3,VMT2,VMT3
	9		DOWEL PIN, 8X12	0	90701-HC4-000	ES2,ES3,VMT2,VMT3
	10		OIL SEAL, 35X52X8	0	91201-Z1C-003	ES2,ES3,VMT2,VMT3
	11		WASHER, PLAIN, 6MM	0	94101-06800	ES2,ES3,VMT2,VMT3
	12		BOLT, FLANGE, 8X40	0	95701-08040-00	ES2,ES3,VMT2,VMT3
	13		BEARING, RADIAL BALL, 6202 ...	0	96100-62020-00	ES2,ES3,VMT2,VMT3
	14		BEARING, RADIAL BALL, 6207 ...	0	96100-62070-00	ES2,ES3,VMT2,VMT3

Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX 390 T1	Base Part No.	Parts catalogue code

E-6-2 CRANKCASE COVER (3)

Ref. No.	LON	(Relative ref. Number) Description	FRT
1	1101G0	COVER, CRANKCASE(A) ··········	0.3
2	4141J5	COVER, DUCT ·················	0.1
3	1101F9	PACKING, CRANKCASE COVER(A) ··	0.3
5	1161C4	GOVERNOR ASSEMBLY ············	0.3
7		(6,8)	
	1161C6	HOLDER, GOVERNOR WEIGHT(A) ···	0.3
9	1161B6	SLIDER, GOVERNOR ·············	0.3
17	1101J5	BEARING, BALANCER WEIGHT(B) :REAR ·······················	0.4
18	1101G4	BEARING, CRANKSHAFT(A) :REAR ·	0.4

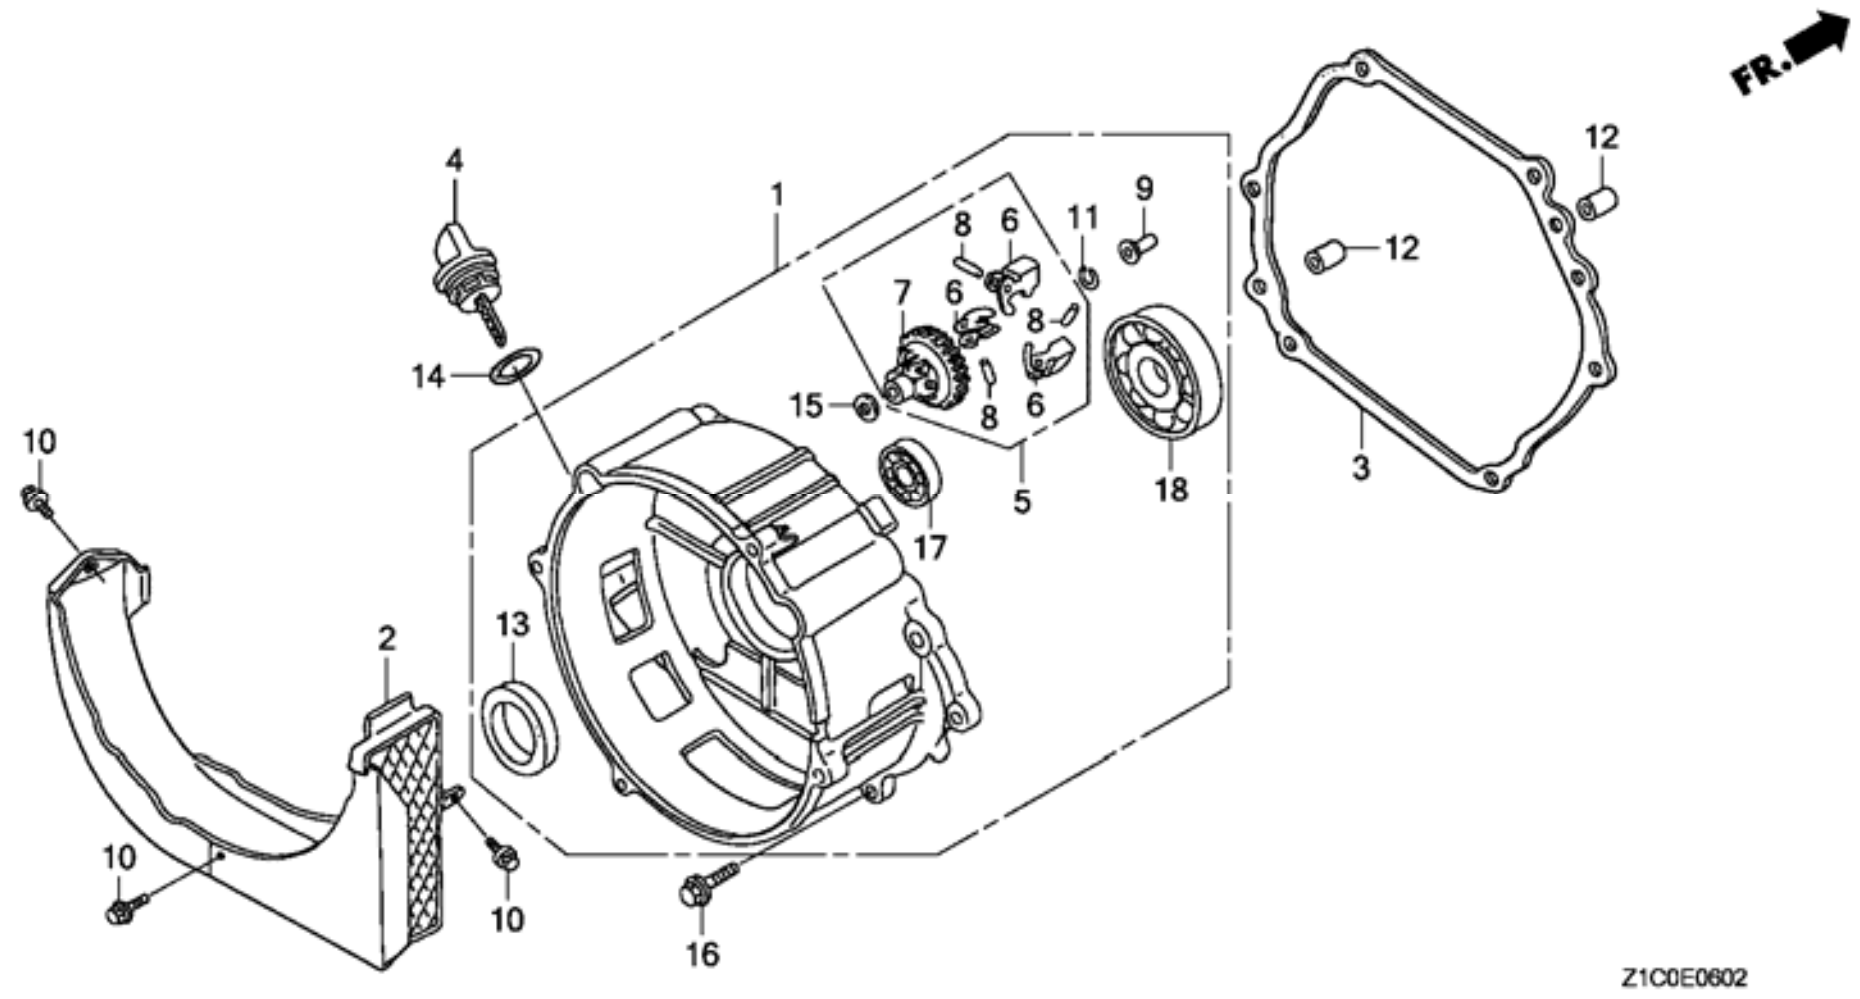


Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX 390 T1	Base Part No.	Parts catalogue code
E-6-2	1	11300-Z8T-700	COVER ASSY., CRANKCASE (E-TYPE)	1		ES2,ES3,VMT2,VMT3
	2	11315-ZE3-700	COVER, DUCT	1		VMT2,VMT3
	3	11381-ZE3-801	PACKING, CASE COVER	1		ES2,ES3,VMT2,VMT3
	4	15620-ZE2-700	CAP, OIL FILLER	1		ES2,ES3,VMT2,VMT3
	5	16510-ZE3-000	GOVERNOR ASSY.	1		ES2,ES3,VMT2,VMT3
	6	16511-ZE8-000	WEIGHT, GOVERNOR	3		ES2,ES3,VMT2,VMT3
	7	16512-ZE3-000	HOLDER, GOVERNOR WEIGHT	1		ES2,ES3,VMT2,VMT3
	8	16513-ZE2-000	PIN, GOVERNOR WEIGHT	3		ES2,ES3,VMT2,VMT3
	9	16531-Z0A-000	SLIDER, GOVERNOR	1		ES2,ES3,VMT2,VMT3
	10	90019-883-000	BOLT, FLANGE, 5X10	3		VMT2,VMT3
	11	90602-ZE1-000	CLIP, GOVERNOR HOLDER	1		ES2,ES3,VMT2,VMT3

BOOKNo.:13Z1C402

Block No.	Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Base Part No.	Parts catalogue code
	12	90701-HC4-000	DOWEL PIN, 8X12	2		ES2, ES3, VMT2, VMT3
	13	91201-Z1C-003	OIL SEAL, 35X52X8	1		ES2, ES3, VMT2, VMT3
	14	91301-805-000	O-RING, 26X2.7	1		ES2, ES3, VMT2, VMT3
	15	94101-06800	WASHER, PLAIN, 6MM	1		ES2, ES3, VMT2, VMT3
	16	95701-08040-00	BOLT, FLANGE, 8X40	7		ES2, ES3, VMT2, VMT3
	17	96100-62020-00	BEARING, RADIAL BALL, 6202 ...	1		ES2, ES3, VMT2, VMT3
	18	96100-62070-00	BEARING, RADIAL BALL, 6207 ...	1		ES2, ES3, VMT2, VMT3

E-7 CRANKSHAFT

Ref. No.	LON	(Relative ref. Number) Description	FRT
1	1101F0	(2,3,4,5,11) CRANKSHAFT	1.1

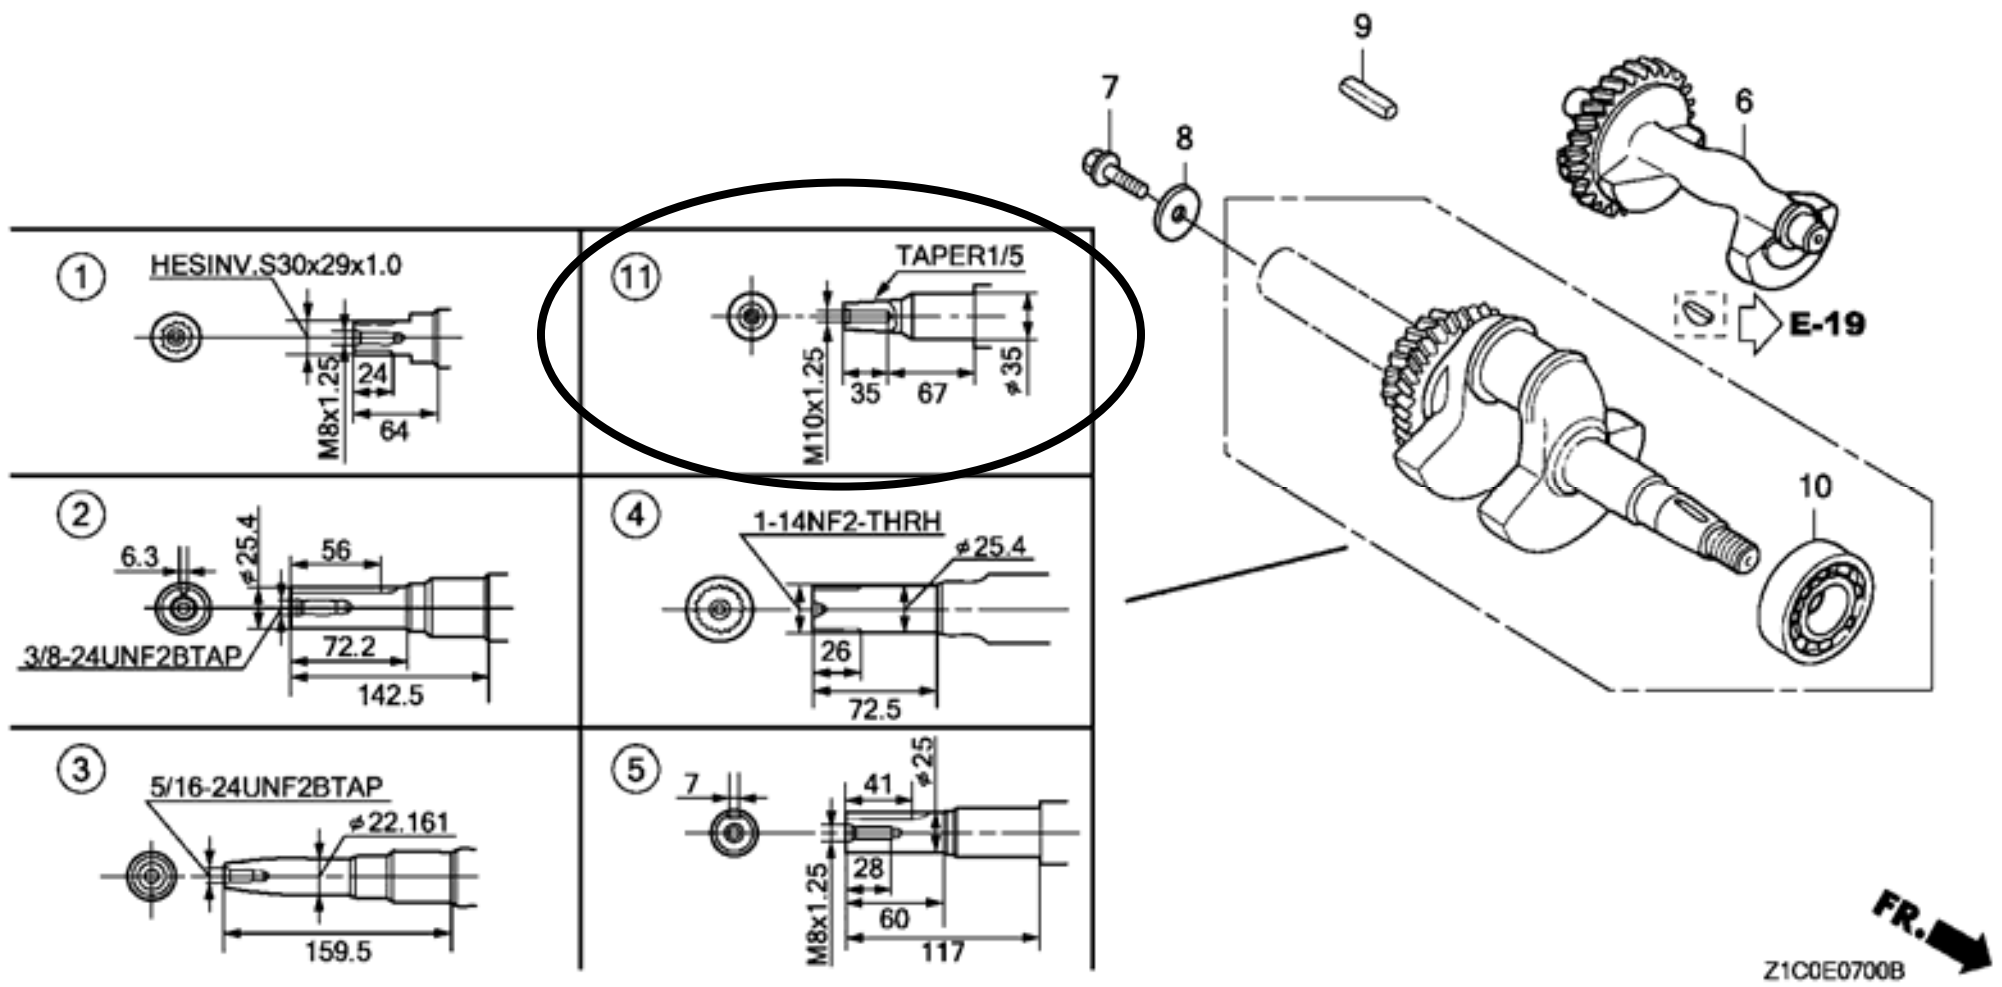

Block No.	Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Base Part No.	Parts catalogue code
E-7	3		CRANKSHAFT COMP.	0	13310-ZF6-W42	ES2, ES3, VMT2, VMT3
	9		KEY, 6.3X6.3X43	0	90745-ZE2-600	QBE1
		90741-889-810	KEY, 7X7X33(YELLOW)	(1)	90745-ZE2-600	QHB1
	11	13310-ZF6-D42	CRANKSHAFT COMP.	1		ES2, ES3, VMT2, VMT3

BOOKNo.:13Z1C402


Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX 390 T1	Base Part No.	Parts catalogue code
E-8	1		RING SET, PISTON (STD.) (TEIKOKU)	0	13010-Z5R-004	ES2,VMT2
			RING SET, PISTON (0.25) (TEIKOKU)	(0)	13011-Z5R-004	ES2,VMT2
			RING SET, PISTON (0.50) (TEIKOKU)	(0)	13012-Z5R-004	ES2,VMT2
			RING SET, PISTON (0.50)(RIKEN)	(0)	13012-Z5T-003	ES3,VMQ3,VMT3,VSB4,VSB5,VS4,VS6
			RING SET, PISTON (0.75) (TEIKOKU)	(0)	13013-Z5R-004	ES2,VMT2
			RING SET, PISTON (0.75)(RIKEN)	(0)	13013-Z5T-003	ES3,VMQ3,VMT3,VSB4,VSB5,VS4,VS6
	2	13101-ZF6-W01	PISTON (STD.)	1	13101-Z5T-000	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
		13102-ZF6-W01	PISTON (0.25)	(1)	13102-Z5T-000	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
		13103-ZF6-W01	PISTON (0.50)	(1)	13103-Z5T-000	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
		13104-ZF6-W01	PISTON (0.75)	(1)	13104-Z5T-000	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	4	13200-ZE3-315	ROD ASSY., CONNECTING (0.25 UNDER SIZE)	(1)	13200-Z1C-305	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
E-9	9	14721-ZE3-810	VALVE, EX. (STELLITE)	1	14721-ZE3-000	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	11	14771-Z8S-000	RETAINER, IN. VALVE SPRING ...	1	14771-ZE2-000	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	12	14773-Z8S-000	RETAINER, EX. VALVE SPRING ...	1	14773-ZE2-000	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	15	14791-Z1D-000	GUIDE, PUSH ROD	1	14791-ZE2-010	QAPW,QBE1,QHB1
E-11	1	28400-ZE3-W01ZB	STARTER ASSY., RECOIL *NH1*...................BLACK	1		ES2,ES3,QAPW
		28400-ZE3-W01ZH	*NH105*...MAT BLACK (#15-#20)	1	28400-ZE3-W01ZP	VS4,VS6
	2	28410-ZE3-W01ZB	CASE COMP., RECOIL STARTER *NH1*...................BLACK	1		ES2,ES3,QAPW
		28410-ZE3-W01ZH	*NH105*...MAT BLACK (#15-#20)	1	28410-ZE3-W01ZP	VS4,VS6

BOOKNo.:13Z1C402

Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX 390 T1	Base Part No.	Parts catalogue code

E-12 FAN COVER (1)

Ref. No.	LON	(Relative ref. Number) Description	FRT
4	6151D9	(8) SWITCH, ENGINE STOP ··········	0.2

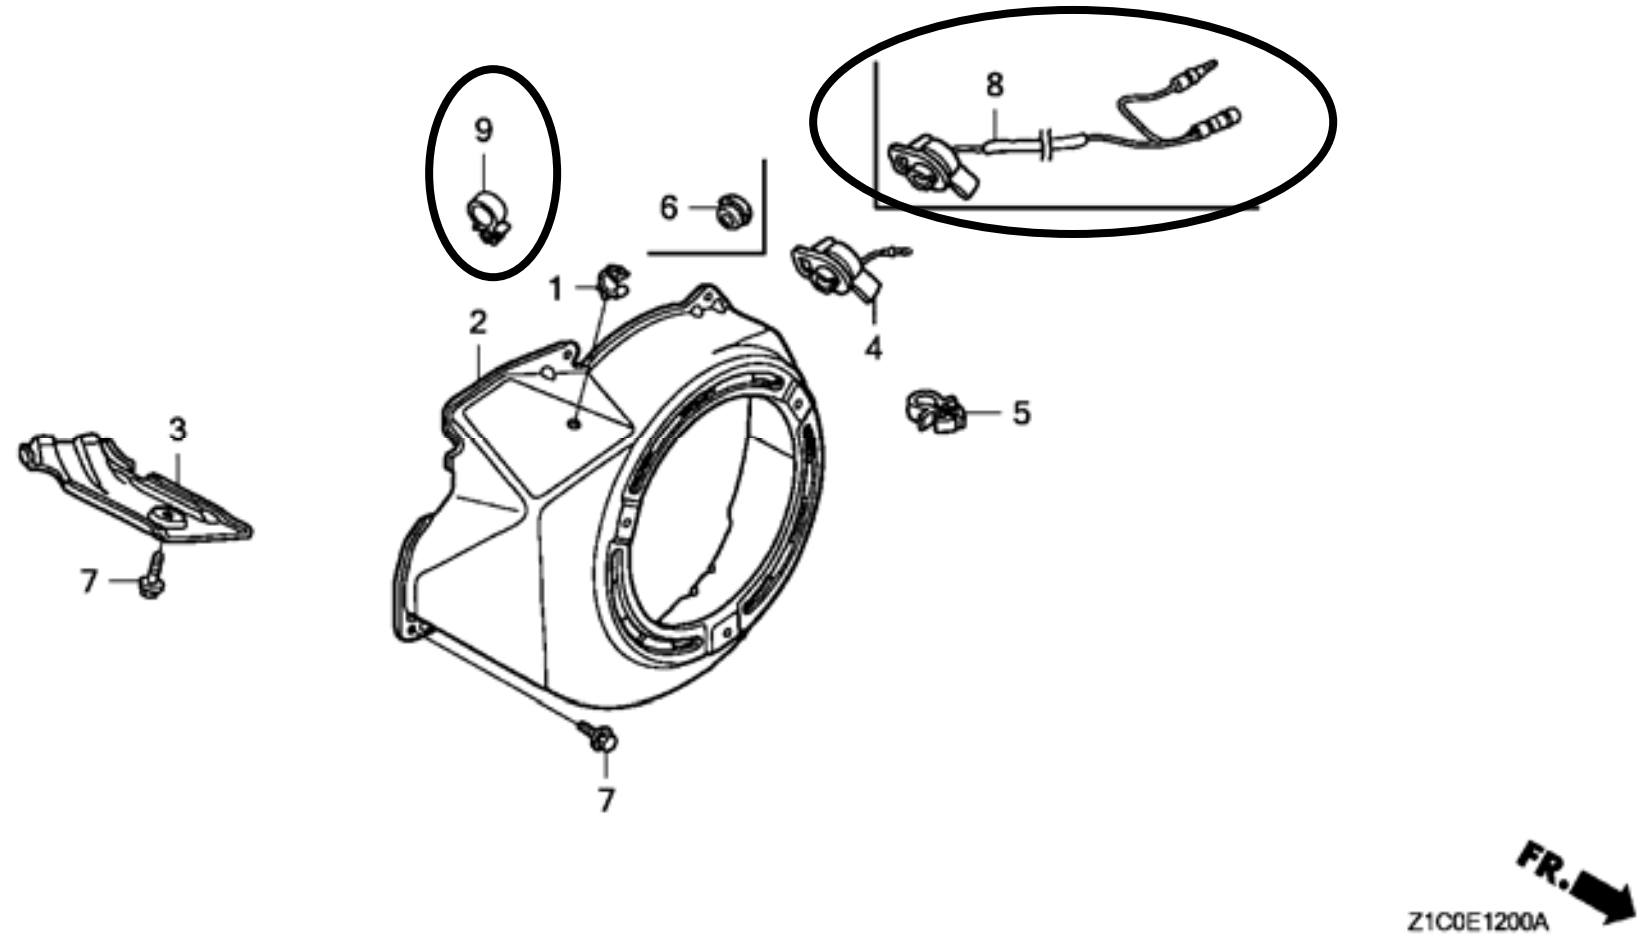

Block No.	Ref. No.	Part No.	Description	Reqd.QTY	Base Part No.	Parts catalogue code
E-12	1		CLIP, TUBE	0	16731-ZE2-003	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	2	19610-ZE3-010ZB	COVER COMP., FAN *NH1*..................BLACK	1		QAPW
		19610-ZE3-700ZB	*NH1*..................BLACK	1	19610-ZE3-010ZL	ES2,ES3
		19610-ZE3-700ZK	*R280*.............POWER RED	1		ES2,ES3
		19610-ZE3-700ZK	*R280*.............POWER RED	1	19610-ZE3-010ZL	VMQ3,VMT2,VMT3,VSB4,VSB5
		19610-ZE3-700ZL	*NH105*...MAT BLACK (#15-#20)	1	19610-ZE3-010ZL	VS4,VS6
	4		SWITCH ASSY., ENGINE STOP	0	36100-ZF6-P81	QAPW,QBE1,QHB1
	5		HOLDER, STOP SWITCH CORD	0	36103-ZE1-000	VSB5,VS6
		36103-ZE1-000	....	1		QBE1,QHB1
	6	81329-567-020	GROMMET, DRAIN HOLE	1		QBE1,QHB1
	8	36100-ZF6-P82	SWITCH ASSY., ENGINE STOP	1		QAPW

Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX 390 T1	Base Part No.	Parts catalogue code
	9	90654-SA4-003	CLIP, WIRE HARNESS, 6MM(WHITE)	2		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
E-14	1		GASKET SET (INCLUDE 16173-001-004)	0	16010-ZE2-812	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
		16010-ZE2-015	GASKET SET (EXCEPT 16173-001-004)	1	16010-ZE2-812	QBE1,QHB1
	2		VALVE SET, FLOAT	0	16011-ZA0-931	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	3		FLOAT SET	0	16013-Z1C-003	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	4		CHAMBER SET, FLOAT	0	16015-ZE8-005	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	5		SCREW SET	0	16016-ZF6-005	ES2,ES3,QAPW,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
		16016-ZE0-005	SCREW SET, PILOT	1	16016-ZF6-005	QBE1,QHB1
	6		SCREW SET, DRAIN	0	16024-ZE1-811	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	7		SCREW SET	0	16028-ZE0-005	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	8		CHOKE SET	0	16044-ZE3-W20	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	9		CARBURETOR ASSY. (BE85M A) ...	0	16100-Z1C-651	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
		16100-Z1C-W31	CARBURETOR ASSY. (BE85N A) ...	1	16100-Z1C-601	QBE1,QHB1
		16100-Z5T-801	CARBURETOR ASSY. (BE85Z A) ...	1	16100-Z1C-601	QAPW
	10		SCREW, THROTTLE STOP	0	16124-ZE0-005	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	11		NOZZLE, MAIN	0	16166-ZF6-V00	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
		16166-ZF6-W20	....	1	16166-ZF6-V00	QAPW,QBE1,QHB1
	12		COLLAR, SETTING	0	16172-ZE3-W10	
	13		PACKING, FUEL STRAINER CUP ...	0	16173-001-004	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	14		INSULATOR, CARBURETOR	0	16211-ZF6-000	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	15		SPACER COMP., CARBURETOR	0	16220-ZA0-702	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	16		PACKING, CARBURETOR	0	16221-ZF6-800	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	17		PACKING, INSULATOR	0	16223-ZE3-W00	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6

BOOKNo.:13Z1C402


Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX 390 T1	Base Part No.	Parts catalogue code
	18		LEVER COMP., CHOKE (STD.)	0	16610-ZE1-000	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	19		LEVER, COCK	0	16953-ZE1-812	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	20		PLATE, LEVER SETTING	0	16954-ZE1-812	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	21		SPRING, COCK LEVER	0	16956-ZE1-811	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	22		PACKING, FUEL COCK	0	16957-ZE1-812	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	23		CUP, FUEL STRAINER	0	16967-ZE0-811	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	24		SCREW, PAN, 3X6	0	93500-03006-1H	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	26		PIN, SPRING, 2X12	0	94305-20122	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	27		JET, MAIN, #90	(0)	99101-ZH8-0900	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
			JET, MAIN, #92	(0)	99101-ZH8-0920	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
			JET, MAIN, #95	0	99101-ZH8-0950	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
		99101-ZH8-0950	....	(1)	99101-ZH8-0880	QAPW
		99101-ZH8-0980	JET, MAIN, #98	(1)	99101-ZH8-0900	QAPW
		99101-ZH8-1000	JET, MAIN, #100	(1)	99101-ZH8-0880	QBE1,QHB1
		99101-ZH8-1000	....	1	99101-ZH8-0920	QAPW
		99101-ZH8-1020	JET, MAIN, #102	(1)	99101-ZH8-0900	QBE1,QHB1
		99101-ZH8-1050	JET, MAIN, #105	1	99101-ZH8-0920	QBE1,QHB1
	28		JET SET, PILOT, #45	0	99204-ZA0-0450	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
		99204-ZA0-0400	JET SET, PILOT, #40	1	99204-ZA0-0450	QAPW,QBE1,QHB1
	29	16016-ZH7-W01	SCREW SET, PILOT	1		QAPW

BOOKNo.:13Z1C402

Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX 390 T1	Base Part No.	Parts catalogue code

E-14-2 CARBURETOR (3)

Ref. No.	LON	(Relative ref. Number) Description	FRT
1	3111G1	GASKET SET, CARBURETOR(A) ····	0.4
2		(3)	
	3111G6	VALVE SET, FLOAT AND/OR FLOAT SET(A) ······················	0.4
4	3111A3	CHAMBER SET, FLOAT AND/OR GASKET, FLOAT CHAMBER ·······	0.4
6		(5)	
	3111D7	SCREW SET, PILOT ·············	0.2
9	3111G7	CARBURETOR(A) ················	0.3
14		(16)	
	3111G2	INSULATOR, CARBURETOR AND/OR PACKING, INSULATOR(A) ·······	0.3
15	3111G5	PACKING, CARBURETOR(A) ·······	0.3
17	6211C0	VALVE, CARBURETOR SOLENOID ···	0.2
18	8101R1	STAY, MANUAL CHOKE ···········	0.3
25	3121D9	PACKING, AIR CLEANER ·········	0.2
	3121D9A	.Replace carburetor side add ·	0.1
26	3111A7	DIAPHRAGM, CARBURETOR ········	0.3
27	8101Q2	ROD, CHOKE CONTROL ···········	0.2
30	311175	VALVE, DASHPOT CHECK ·········	0.1
46	3101F6	TUBE, FUEL ···················	0.1
51	3111G4	JET, MAIN(A) ·················	0.4

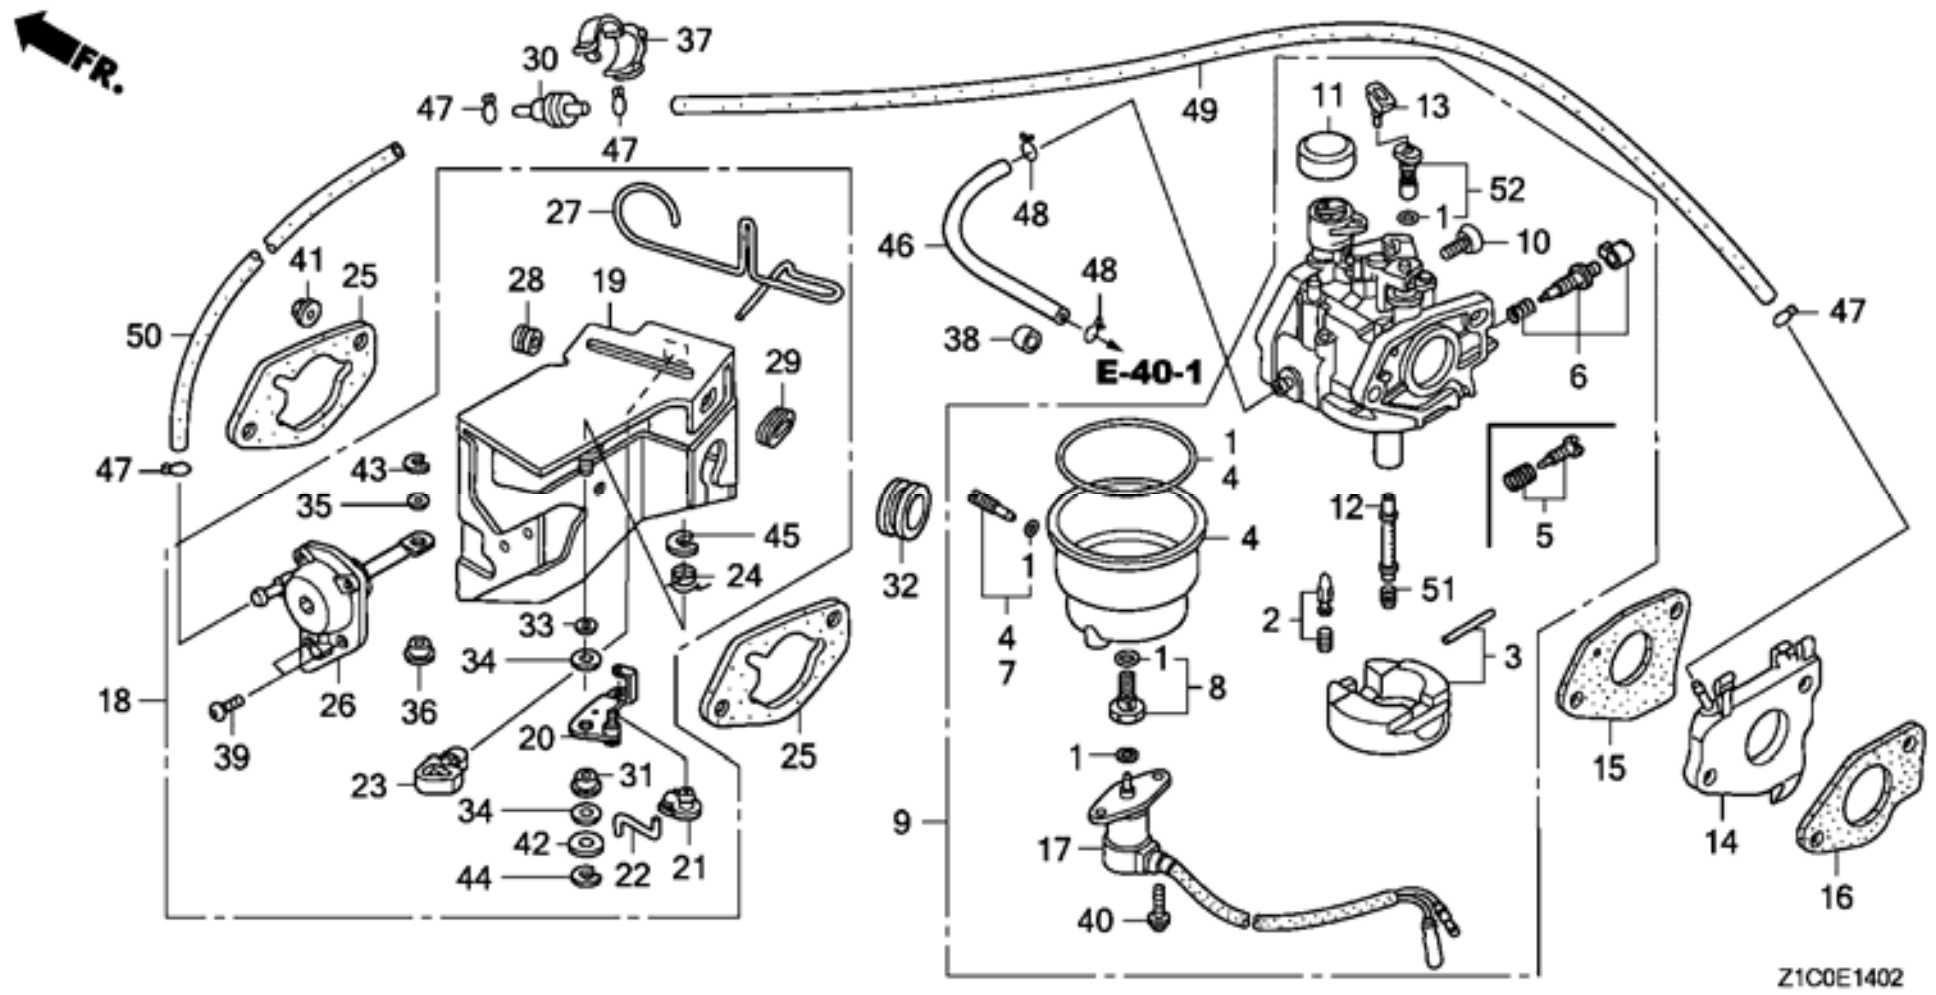

Block No.	Ref. No.	Part No.	Description	Reqd.QTY	Base Part No.	Parts catalogue code
E-14-2	1	16010-ZE3-701	GASKET SET	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	2	16011-ZA0-931	VALVE SET, FLOAT	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	3	16013-Z1C-003	FLOAT SET	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	4	16015-ZA0-931	CHAMBER SET, FLOAT	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	5	16016-ZF6-D40	SCREW SET	1		VMQ3,VMT2,VMT3,VSB4,VSB5
	6	16016-ZH8-W01	SCREW SET	1		ES2,ES3,VS4,VS6
	7	16024-124-761	SCREW SET, DRAIN	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	8	16028-ZA0-931	SCREW SET	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	9	16100-Z1C-D41	CARBURETOR ASSY. (BE87L A) ...	1		VMQ3,VMT2,VMT3,VSB4,VSB5
		16100-Z1C-741	CARBURETOR ASSY. (BE87K A) ...	1		ES2,ES3,VS4,VS6

BOOKNo.:13Z1C402

Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX 390 T1	Base Part No.	Parts catalogue code
	10	16124-ZE0-005	SCREW, THROTTLE STOP	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	11	16148-141-881	CAP, CHOKE DUST	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	12	16166-ZF6-005	NOZZLE, MAIN	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	13	16172-ZE3-W10	COLLAR, SETTING	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	14	16211-ZF6-D40	INSULATOR, CARBURETOR	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	15	16221-ZF6-800	PACKING, CARBURETOR	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	16	16223-ZE3-W00	PACKING, INSULATOR	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	17	16230-ZE3-702	VALVE ASSY., SOLENOID	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	18	16260-ZE2-723	STAY ASSY., MANUAL CHOKE	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	19	16261-ZE2-702	STAY COMP., SOLENOID	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	20	16262-ZE2-711	LEVER, CHOKE	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	21	16263-ZA0-000	JOINT, ROD	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	22	16264-ZE2-701	ROD, CHOKE	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	23	16265-ZE2-721	STOPPER, CHOKE ROD	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	24	16268-ZE2-721	SPRING, MANUAL CHOKE	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	25	16269-ZA0-800	PACKING, AIR CLEANER	2		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	26	16400-ZE2-704	DIAPHRAGM ASSY.	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	27	16611-ZE2-711	ROD, CHOKE CONTROL	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	28	16613-893-000	GROMMET, CHOKE ROD	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	29	16615-893-000	GUIDE, CHOKE ROD	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	30	36135-ZF6-D41	VALVE, DASHPOT CHECK	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	31	53149-964-003	BUSH, ARM PIVOT	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	32	88911-MJ3-000	GROMMET, FENDER	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	33	90431-ZE2-700	WASHER, CHOKE LEVER	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6

Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX 390 T1	Base Part No.	Parts catalogue code
	34	90432-ZE2-700	SEAL, CHOKE LEVER	2		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	35	90433-ZE2-700	WASHER, THRUST, 2.7X8	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	36	90434-ZE2-700	COLLAR, LEVER	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	37	90650-SD9-003	CLIP, WIRE HARNESS	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	38	90854-ZB2-000	RUBBER, FUEL (9X15X10)	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	39	93500-05012-0A	SCREW, PAN, 5X12	2		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	40	93892-05012-18	SCREW-WASHER, 5X12	2		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	41	94050-06000	NUT, FLANGE, 6MM	2		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	42	94103-05000	WASHER, PLAIN, 5MM	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	43	94540-02010	E-RING, 2MM	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	44	94540-04010	E-RING, 4MM	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	45	94540-07010	E-RING, 7MM	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	46	95001-45150-40	TUBE, FUEL, 4.5X150 (95001-45001-60M)	1		ES2,ES3,VSB4,VSB5,VS4,VS6
		95001-45250-40	TUBE, FUEL, 4.5X250 (95001-45001-60M)	1		VMQ3,VMT2,VMT3
	47	95002-02070	CLIP, TUBE (B7)	4		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	48	95002-02080	CLIP, TUBE (B8)	2		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	49	95005-35075-10	TUBE, 3.5X75(95005-35001-10M)	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	50	95005-35130-10	TUBE, 3.5X130(95005-35001-10M)	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	51	99101-ZH8-0980	JET, MAIN, #98	(1)		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
		99101-ZH8-1000	JET, MAIN, #100	(1)		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
		99101-ZH8-1020	JET, MAIN, #102	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	52	99204-ZA0-0450	JET SET, PILOT, #45	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
E-15	1		PACKING, ELBOW	0	16271-ZE2-010	


BOOKNo.:13Z1C402

Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX 390 T1	Base Part No.	Parts catalogue code
	2		ELEMENT, AIR CLEANER	0	17210-ZE3-010	
	3		FILTER, OUTER	0	17218-ZE3-000	
	4		COVER, AIR CLEANER	0	17231-ZE3-W01	
	5		GROMMET, AIR CLEANER	0	17232-891-000	
	6		NOSE, SILENCER	0	17235-ZH9-N01	
	7		COLLAR, AIR CLEANER	0	17238-ZE2-310	
	8		COLLAR B, AIR CLEANER	0	17239-ZE1-000	
	9		ELBOW COMP., AIR CLEANER	0	17410-ZH9-N00	
	10		BOLT-WASHER, 6X22	0	90009-Z1C-000	
	11		NUT, TOOL BOX SETTING	0	90325-044-000	
	12		NUT, FLANGE, 6MM	0	94050-06000	
E-15-1	1	16271-ZE2-010	PACKING, ELBOW	1		QBE1,QHB1
	2	17230-ZE3-811	COVER COMP., AIR CLEANER (OIL BATH)	1		QBE1,QHB1
	3	17238-ZE2-310	COLLAR, AIR CLEANER	2		QBE1,QHB1
	4	17239-ZE1-000	COLLAR B, AIR CLEANER	1		QBE1,QHB1
	5	17402-ZE3-810	PAN, CLEANER OIL (OIL BATH) ..	1		QBE1,QHB1
	6	17410-ZE3-010	ELBOW COMP., AIR CLEANER	1		QBE1,QHB1
	7	17420-ZE3-810	CAP COMP., AIR CLEANER	1		QBE1,QHB1
	8	90009-Z1C-000	BOLT-WASHER, 6X22	1		QBE1,QHB1
	9	90325-044-000	NUT, TOOL BOX SETTING	1		QBE1,QHB1
	10	94050-06000	NUT, FLANGE, 6MM	2		QBE1,QHB1

Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX 390 T1	Base Part No.	Parts catalogue code

E-15-3 AIR CLEANER (STANDARD)

Ref. No.	LON	(Relative ref. Number) Description	FRT
1	3121E1	PACKING, ELBOW ················	0.1
2	3121B8	ELEMENT, AIR CLEANER ········· .INCLUDES: Air cleaner element -inspection	0.1
3	3121C1	FILTER, OUTER ················· .INCLUDES: Outer filter-inspection	0.1
8	3121B4	ELBOW, AIR CLEANER ···········	0.1

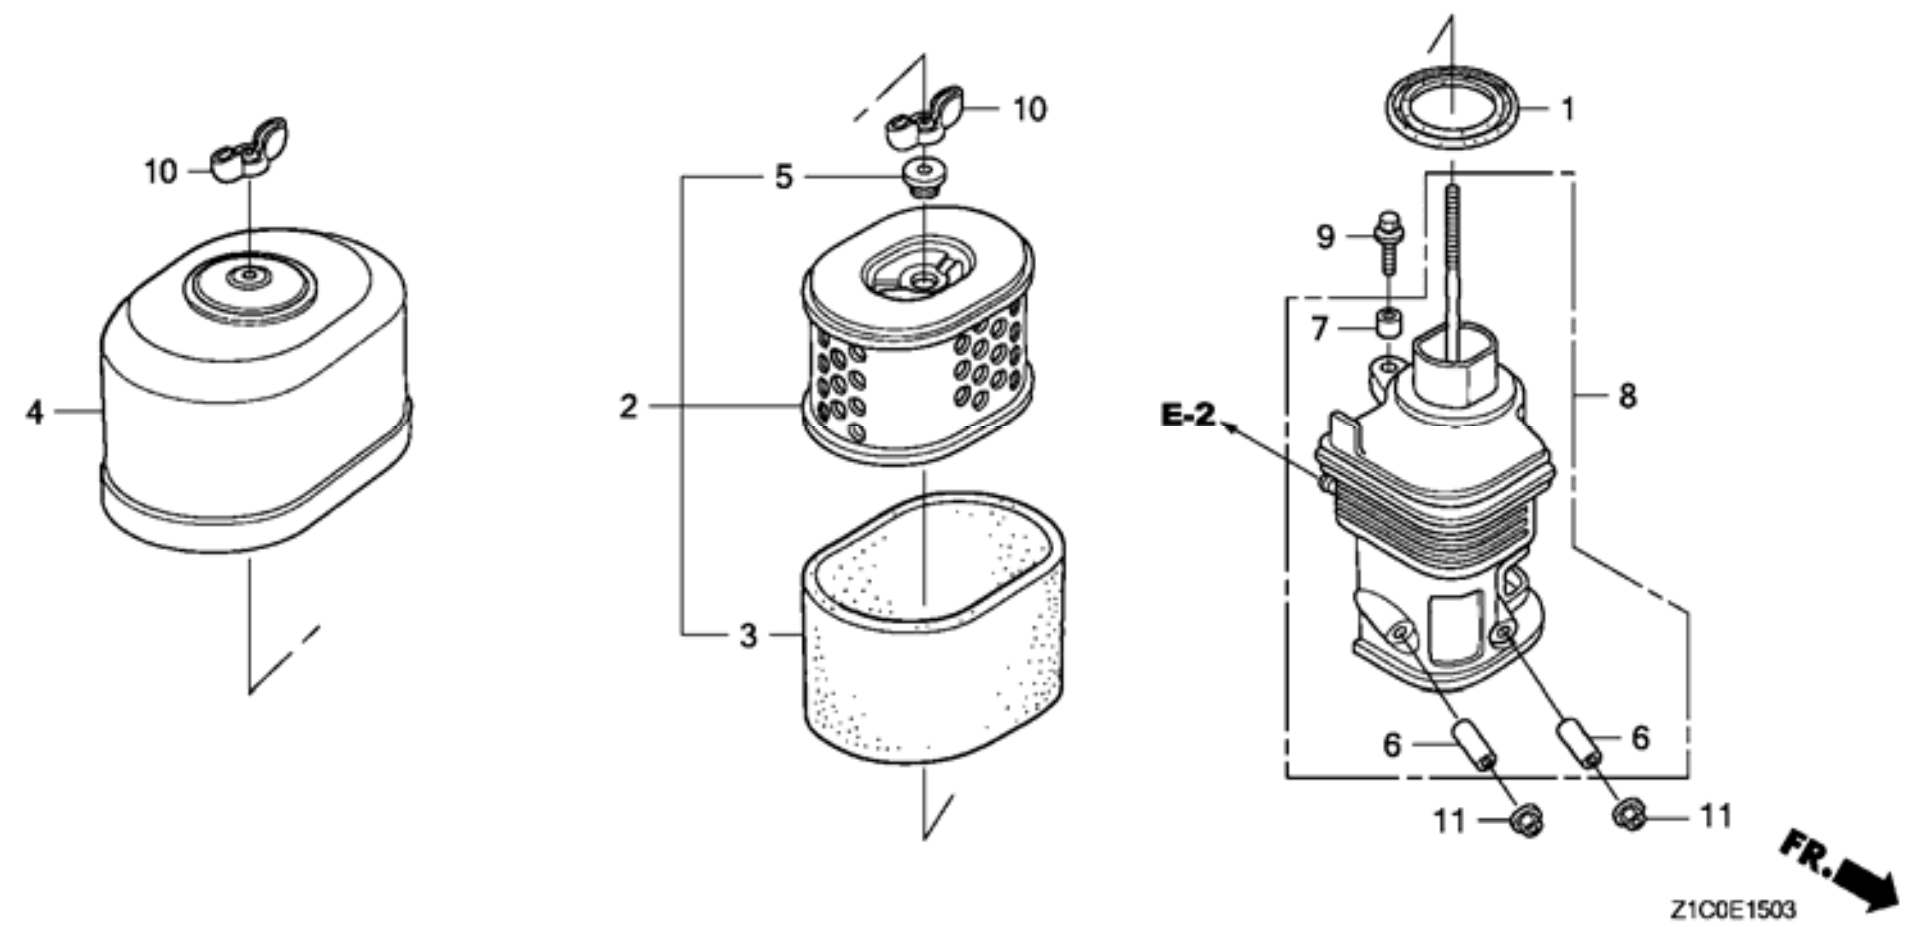


Block No.	Ref. No.	Part No.	Description	Reqd.QTY	Base Part No.	Parts catalogue code
E-15-3	1	16271-ZE2-010	PACKING, ELBOW	1		QAPW
	2	17210-ZE3-010	ELEMENT, AIR CLEANER	1		QAPW
	3	17218-ZE3-000	FILTER, OUTER	1		QAPW
	4	17230-ZE3-000	COVER, AIR CLEANER (STD.)	1		QAPW
	5	17232-891-000	GROMMET, AIR CLEANER	1		QAPW
	6	17238-ZE2-310	COLLAR, AIR CLEANER	2		QAPW
	7	17239-ZE1-000	COLLAR B, AIR CLEANER	1		QAPW
	8	17410-ZE3-010	ELBOW COMP., AIR CLEANER	1		QAPW
	9	90009-Z1C-000	BOLT-WASHER, 6X22	1		QAPW
	10	90325-044-000	NUT, TOOL BOX SETTING	2		QAPW
	11	94050-06000	NUT, FLANGE, 6MM	2		QAPW

Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX 390 T1	Base Part No.	Parts catalogue code

E-16 MUFFLER (1)


Ref. No.	LON	(Relative ref. Number) Description	FRT
4	3131C9	(32) PIPE, EXHAUST ················	0.2

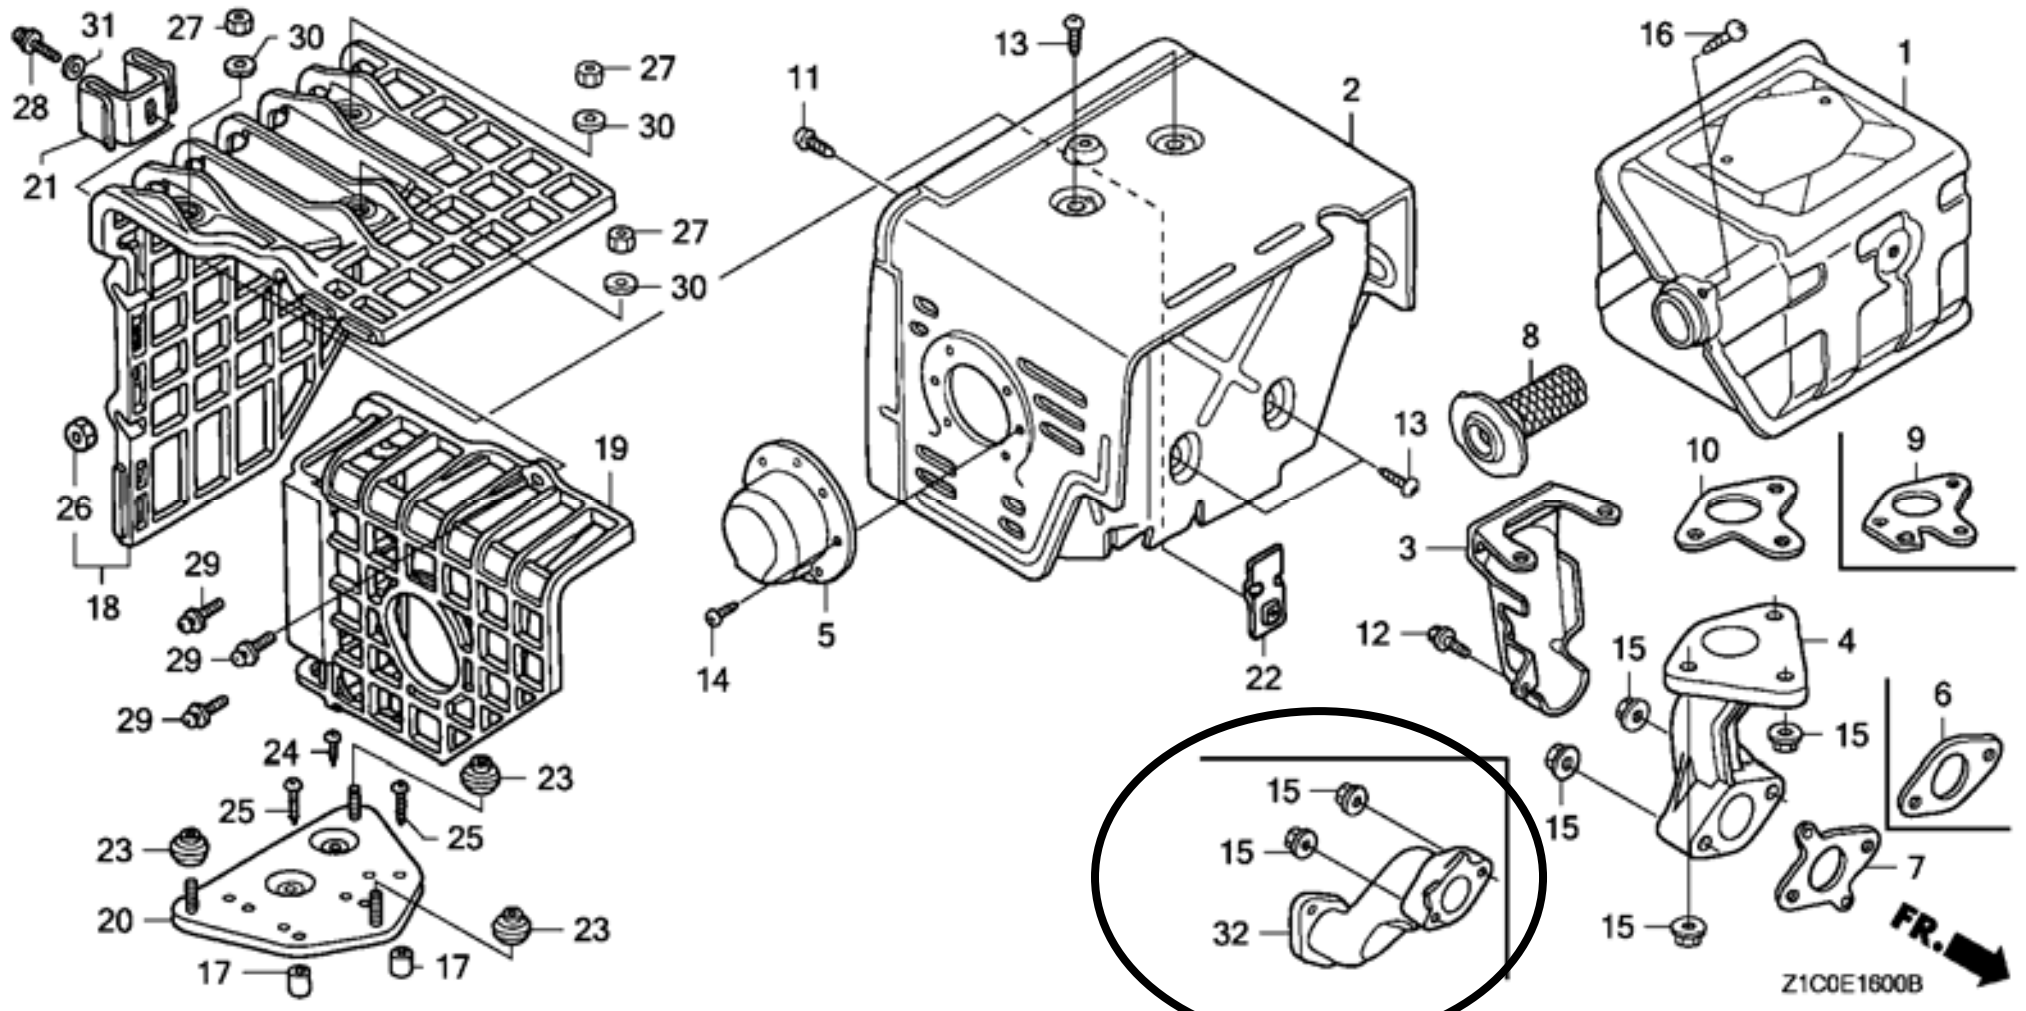

Block No.	Ref. No.	Part No.	Description	Reqd.QTY	Base Part No.	Parts catalogue code
E-16	1		MUFFLER COMP. (100DB)	0	18310-ZE2-W61	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	2		PROTECTOR COMP., MUFFLER	0	18320-ZE2-W61	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	3	18323-ZE3-W40	PROTECTOR, EX. PIPE	1		QAPW
	4		PIPE, EX.	0	18330-ZE2-W00	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	8	18355-ZE2-W00	ARRESTER, SPARK	(1)		QAPW,QBE1,QHB1
	9	18381-ZE2-W10	GASKET, MUFFLER (ARRESTER) (NIPPON LEAKLESS)	(1)		QAPW,QBE1,QHB1
	10		GASKET, MUFFLER (THAI LEAKLESS)	0	18381-Z1C-801	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	11		SCREW, TAPPING, 6X10	0	90006-ZE2-000	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	12	90013-883-000	BOLT, FLANGE, 6X12(CT200)	1		QAPW
	13		SCREW, TAPPING, 5X8	0	90050-ZE1-000	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	15	94050-08000	NUT, FLANGE, 8MM	2	94050-08000	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6

Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX 390 T1	Base Part No.	Parts catalogue code
	16	90055-ZE1-000	SCREW, TAPPING, 4X6	(1)		QAPW,QBE1,QHB1
	17	17233-896-701	COLLAR, AIR CLEANER CASE	(2)		QHB1
	18	18433-ZF6-W40	COVER COMP., MUFFLER	(1)		QHB1
	19	18434-ZF6-W40	COVER COMP., RR. MUFFLER	(1)		QHB1
	20	18436-ZH8-W40	BASE COMP., MUFFLER COVER	(1)		QHB1
	21	18437-ZF6-W40	STAY, MUFFLER COVER	(1)		ES2,ES3,QHB1,VSB4
	22	18438-ZF6-W40	PLATE, SET	(1)		ES2,ES3,QHB1,VSB4
	23	18466-ZH8-W40	SPACER, MUFFLER COVER	(3)		QHB1
	24	90050-ZE1-000	SCREW, TAPPING, 5X8	(1)		QHB1
	25	90050-ZH8-W40	SCREW, TAPPING, 5X25	(2)		QHB1
	26	90301-782-000	NUT, U, 6MM	(3)		QHB1
	27	90302-KF9-900	NUT, HEX., 5MM	(3)		QHB1
	28	93891-05012-00	SCREW-WASHER, 5X12	(1)		ES2,ES3,QHB1,VSB4
	29	93891-06020-07	SCREW-WASHER, 6X20	(3)		QHB1
	30	94103-05700	WASHER, PLAIN, 5MM	(3)		QHB1
	31	94111-05000	WASHER, SPRING, 5MM	(1)		ES2,ES3,QHB1,VSB4
	32	18330-ZE3-700	PIPE, EX.	1		VMQ3
		18330-ZE3-710	....	1		ES2,ES3,VMT2,VMT3,VSB4,VSB5,VS4,VS6

E-17 FUEL TANK

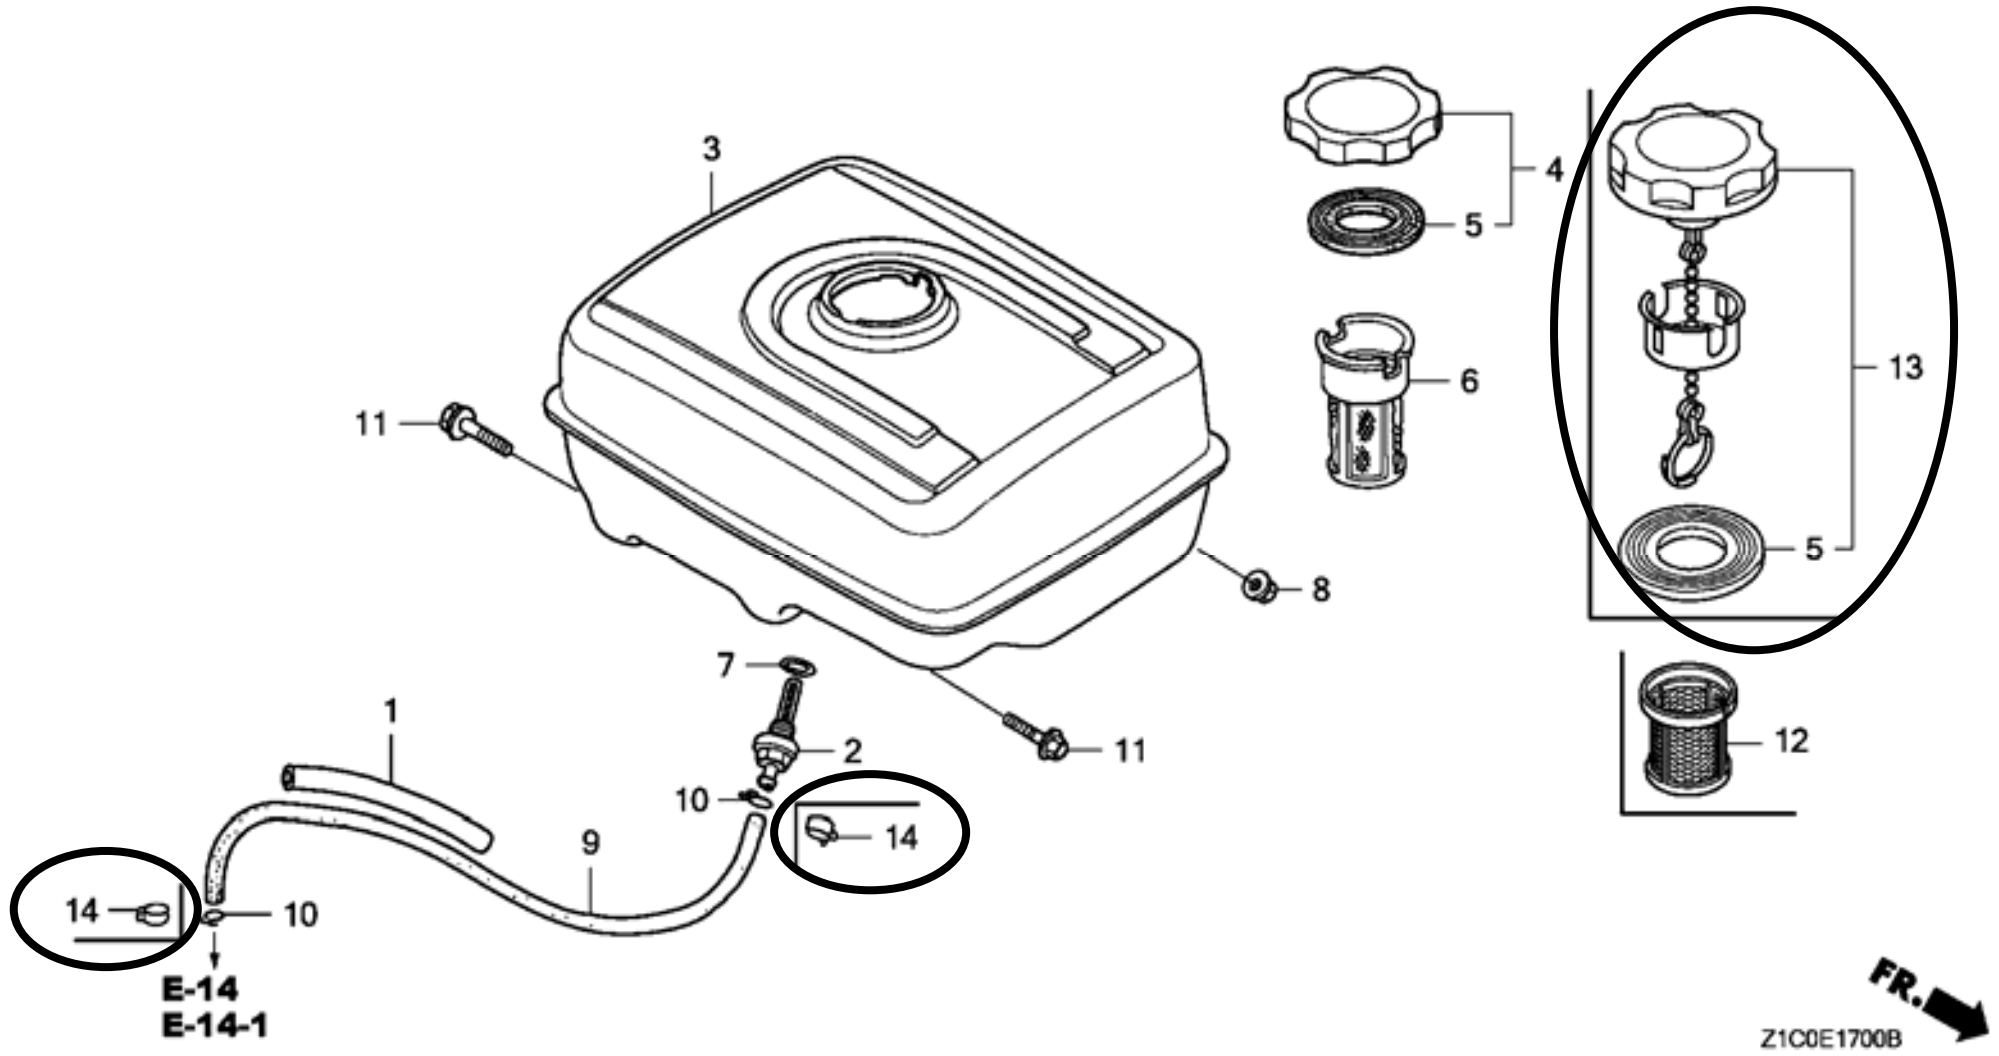

Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX 390 T1	Base Part No.	Parts catalogue code
E-17	1		RUBBER, SUPPORTER (107MM)	0	16854-ZH8-000	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	2		JOINT, FUEL TANK	0	16955-ZE1-000	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	3		TANK COMP., FUEL *NH31*.........MCKINLEY WHITE	0	17510-ZE3-030ZA	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
		17510-ZE3-030ZB	*NH1*...................BLACK	1		QAPW
	4		CAP COMP., FUEL FILLER (CHROME PLATED)	0	17620-Z0T-813	ES2,ES3,QAPW,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	5		PACKING, FUEL FILLER CAP (39X62X3)	0	17631-Z0T-801	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	7		O-RING, 14MM(NOK)	0	91353-671-004	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	8		NUT, FLANGE, 8MM	0	94050-08000	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	9		TUBE, FUEL, 4.5X235 (95001-45001-60M)	0	95001-45235-40	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
		91424-Z5L-802	TUBE, FUEL, 4.5X235(FKM)	1	95001-45235-40	QAPW,QBE1,QHB1

BOOKNo.:13Z1C402

Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX 390 T1	Base Part No.	Parts catalogue code
	10		CLIP, TUBE (B8)	0	95002-02080	
	11		BOLT, FLANGE, 8X25	0	95701-08025-00	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	12	17672-Z4H-000	FILTER, FUEL	1		QAPW
	13	17620-Z4H-020	CAP COMP., FUEL FILLER	1		QAPW
	14	95002-40800-08	CLAMP, TUBE (D8)	2		QAPW,QBE1,QHB1
E-19	2		PULLEY COMP., STARTER (SCREEN GRID)	0	28450-ZE3-W11	ES2,ES3,QAPW,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	3	28451-ZE3-W01	PULLEY, STARTER	1		ES2,ES3,QAPW,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	4		FLYWHEEL COMP.	0	31100-ZE3-701	QBE1
		31100-ZE3-701	....	1		ES2,ES3,VSB4,VS4
	5	31100-ZE3-712	FLYWHEEL COMP. (LAMP)	1		VMQ3
	6		FLYWHEEL COMP. (SEL-LAMP)	0	31100-ZE3-722	ES2,ES3,VMQ3,VSB4,VS4
		31100-ZE3-722	....	1		QBE1
	7	90201-ZE3-790	NUT, SPECIAL, 16MM	1	90201-ZE3-V00	
E-20	2		CAP ASSY., NOISE SUPPRESSOR (NICHIWA Y-EZ RTFM256)	0	30700-ZE1-013	
			CAP ASSY., NOISE SUPPRESSOR (NGK Y-EZD)	0	30700-Z1C-811	VSB4,VSB5
		30700-Z1C-801	TERMINAL ASSY., HIGH TENSION (NGK Y-EZD)	1		VSB4,VSB5
	3	31510-ZE1-003	COIL ASSY., LAMP (12V/15W) ...	1		VMQ3,VMT3
	5		CLAMPER, CORD	0	31511-ZE3-000	ES2,ES3,VSB4,VS4
		31511-ZE3-000	....	1		QBE1
	7		COIL ASSY., CHARGE (1A)	0	31630-ZE1-003	ES2,ES3,VMQ3,VSB4,VS4
		31630-ZE1-013	....	1		QBE1
		31630-ZE1-013	....	1	31630-ZE1-003	VMT2,VMT3,VSB5,VS6


Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX 390 T1	Base Part No.	Parts catalogue code
	8	36101-ZE3-800	CORD, STOP SWITCH (470MM)	1	36101-ZE2-701	ES2,ES3,VSB4,VSB5,VS4,VS6
	9	90017-883-000	BOLT, FLANGE, 6X32	2		VMQ3,VMT3
	10		BOLT, FLANGE, 6X12(CT200)	0	90013-883-000	ES2,ES3,VSB4,VS4
		90013-883-000	....	1		QBE1
	11		BOLT, FLANGE, 6X35(CT200)	0	90014-ZE6-000	ES2,ES3,VMQ3,VSB4,VS4
		90014-ZE6-000	....	2		QBE1
	13		CLIP, HARNESS	0	90684-ZA0-601	QBE1,QHB1
E-21	1		CONTACTOR ASSY.	0	31204-ZA0-003	ES2,ES3,VMQ3,VSB4,VS4
		31204-ZA0-003	....	1		QBE1
	2		ARMATURE COMP.	0	31206-ZE3-003	ES2,ES3,VMQ3,VSB4,VS4
		31206-ZE3-003	....	1		QBE1
	3		CLUTCH COMP., OVERRUNNING	0	31207-ZE3-003	ES2,ES3,VMQ3,VSB4,VS4
		31207-ZE3-003	....	1		QBE1
	4		MOTOR UNIT, STARTER	0	31210-ZE3-023	ES2,ES3,VMQ3,VSB4,VS4
		31210-ZE3-023	....	1		QBE1
	5		BRACKET, CENTER	0	31211-ZE2-003	ES2,ES3,VMQ3,VSB4,VS4
		31211-ZE2-003	....	1		QBE1
	6		BRACKET, FR.	0	31212-ZE3-003	ES2,ES3,VMQ3,VSB4,VS4
		31212-ZE3-003	....	1		QBE1
	7		GEAR, DRIVE PINION	0	31213-ZE2-003	ES2,ES3,VMQ3,VSB4,VS4
		31213-ZE2-003	....	1		QBE1
	8		BRUSH	0	31215-ZE2-003	ES2,ES3,VMQ3,VSB4,VS4
		31215-ZE2-003	....	2		QBE1
	9		YOKE COMP.	0	31218-ZE3-003	ES2,ES3,VMQ3,VSB4,VS4

Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX 390 T1	Base Part No.	Parts catalogue code
		31218-ZE3-003	....	1		QBE1
	10		SPRING, BRUSH RETURN	0	31219-ZE2-003	ES2,ES3,VMQ3,VSB4,VS4
		31219-ZE2-003	....	4		QBE1
	11		GEAR, REDUCTION	0	31222-ZE3-791	ES2,ES3,VMQ3,VSB4,VS4
		31222-ZE3-791	....	1		QBE1
	12		HOLDER, BRUSH	0	31231-ZE2-003	ES2,ES3,VMQ3,VSB4,VS4
		31231-ZE2-003	....	1		QBE1
	13		WIRE, WATER COVER	0	31232-ZE3-003	ES2,ES3,VMQ3,VSB4,VS4
		31232-ZE3-003	....	1		QBE1
	14		INSULATOR	0	31233-ZE2-003	ES2,ES3,VMQ3,VSB4,VS4
		31233-ZE2-003	....	1		QBE1
	15		BOLT-WASHER, 5X14	0	90007-ZE2-003	ES2,ES3,VMQ3,VSB4,VS4
		90007-ZE2-003	....	2		QBE1
	16		SCREW-WASHER, 4X6	0	90110-ZE2-003	ES2,ES3,VMQ3,VSB4,VS4
		90110-ZE2-003	....	1		QBE1
	17		PACKING	0	91601-ZE2-003	ES2,ES3,VMQ3,VSB4,VS4
		91601-ZE2-003	....	1		QBE1
	18		SCREW-WASHER, 5X32	0	93892-05032-18	ES2,ES3,VMQ3,VSB4,VS4
		93892-05032-18	....	4		QBE1
	19		NUT-WASHER, 6MM	0	94070-06080	ES2,ES3,VMQ3,VSB4,VS4
		94070-06080	....	2		QBE1
	20		BOLT, FLANGE, 8X35	0	95701-08035-08	ES2,ES3,VMQ3,VSB4,VS4
		95701-08035-08	....	2		QBE1

Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX 390 T1	Base Part No.	Parts catalogue code

E-22 CONTROL (1)

Ref. No.	LON	(Relative ref. Number) Description	FRT
1	1161A0	(29) ARM, GOVERNOR ················	0.2

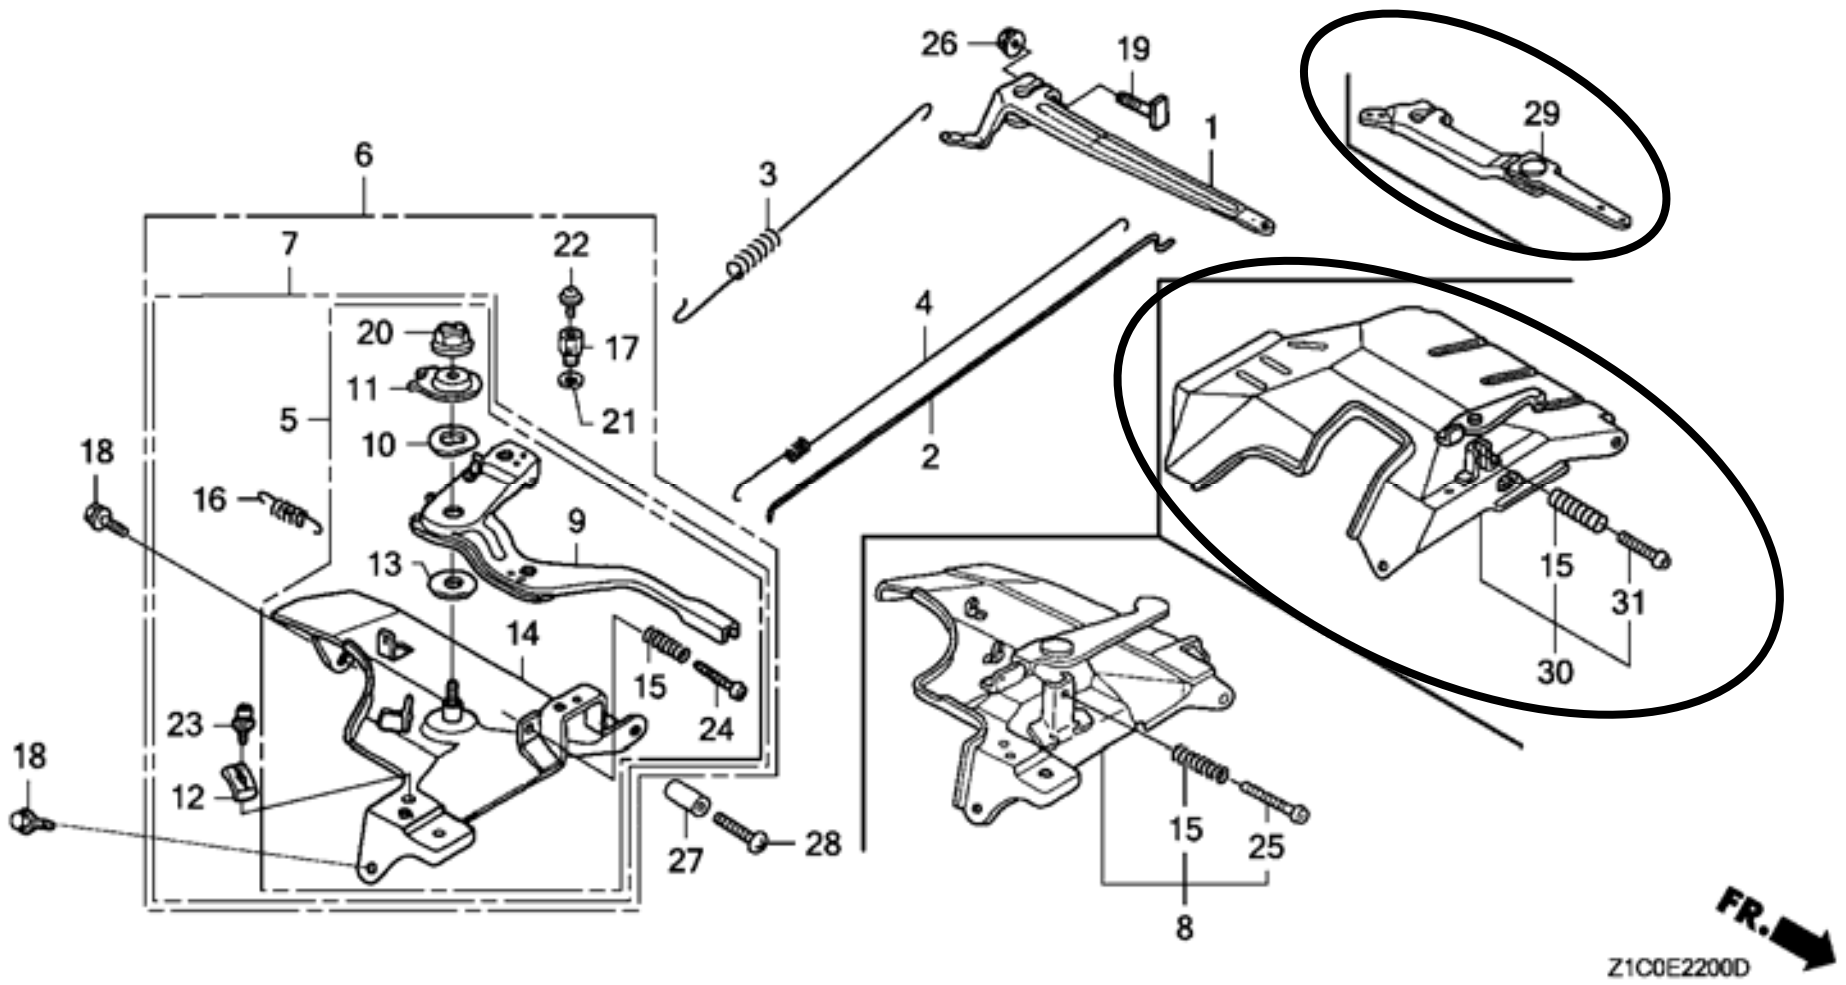


Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX 390 T1	Base Part No.	Parts catalogue code
E-22	1		ARM, GOVERNOR	0	16551-ZE3-000	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	3	16561-ZE3-000	SPRING, GOVERNOR (L=137.5MM) .	1	16561-ZF6-T21	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	4	16562-ZE3-700	SPRING, THROTTLE RETURN	1	16562-ZE3-000	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	6	16570-ZE3-W10	CONTROL ASSY. (REMOTE)	1		QBE1,QHB1
	7		CONTROL ASSY. (REMOTE)	0	16570-ZE3-W20	QBE1,QHB1
	8		CONTROL ASSY.	0	16570-ZE3-721	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	17	16594-883-010	HOLDER, WIRE	1		QBE1,QHB1
	21	90605-230-000	CIRCLIP, 5MM	1		QBE1,QHB1
	22	93500-04006-0H	SCREW, PAN, 4X6	1		QBE1,QHB1
	25		SCREW, PAN, 5X45	0	93500-05045-0A	ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	27	16599-ZG1-M10	COLLAR, STOPPER	(1)		QHB1
	28	90016-ZG9-N30	SCREW, RECESSED, 5X25	(1)		QHB1

Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX390 T1	Base Part No.	Parts catalogue code
	29	16550-ZE3-700	ARM COMP., GOVERNOR	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	30	16570-ZE3-710	CONTROL ASSY.	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	31	93500-05035-0A	SCREW, PAN, 5X35	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6

E-22-20 AUTO THROTTLE

Ref. No.	LON	(Relative ref. Number) Description	FRT
2	8101H1	LEVER, THROTTLE ··············	0.2
3	6211C5	SOLENOID, AUTO THROTTLE ······	0.3

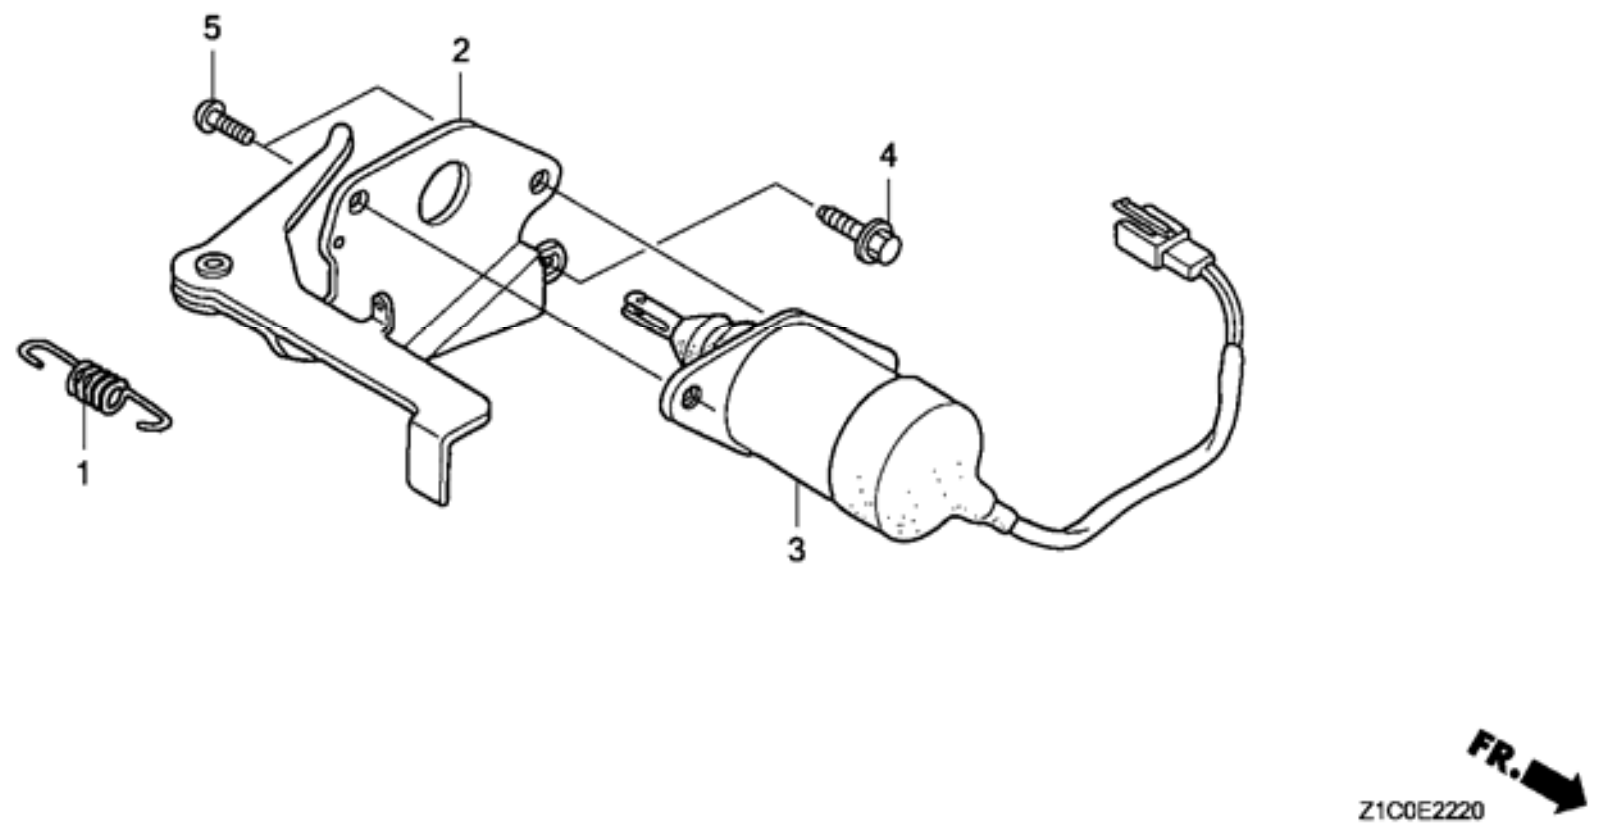

Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX390 T1	Base Part No.	Parts catalogue code
E-22-20	1	16268-893-000	SPRING, CHOKE RETURN	1		VMQ3,VMT2,VMT3
	2	17850-ZD1-E30	LEVER COMP., THROTTLE	1		VMQ3,VMT2,VMT3
	3	36160-ZB4-013	SOLENOID ASSY.	1		VMQ3,VMT2,VMT3
	4	90013-883-000	BOLT, FLANGE, 6X12(CT200)	1		VMQ3,VMT2,VMT3
	5	93500-05008-0A	SCREW, PAN, 5X8	2		VMQ3,VMT2,VMT3
E-23	1		BOX ASSY., CONTROL *R280*..............POWER RED	0	31610-ZE3-W13ZE	ES2,ES3,VMQ3,VSB4,VSB5,VS4,VS6
	2	31610-ZE3-812ZD	BOX ASSY., CONTROL *R280*..............POWER RED	1		QBE1
	3		CASE, CONTROL	0	31612-ZE2-003	ES2,ES3,VMQ3,VSB4,VSB5,VS4,VS6

Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX 390 T1	Base Part No.	Parts catalogue code
		31612-ZE2-003	....	1		QBE1
	4		BRACKET, CASE MOUNTING	0	31614-ZE2-003	ES2,ES3,VMQ3,VSB4,VSB5,VS4,VS6
		31614-ZE2-003	....	1		QBE1
	5		PANEL COMP., CONTROL		31615-ZE3-003ZE	
			R280.............POWER RED	0		ES2,ES3,VMQ3,VSB4,VSB5,VS4,VS6
		31615-ZE3-003ZE	*R280*.............POWER RED	1		QBE1
	6		RECTIFIER ASSY., SILICON		31700-124-008	
			(SHINDENGEN)	0		ES2,ES3,VMQ3,VSB4,VSB5,VS4,VS6
		31700-124-008	....	1		QBE1
	7		SUSPENSION, COUPLER	0	32127-738-700	ES2,ES3,VMQ3,VSB4,VSB5,VS4,VS6
		32127-738-700	....	1		QBE1
	8		HARNESS, SUB WIRE	0	32197-ZE1-003	ES2,ES3,VMQ3,VSB4,VSB5,VS4,VS6
	9		BAND	0	32902-892-003	ES2,ES3,VMQ3,VSB4,VSB5,VS4,VS6
		32902-892-003	....	1		QBE1
	10		ALERT UNIT, OIL	0	34150-ZH7-003	ES2,ES3,VMQ3,VSB4,VSB5,VS4,VS6
		34150-ZH7-013	....	1	34150-ZH7-003	VMT2,VMT3
	11		SWITCH ASSY., COMBINATION	0	35100-ZE2-033	ES2,ES3,VMQ3,VSB4,VSB5,VS4,VS6
		35100-ZE2-033	....	1		QBE1
	12		KEY COMP.	0	35111-880-013	ES2,ES3,VMQ3,VSB4,VSB5,VS4,VS6
		35111-880-013	....	2		QBE1
	13		PROTECTOR, CIRCUIT (1.0A)	0	38240-VA3-900	ES2,ES3,VMQ3,VSB4,VSB5,VS4,VS6
		38240-VA3-900	....	1		QBE1
	14		LENS ASSY., PROTECTOR	0	38250-ZA8-701	ES2,ES3,VMQ3,VSB4,VSB5,VS4,VS6
		38250-ZA8-701	....	1		QBE1
	15		MARK, CONTROL BOX (EXP)	0	87529-ZE2-812	ES2,ES3,VMQ3,VSB4,VSB5,VS4,VS6


BOOKNo.:13Z1C402

Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX 390 T1	Base Part No.	Parts catalogue code
		87529-ZE2-812	....	1		QBE1
	16		BOLT, FLANGE, 6X12(CT200)	0	90013-883-000	ES2,ES3,VMQ3,VSB4,VSB5,VS4,VS6
		90013-883-000	....	2		QBE1
	17		SCREW, SPECIAL, 6X12	0	90380-MA6-010	ES2,ES3,VMQ3,VSB4,VSB5,VS4,VS6
		90380-MA6-010	....	1		QBE1
	18		CLIP, PURSE LOCK	0	90630-751-000	ES2,ES3,VMQ3,VSB4,VSB5,VS4,VS6
		90630-751-000	....	1		QBE1
	19		STRAP, CABLE, 118MM(BLACK) ...	0	90672-SA0-003	ES2,ES3,VMQ3,VSB4,VSB5,VS4,VS6
		90672-SA0-003	....	1		QBE1
	20		TUBE, FASTENER, 30MM	0	91406-ZE2-003	ES2,ES3,VMQ3,VSB4,VSB5,VS4,VS6
		91406-ZE2-003	....	1		QBE1
	21		SCREW, PAN, 3X12	0	93500-03012-0H	ES2,ES3,VMQ3,VSB4,VSB5,VS4,VS6
		93500-03012-0H	....	2		QBE1
	22		SCREW, PAN, 4X12	0	93500-04012-0H	ES2,ES3,VMQ3,VSB4,VSB5,VS4,VS6
		93500-04012-0H	....	1		QBE1
	23		NUT, HEX., 4MM	0	94001-04390-0S	ES2,ES3,VMQ3,VSB4,VSB5,VS4,VS6
		94001-04390-0S	....	1		QBE1
	24		WASHER, PLAIN, 4MM	0	94101-04800	ES2,ES3,VMQ3,VSB4,VSB5,VS4,VS6
	25		WASHER, SPRING, 4MM	0	94111-04800	ES2,ES3,VMQ3,VSB4,VSB5,VS4,VS6
		94111-04800	....	1		QBE1
	26		FUSE, BLADE (5A)	0	98200-30500	ES2,ES3,VMQ3,VSB4,VSB5,VS4,VS6
		98200-30500	....	1		QBE1
E-28	3		MARK, OPERATOR CAUTION	0	87516-Z0S-800	
	5		MARK, CHOKE (ORANGE)	0	87528-ZE2-810	

BOOKNo.:13Z1C402

Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX 390 T1	Base Part No.	Parts catalogue code
	6		MARK, OIL ALERT (ENGLISH)	0	87532-ZH8-810	
	8	87516-Z0T-800	MARK, OPERATOR CAUTION	1		QBE1,QHB1
		87516-Z4H-000	MARK, OPERATOR CAUTION (ENGLISH)(MADE IN THAI)	1		QAPW
		87516-Z4H-810	MARK, OPERATOR CAUTION (PICTOGRAPH)(MADE IN THAI)	(1)		QAPW,QBE1,QHB1
	9	87528-ZH7-000	MARK, CHOKE (GRAY)	1		QAPW,QBE1,QHB1
	10	87532-ZH7-000	MARK, THROTTLE INDICATION	1		QAPW,QBE1,QHB1
	13	87114-ZH7-821	LABEL, WARNING (NOT CERTIFIED FOR SALE)	1	87114-ZH7-000	QAPW
		87114-ZH7-840	....	1	87114-ZH7-000	QBE1,QHB1
	14	87516-Z0S-810	MARK, OPERATOR CAUTION	1		ES2,VMT2
	15		EMBLEM (HONDA GX390)	0	87521-ZF6-W04	ES2,ES3,VSB4,VSB5,VS4,VS6

E-29 TOOL

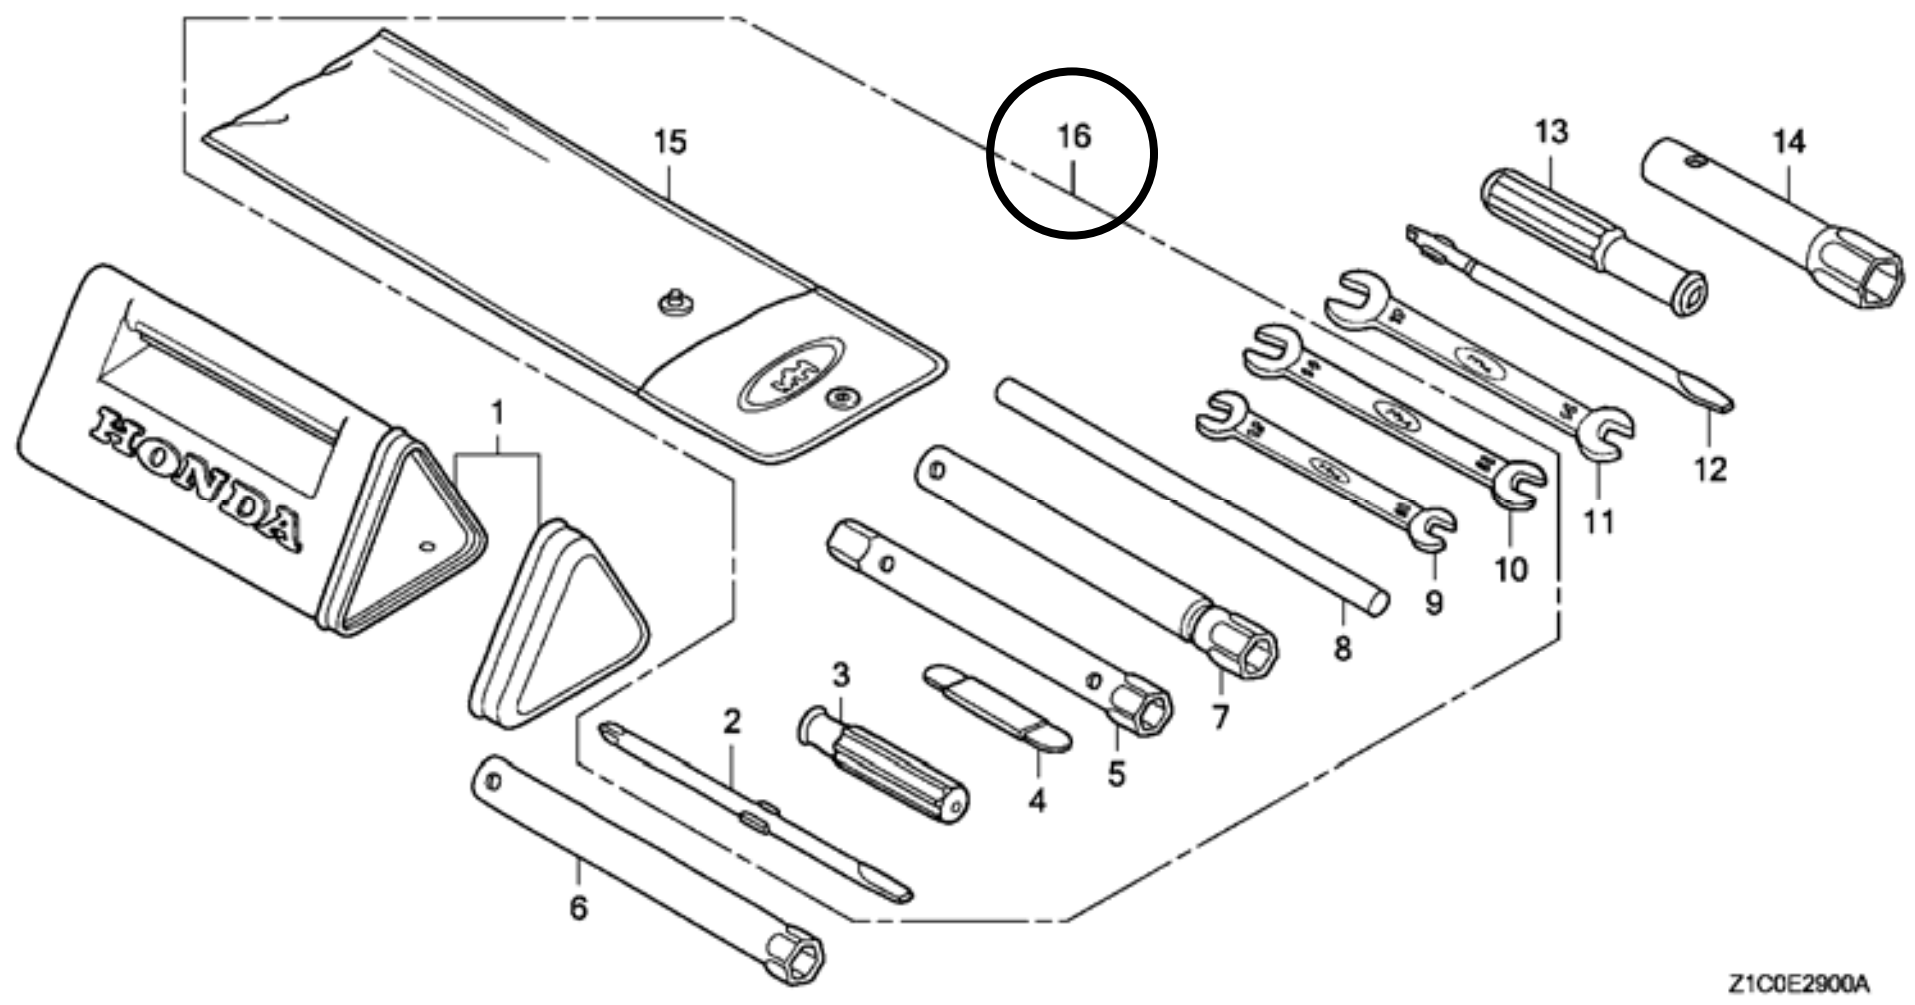


BOOKNo.:13Z1C402

Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX 390 T1	Base Part No.	Parts catalogue code
E-29	1	83501-ZF1-000	BOX, TOOL	1		VSB4,VSB5
	2	89102-538-000	DRIVER, SCREW (NO.2 + -)	1		VSB4,VSB5
	3	89103-538-000	GRIP	1		VSB4,VSB5
	4	89210-ZF1-000	GAUGE ASSY., THICKNESS	1		VSB4,VSB5
	5	89216-ZF1-000	WRENCH, BOX	1		VSB4,VSB5
	6	89216-ZB4-000	WRENCH, PLUG	1		ES2,ES3,VMQ3,VMT2,VMT3,VS4,VS6
		89216-Z0T-800	WRENCH, SPARK PLUG	1		QAPW
	7	89218-ZE1-000	WRENCH COMP., SPARK PLUG	1		VSB4,VSB5
	8	89219-805-000	HANDLE, BOX WRENCH	1		VSB4,VSB5
	9	99001-10120	SPANNER, 10X12	1		VSB4,VSB5
	10	99001-10140	SPANNER, 10X14	1		VSB4,VSB5
	15	99008-02300	BAG, TOOL, 230MM	1		VSB4,VSB5
	16	89001-ZF1-000	BAG SET, TOOL	1		VSB4,VSB5

BOOKNo.:13Z1C402

E-40 OTHER PARTS (1)

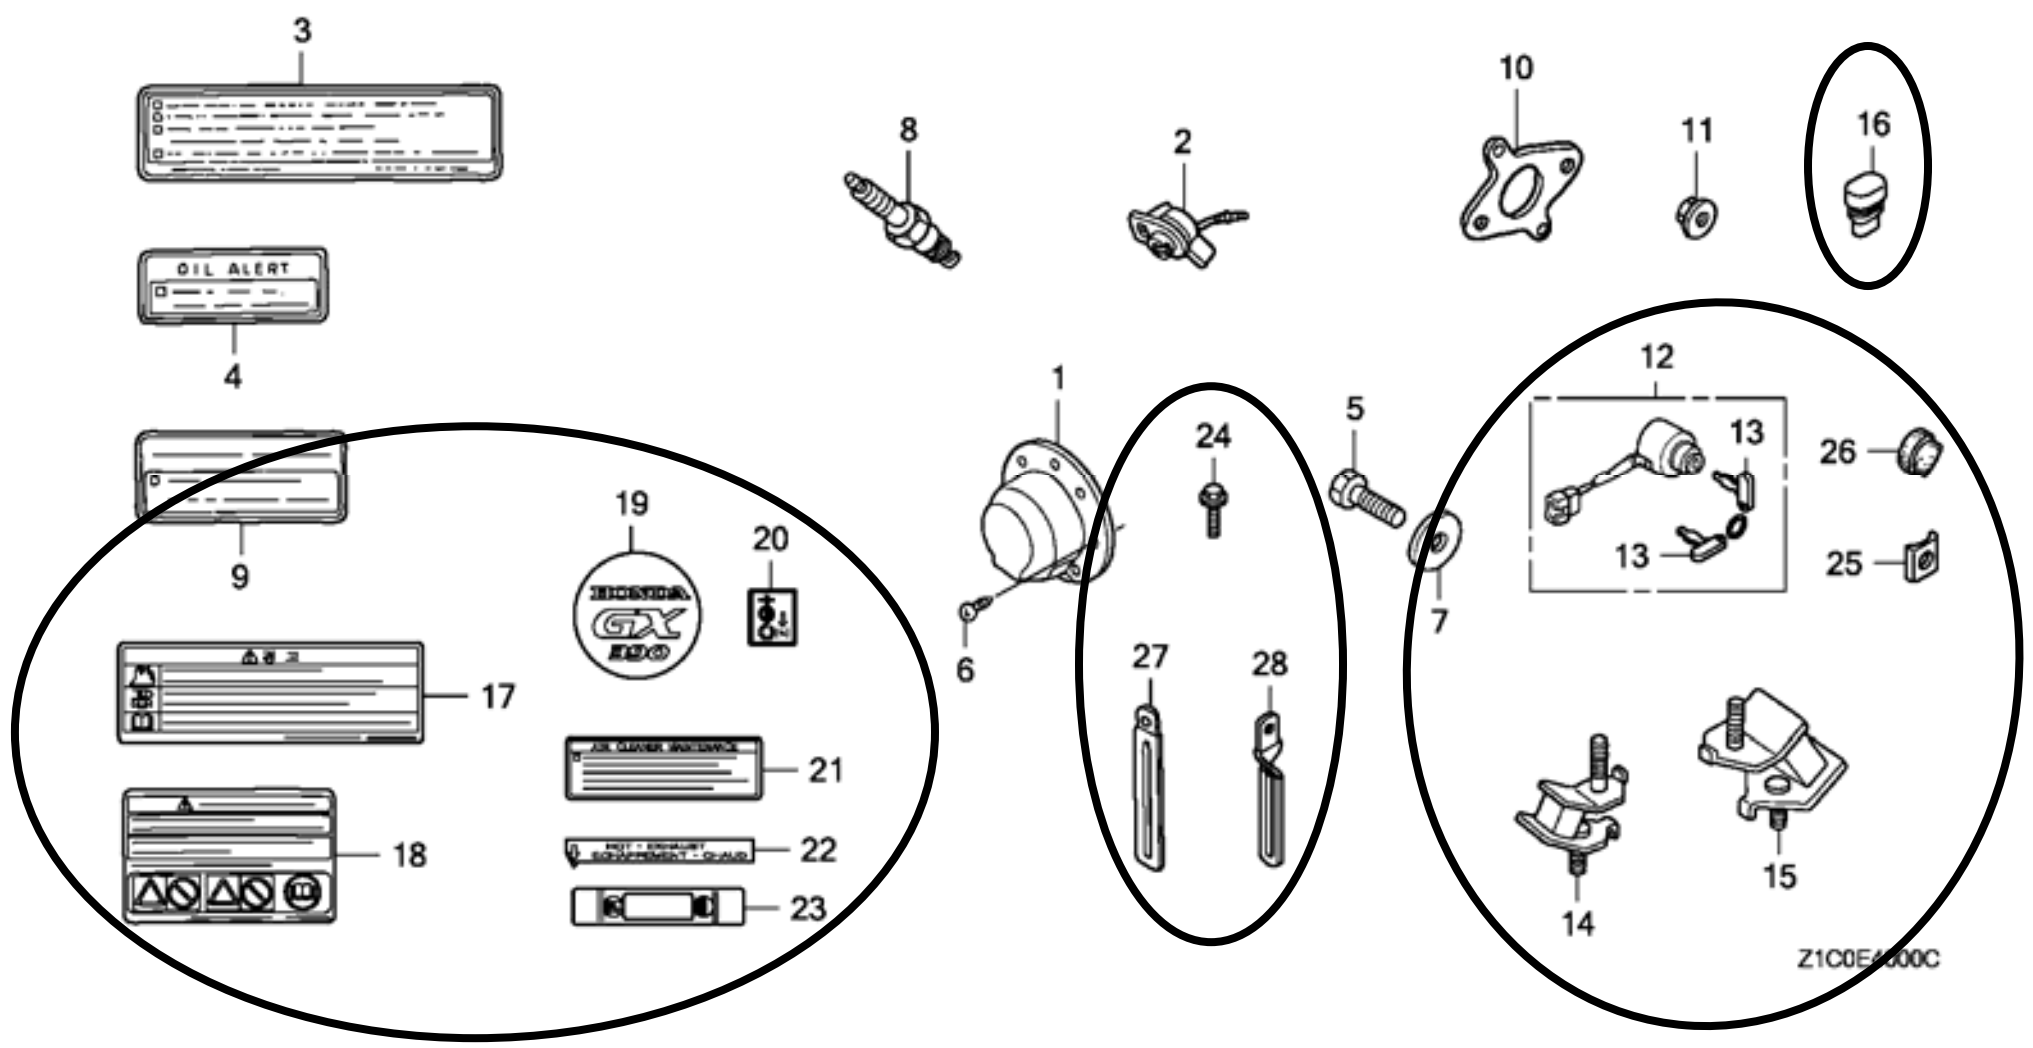


Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX390 T1	Base Part No.	Parts catalogue code
E-40	8	98079-55846	PLUG, SPARK (BPR5ES)(NGK)	1		ES2,ES3,VS4,VS6
	12	35100-ZB4-023	SWITCH ASSY., COMBINATION	1		VSB5,VS6
	13	35111-880-013	KEY COMP.	2		VSB5,VS6
	14	68325-ZC2-000	RUBBER, BOTTOM	2		ES2,ES3,VSB4,VSB5,VS4,VS6
	15	68325-899-000	RUBBER, BOTTOM	2		ES2,ES3,VSB4,VSB5,VS4,VS6
	16	76122-952-000	STOPPER, DISCHARGE GUARD	4		VS4,VS6
	17	87516-Z0S-800	MARK, OPERATOR CAUTION	1		VSB4,VSB5,VS4,VS6
	18	87516-Z4H-800	MARK, OPERATOR CAUTION (FRENCH)(MADE IN THAI)	1		QAPW
	19	87521-ZF6-W04	EMBLEM (HONDA GX390)	1		ES2,ES3,VSB4,VSB5,VS4,VS6
	20	87528-898-620	MARK, CHOKE	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	21	87533-ZC0-630	MARK, AIR CLEANER	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6

Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX390 T1	Base Part No.	Parts catalogue code
	22	87539-898-620	MARK, EX. CAUTION (ENGLISH/FRENCH)	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	23	87565-ZB4-A00	PLATE, FUEL INDICATION	1		VMQ3,VMT2,VMT3
	24	90013-883-000	BOLT, FLANGE, 6X12(CT200)	1		VMT2,VMT3
	25	90501-898-000	WASHER, FRAME JOINT	8		VS6
	26	90855-ZB4-000	GROMMET, CRANKCASE	1		VMQ3,VMT2,VMT3
	27	91406-166-000	CLIP, WIRE	1		VMT2,VMT3
	28	91406-729-000	CLIP, HEAD	1		VSB5

E-40-1 OTHER PARTS (2) (FUEL COCK)

Ref. No.	LON	(Relative ref. Number) Description	FRT
2	3101A3	COCK, FUEL ···················	0.2
3		(4)	
	3101D5	SCREEN, FUEL STRAINER ········	0.2
5	3101A7	FILTER, FUEL TANK CUP ········	0.2
7	6171A1	METER/GAUGE UNIT, FUEL ·······	0.1
10	3101A6	FILTER, FUEL ·················	0.1

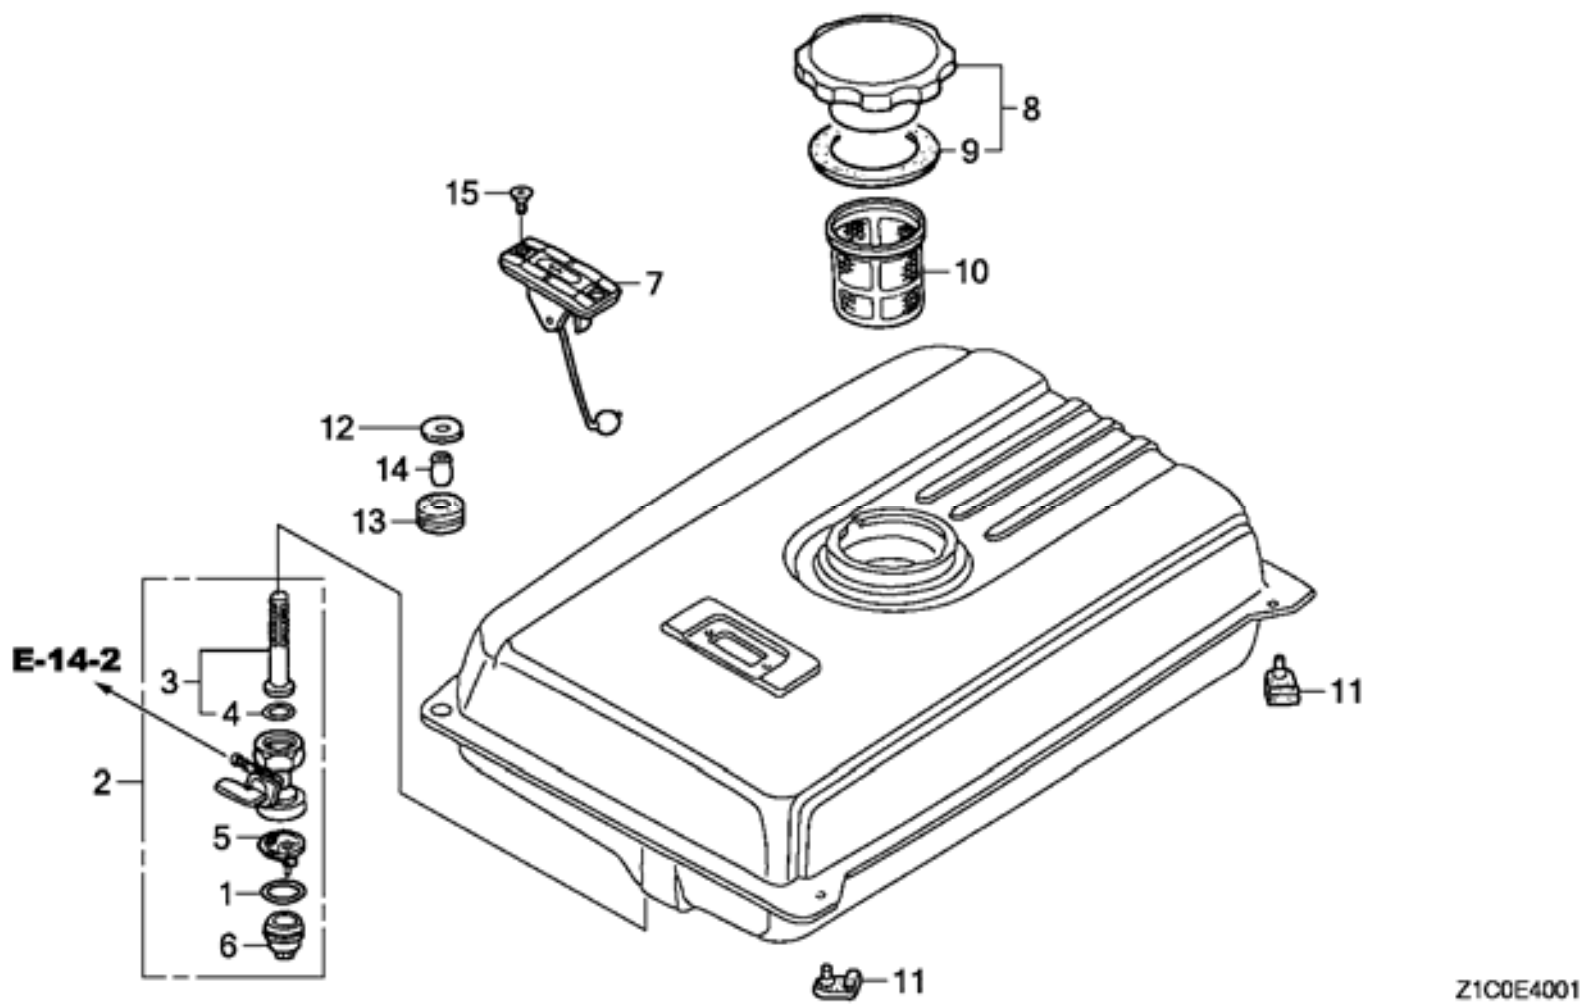

Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX390 T1	Base Part No.	Parts catalogue code
E-40-1	1	16173-001-004	PACKING, FUEL STRAINER CUP ...	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	2	16950-ZB4-015	COCK ASSY., FUEL	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	3	16952-ZB4-005	SCREEN SET, FUEL STRAINER	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	4	16958-397-771	O-RING, 9.0X1.3	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6

BOOKNo.:13Z1C402


Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX 390 T1	Base Part No.	Parts catalogue code
	5	16959-471-831	FILTER, CUP	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	6	16967-GA6-671	CUP, FUEL STRAINER	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	7	17505-ZB2-003	METER ASSY., FUEL	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	8	17620-899-013	CAP COMP., FUEL FILLER	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	9	17631-899-000	PACKING, FUEL FILLER CAP	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	10	17670-899-000	FILTER COMP., FUEL	1		ES2,ES3,VSB4,VSB5,VS4,VS6
		17672-899-000	FILTER, FUEL	1		VMQ3,VMT2,VMT3
	11	50319-ZB2-000	RUBBER, TANK MOUNTING	2		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5
	12	90503-898-000	WASHER, TANK CUSHION	2		ES2,ES3,VSB4,VSB5
				4		VS4,VS6
	13	90851-898-000	RUBBER, TANK CUSHION	2		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5
				4		VS4,VS6
	14	91551-898-000	COLLAR, TANK CUSHION	2		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5
				4		VS4,VS6
	15	93600-05010-0A	SCREW, FLAT, 5X10	2		VMQ3,VMT2,VMT3

BOOKNo.:13Z1C402

Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX 390 T1	Base Part No.	Parts catalogue code

E-40-2 OTHER PARTS (3) (AIR CLEANER)

Ref. No.	LON	(Relative ref. Number) Description	FRT
2	3121B8	ELEMENT, AIR CLEANER ········· .INCLUDES: Air cleaner element -inspection	0.1
3	3121F0	SEPARATOR, AIR CLEANER ·······	0.1
4	3121A5	CASE, AIR CLEANER ············	0.2
9	3121E8	SEAL, AIR CLEANER CASE ·······	0.1

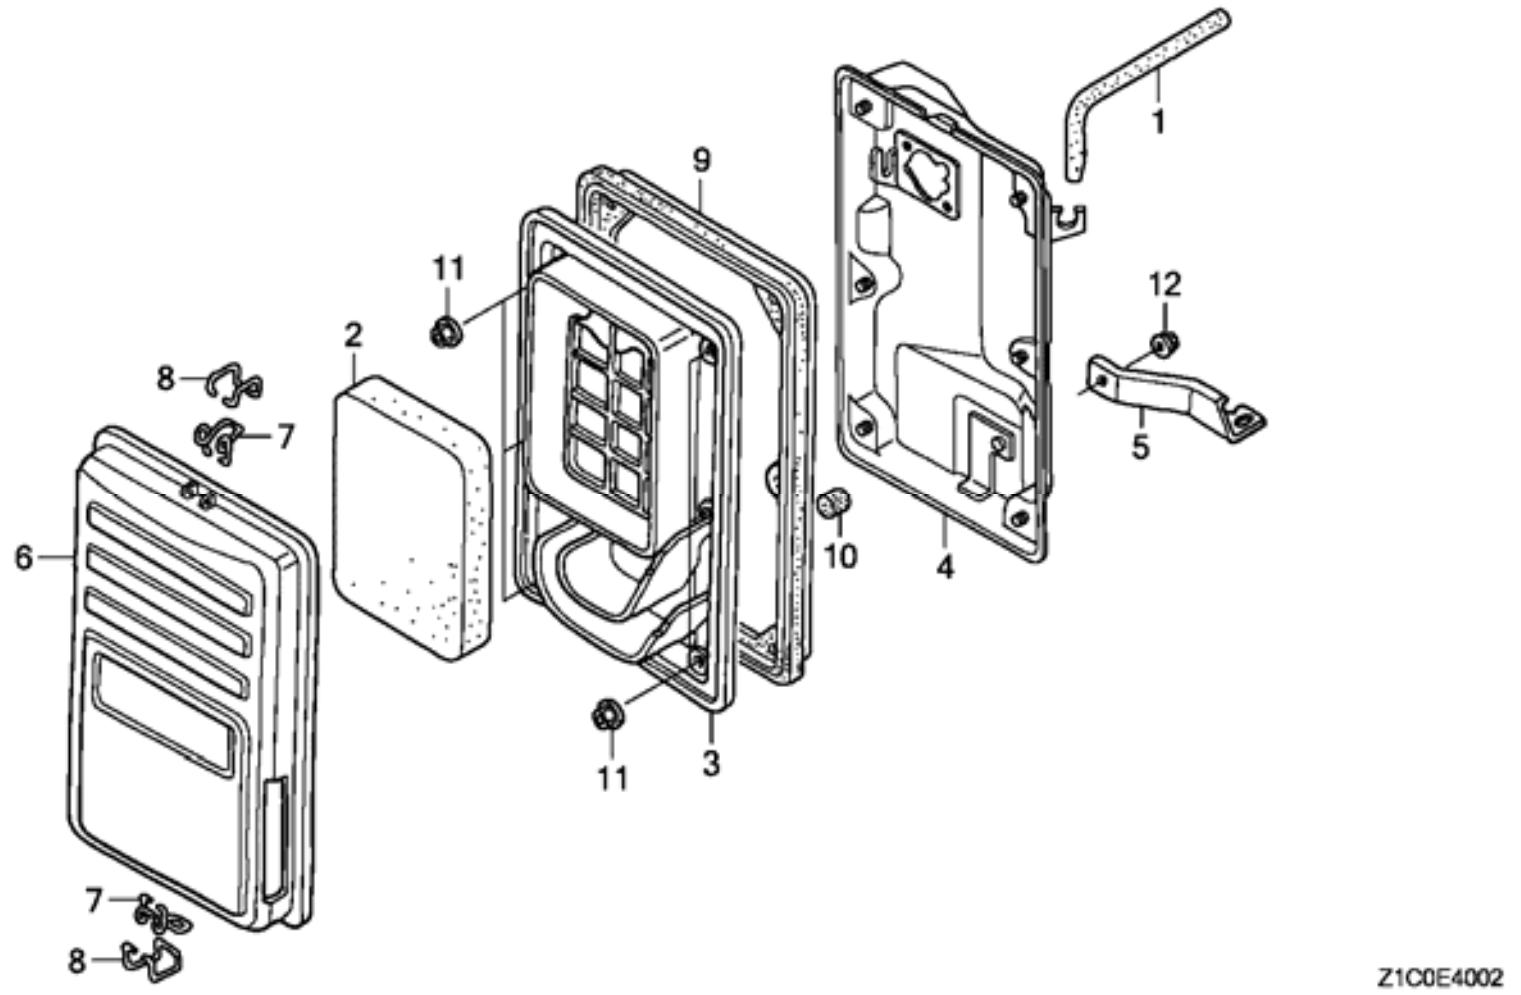


Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX 390 T1	Base Part No.	Parts catalogue code
E-40-2	1	15721-ZB4-000	TUBE, BREATHER	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	2	17211-899-000	ELEMENT, AIR CLEANER	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	3	17212-ZB4-003	SEPARATOR, AIR CLEANER	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	4	17220-ZB4-003	CASE COMP., AIR CLEANER	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	5	17222-ZC2-000	STAY, AIR CLEANER	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	6	17231-899-000	COVER COMP., AIR CLEANER	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	7	17235-899-000	CLIP A, AIR CLEANER WIRE	2		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	8	17236-899-000	CLIP B, AIR CLEANER WIRE	2		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	9	17252-899-000	SEAL, AIR CLEANER	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	10	17367-413-690	FILTER, DRAIN TUBE	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	11	94050-05000	NUT, FLANGE, 5MM	6		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	12	94050-06000	NUT, FLANGE, 6MM	1		VMQ3,VMT2,VMT3

Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX 390 T1	Base Part No.	Parts catalogue code

E-40-3 OTHER PARTS (4) (MUFFLER)


Ref. No.	LON	(Relative ref. Number) Description	FRT
1		(2)	
	3131C5	MUFFLER, EXHAUST ·············	0.2
3	3131D9	PROTECTOR, EXHAUST MUFFLER :OUTER ······················	0.1
4	3131D8	PROTECTOR, EXHAUST MUFFLER :INNER ······················	0.2
6	3131B5	GASKET, EXHAUST PIPE ·········	0.2

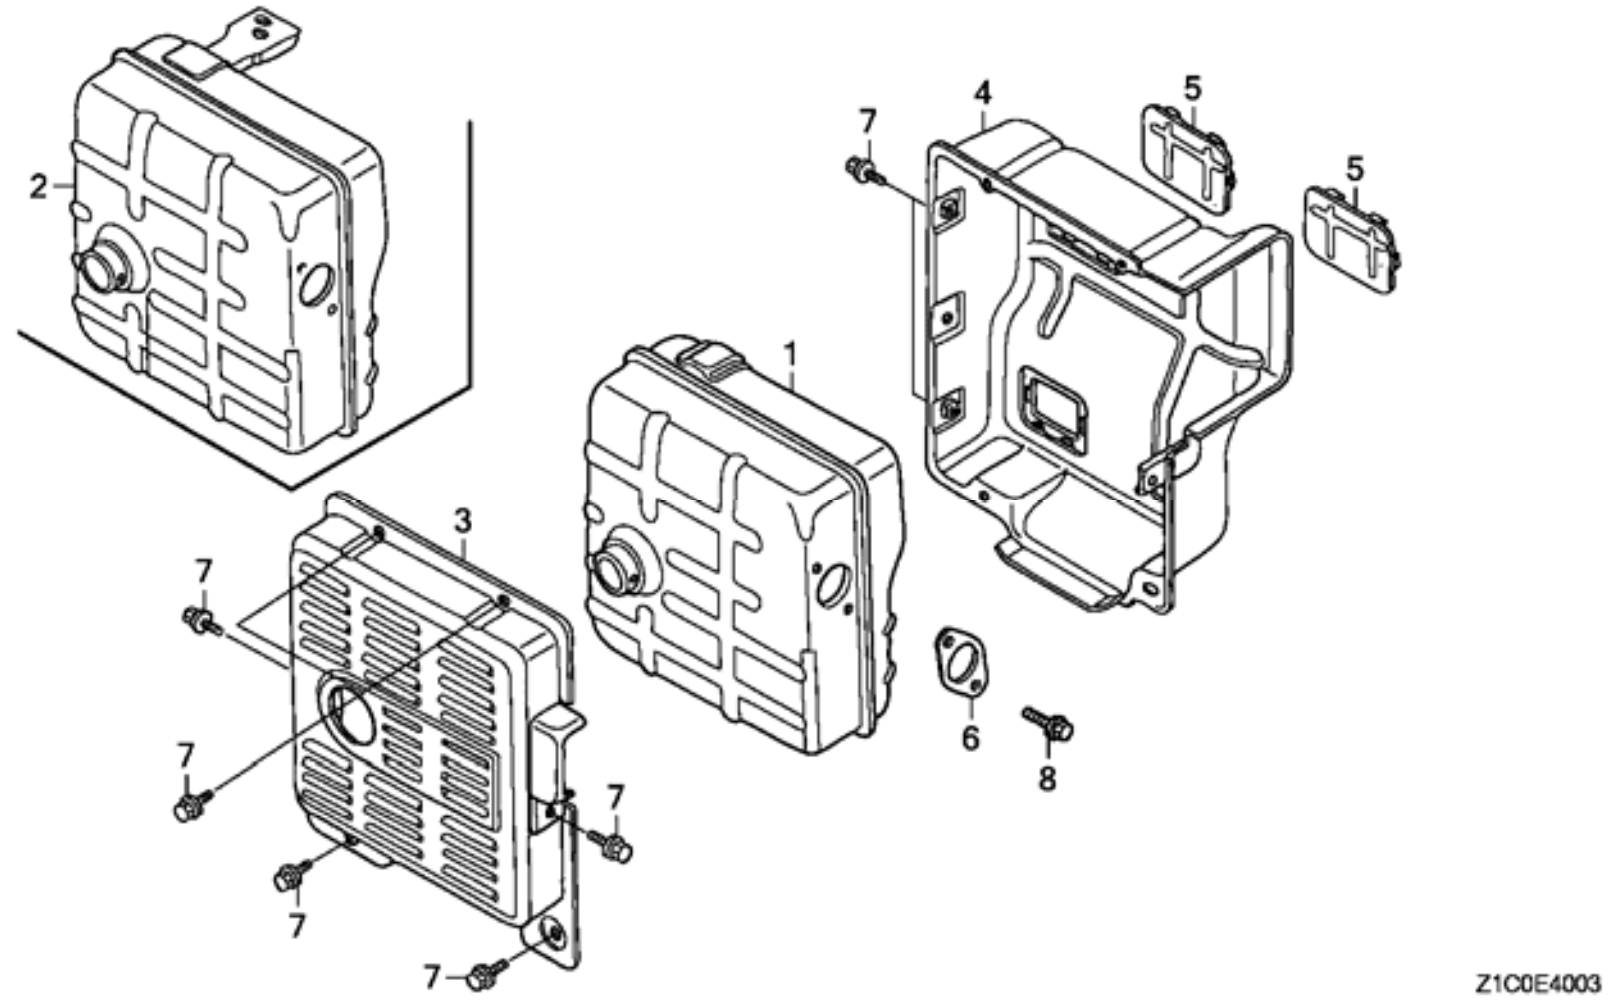

Block No.	Ref. No.	Part No.	Description	Reqd.QTY	Base Part No.	Parts catalogue code
E-40-3	1	18310-ZE2-V61	MUFFLER COMP. (TSURUMI)	1		VS4,VS6
	2	18310-Z1C-840	MUFFLER COMP.	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5
	3	18320-ZC2-000	PROTECTOR, MUFFLER OUTER	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	4	18325-ZB4-000	PROTECTOR, MUFFLER INNER	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	5	18329-ZB4-000	SEAL, MUFFLER PROTECTOR	2		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	6	18333-ZB4-800	GASKET, EX. PIPE	1		ES2,ES3,VMQ3,VMT2,VMT3,VSB4,VSB5,VS4,VS6
	7	95701-06010-00	BOLT, FLANGE, 6X10	8		VMQ3,VMT2,VMT3
	8	95701-08020-00	BOLT, FLANGE, 8X20	2		VMQ3,VMT2,VMT3

Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX 390 T1	Base Part No.	Parts catalogue code

E-40-4 OTHER PARTS (5) (BATTERY TRAY)

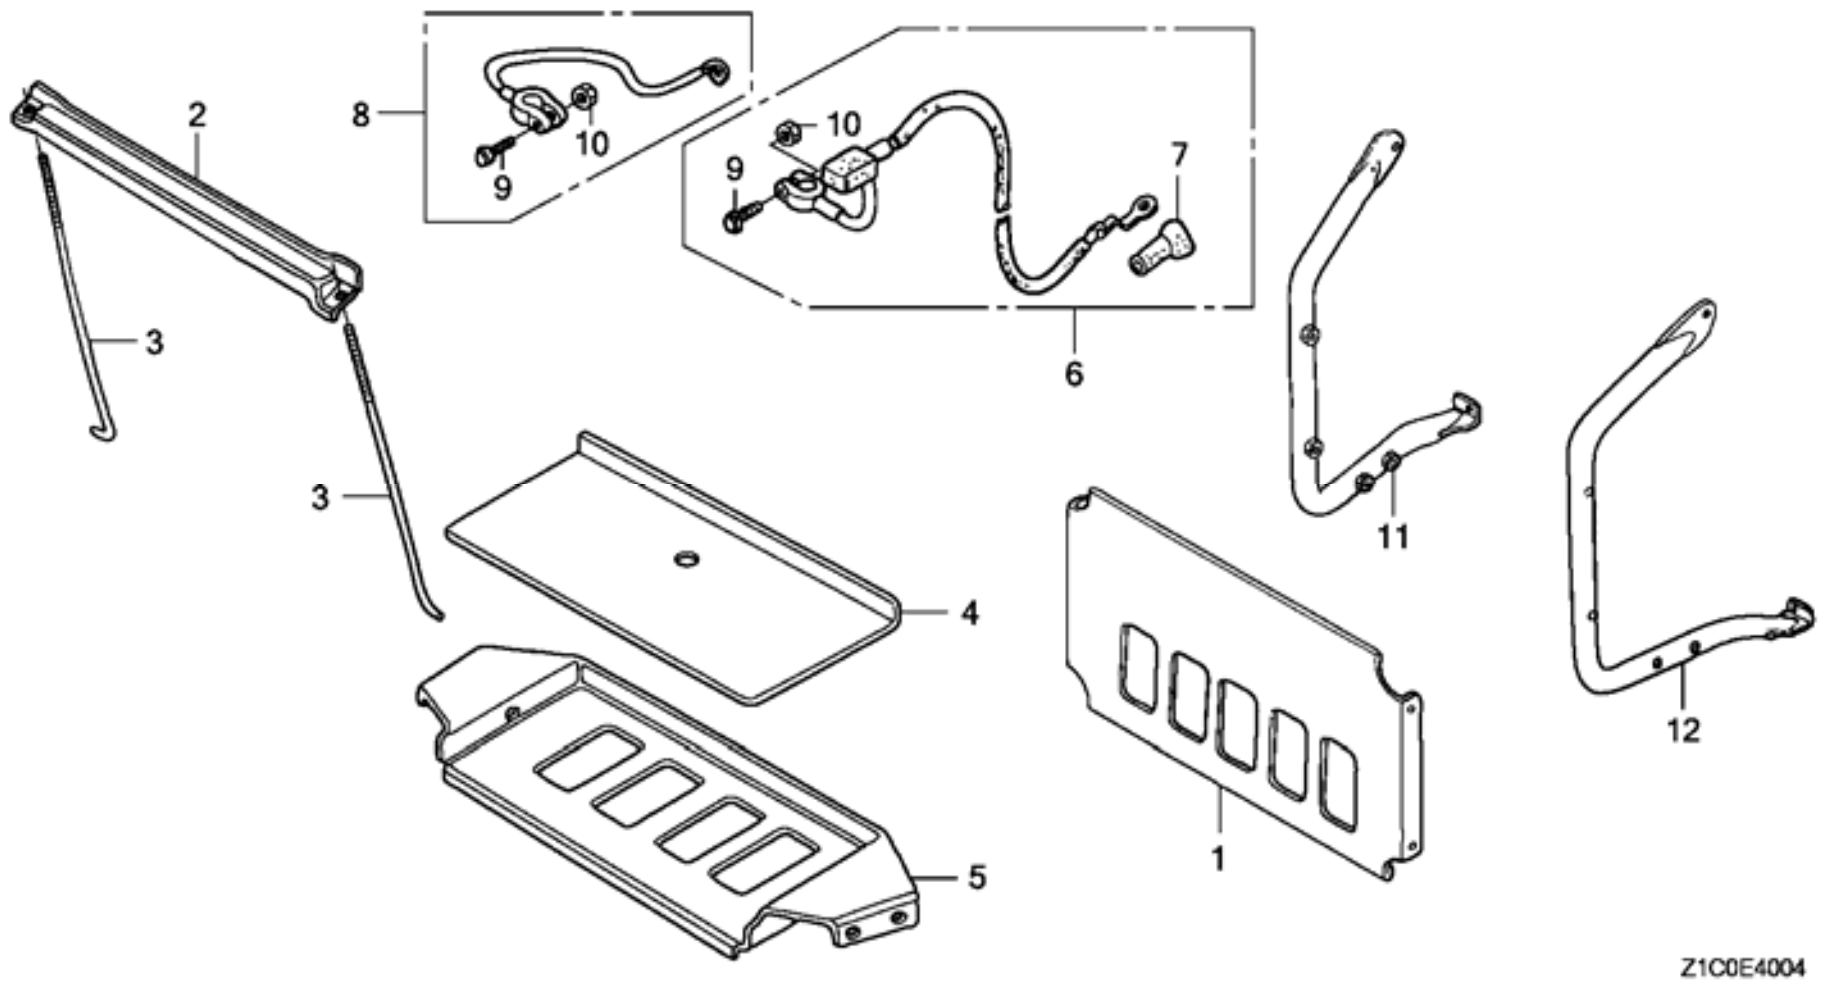

Block No.	Ref. No.	Part No.	Description	Reqd.QTY	Base Part No.	Parts catalogue code
E-40-4	1	31511-ZB4-000	PLATE, BATTERY GUARD	1		VSB5,VS6
	2	31512-880-810	PLATE, BATTERY SETTING	1		VSB5,VS6
	3	31513-634-000	BOLT, BATTERY SETTING, 220MM .	2		VSB5,VS6
	4	31521-880-000	PLATE, BATTERY	1		VSB5,VS6
	5	31550-899-000	BASE, BATTERY TRAY	1		VSB5,VS6
	6	32410-ZB4-620	CABLE ASSY., STARTING	1		VSB5,VS6
	7	32411-253-000	COVER, STARTER MOTOR TERMINAL	1		VSB5,VS6
	8	32430-ZB4-620	CABLE ASSY., EARTH	1		VSB5,VS6
	9	32601-SK7-900	BOLT, BATTERY TERMINAL	2		VSB5,VS6
	10	32602-SK7-900	NUT, BATTERY TERMINAL	2		VSB5,VS6
	11	50365-ZD1-E30ZA	GUARD, FR. BATTERY *NH105*...MAT BLACK (#15-#20)	1		VSB5

BOOKNo.:13Z1C402

Block No.	Ref. No.	Part No.	Description	Reqd. QTY GX 390 T1	Base Part No.	Parts catalogue code
	12	50375-ZD1-E30ZA	GUARD, RR. BATTERY *NH105*...MAT BLACK (#15-#20)	1		VSB5

March 02, 2009

HONDA POWER PRODUCTS

PARTS CATALOGUE NEWS

Honda Motor Co., Ltd. Service Division

Printed in Japan

CODE NO.	13Z1C402
PARTS CATALOGUE NEWS	GX390T1
NEWS NO.	003

(THAILAND-KD)

GX390T1-QTN type sales information

NOTE: This Parts Catalogue News explains only the parts of the different model that are produced to conform to addition of the GX390T1-QTN type.
As for the parts not listed on this Parts Catalogue News, use the parts of the GX390T1-QT type.

・Models, parts catalogue codes and applicable serial numbers

Model	Type		Parts catalogue type	Applicable engine serial No.	Applicable carburetor identification No.
GX390T1	QT	Base type	QT	GCAET-1000001~	BE85N A
	QTN	Additional type	QTN		

・Features of each type

Specifications		Base type	Additional type
Model		GX390T1	
Type		QT	QTN
Crankshaft	30mmØ Spline		
	25.4mmØ Spline		
	25.4mmØ Straight	●	●
	25mmØ Straight		
	5/16" Tapered		
	M10 Tapered		
Air cleaner	Silent		
	Oil bath	●	●
	Boat		
	Standard		
	Generator		
Muffler		●	●
Muffler cover			
Spark arrester			
Fuel tank		●	●
Oil alert			
Starter motor			
Control box			
Reduction			

PARTS CATALOGUE NEWS

BOOKNo.:13Z1C402

Block No.	Ref. No.	Part No.	Description	Reqd.QTY GX 390 T1	Base Part No.	Parts catalogue code
E-8	2	13101-Z5T-000	PISTON (STD.)	1	13101-ZF6-811	
		13102-Z5T-000	PISTON (0.25)	(1)	13102-ZF6-811	
		13103-Z5T-000	PISTON (0.50)	(1)	13103-ZF6-811	
		13104-Z5T-000	PISTON (0.75)	(1)	13104-ZF6-811	
E-9	11	14771-Z8S-000	RETAINER, IN. VALVE SPRING ...	1	14771-ZE2-000	
	12	14773-Z8S-000	RETAINER, EX. VALVE SPRING ...	1	14773-ZE2-000	
	15	14791-Z1D-000	GUIDE, PUSH ROD	1	14791-ZE2-010	
E-19	7	90201-ZE3-790	NUT, SPECIAL, 16MM	1	90201-ZE3-V00	
E-20	2		TERMINAL ASSY., HIGH TENSION (NICHIWA Y-EZ)	0	30600-ZE1-013	
E-28	1		LABEL, E-SPEC (15.5X27.5)	0	87135-ZE2-020	
	13	87114-ZH7-000	LABEL, WARNING (NOT CERTIFIED FOR SALE)	1		
E-29	1		BOX, TOOL	0	83501-ZF1-000	
	2		DRIVER, SCREW (NO.2 + -)	0	89102-538-000	
	3		GRIP	0	89103-538-000	
	4		GAUGE ASSY., THICKNESS	0	89210-ZF1-000	
	5		WRENCH, BOX	0	89216-ZF1-000	
	10		SPANNER, 10X14	0	99001-10140	

April 19,2009

HONDA POWER PRODUCTS

PARTS CATALOGUE NEWS

Honda Motor Co., Ltd. Service Division

PARTS CATALOGUE - CORRECTED

Printed in Japan

CODE NO.	13Z1C402
PARTS CATALOGUE NEWS	GX390T1
NEWS NO.	004

(THAILAND-KD)

Block No.	Ref. No.	Note	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.		Parts catalogue code
E-20	7	T	31630-ZE1-003	COIL ASSY., CHARGE (1A)	1	-------	-------	LXE8,PXE8,QXE8,SXE8,VXE8
		T	31630-ZE1-013	....	1	-------	-------	LXE9,QBE1,QXE,QXEK,SHE,SWE,SWE2,SXE,VMT2,VMT3,VSB5,VS6 VTE5,VXE,VXK,VXU1

NOTE A:PART NO.CHANGE D:NEWLY PROVIDED E:PART NO.DELETION K:REQUIRED NO.CORRECTION L:APPLICATION SERIAL NO.CORRECTION
T:APPLICATION CORRECTION Z:REMARKS CHANGE

May 17, 2009

PARTS CATALOGUE NEWS

Honda Motor Co., Ltd. Service Division

PARTS CATALOGUE - CORRECTED


Printed in Japan

CODE NO.	13Z1C402
PARTS CATALOGUE NEWS	GX390T1
NEWS NO.	005

(THAILAND-KD)

Block No.	Ref. No.	Note	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.	Parts catalogue code
E-17	4	E	17620-Z0T-820	*PARTS NO. DELETION			
	13	D	17620-Z0T-820	CAP COMP., FUEL FILLER (CHROME PLATED)	1	------- -------	LBHB, QBH, QBHS, QBLS, QBS

E-28 LABEL (1)

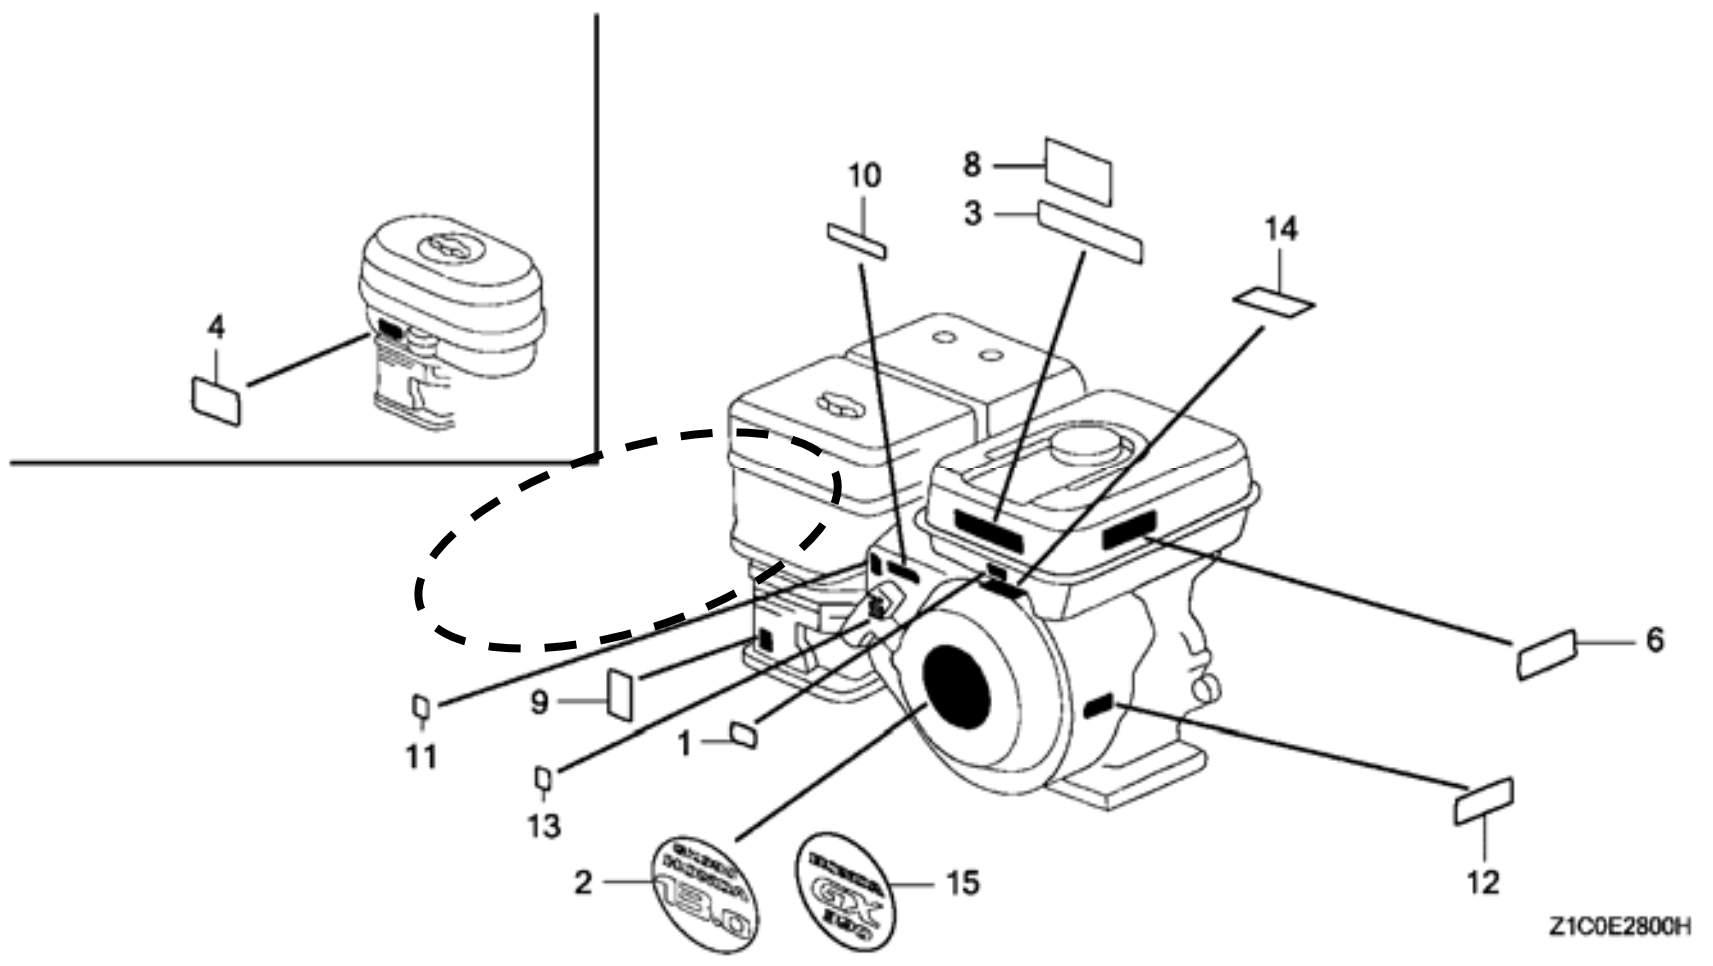

NOTE A:PART NO. CHANGE D:NEWLY PROVIDED E:PART NO. DELETION K:REQUIRED NO. CORRECTION L:APPLICATION SERIAL NO. CORRECTION
T:APPLICATION CORRECTION Z:REMARKS CHANGE

BOOKNo.:13Z1C402

Block No.	Ref. No.	Note	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.	Parts catalogue code
E-28	5	E	87528-ZE2-810	*PARTS NO. DELETION			
		E	87528-Z0T-800	*PARTS NO. DELETION			
		E	87528-ZH7-000	*PARTS NO. DELETION			
	9	T	87528-ZE2-810	MARK, CHOKE (ORANGE)	1	------- -------	LH, LHB5, LHP1, LH2, LXE8, LXU, PX, PXE8, PXU, QAA2, QAA6, QA2, QA26 QH, QHB3, QHB5, QHP1, QMH, QN, QP, QX, QXE, QXEK, QXE8, QXK, QXU, SH SHE, SN, SWE, SWE2, SWX, SWX2, SX, SXC, SXE, SXE8, VTE5, VX, VXE, VXE8 VXK, VXU1, VX8
		T	87528-ZH7-000	MARK, CHOKE (GRAY)	1	------- -------	LXE9, QAPW, QBE1, QHB1, VSP
		D	87528-Z0T-800	MARK, CHOKE (THAI)	1	------- -------	LT, QT, QTD, QTN

NOTE A:PART NO.CHANGE D:NEWLY PROVIDED E:PART NO.DELETION K:REQUIRED NO.CORRECTION L:APPLICATION SERIAL NO.CORRECTION
T:APPLICATION CORRECTION Z:REMARKS CHANGE

May 24, 2009

HONDA POWER PRODUCTS

PARTS CATALOGUE NEWS

Honda Motor Co., Ltd. Service Division

PARTS CATALOGUE - CORRECTED

Printed in Japan

CODE NO.	13Z1C402
PARTS CATALOGUE NEWS	GX390T1
NEWS NO.	006

(THAILAND-KD)

Block No.	Ref. No.	Note	Part No.	Description	Reqd. QTY GX 390 T1	Serial No.	Parts catalogue code
E-11	10	D	28462-Z1C-801	ROPE, RECOIL STARTER	1	------- -------	LBHB, QBH, QBHS, QBLS, QBS
E-29	1	T	83501-ZF1-000	BOX, TOOL	1	------- -------	LT, QHB3, QN, QT, QTD, SWX, SWX2, VSB4, VSB5
	2	T	89102-538-000	DRIVER, SCREW (NO.2 + -)	1	------- -------	LT, QHB3, QN, QT, QTD, SWX, SWX2, VSB4, VSB5
	3	T	89103-538-000	GRIP	1	------- -------	LT, QHB3, QN, QT, QTD, SWX, SWX2, VSB4, VSB5
	4	T	89210-ZF1-000	GAUGE ASSY., THICKNESS	1	------- -------	LT, QHB3, QN, QT, QTD, SWX, SWX2, VSB4, VSB5
	5	T	89216-ZF1-000	WRENCH, BOX	1	------- -------	LT, QHB3, QN, QT, QTD, SWX, SWX2, VSB4, VSB5
	10	T	99001-10140	SPANNER, 10X14	1	------- -------	LT, QHB3, QN, QT, QTD, SWX, SWX2, VSB4, VSB5

NOTE A:PART NO.CHANGE D:NEWLY PROVIDED E:PART NO.DELETION K:REQUIRED NO.CORRECTION L:APPLICATION SERIAL NO.CORRECTION
T:APPLICATION CORRECTION Z:REMARKS CHANGE